

Warranty Message

The product you have purchased comes with a **limited warranty** from Mercury Marine, the terms of the warranty are set forth in the *MerCruiser Diesel Limited Warranty and Warranty Coverage* Sections of this manual. The warranty statement contains a description of what is covered, what is not covered, the duration of coverage, how to best obtain warranty coverage, **important disclaimers and limitations of damages**, and other related information. Please review this important information.

CE344

WARNING

The operator (driver) is responsible for the correct and safe operation of the boat, the equipment aboard and the safety of all occupants aboard. We strongly recommend that the operator read this Operation, Maintenance and Warranty Manual and thoroughly understand the operational instructions for the power package and all related accessories before the boat is used.

WARNING

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

The description and specifications contained herein were in effect at the time this guide was approved for printing. Mercury Marine, whose policy is one of continuous improvement, reserves the right to discontinue models at any time, or to change specifications or designs, without notice and without incurring obligation. **Mercury Marine** Fond du Lac, Wisconsin, U.S.A.

©1999, Mercury Marine

The following are registered trademarks of Brunswick Corporation:
Autoblend, Jet-Prop, Mariner, Merc, MerCathode, MerCruiser,
Mercury, Mercury Marine, Quicksilver, Ride-Guide, and Thruster.

Printed in U.S.A.

WELCOME!

You have selected one of the finest marine power packages available. It incorporates numerous design features to assure operating ease and durability.

With proper care and maintenance, you will thoroughly enjoy using this product for many boating seasons. To ensure maximum performance and carefree use, we ask that you thoroughly read this manual.

The Operation, Maintenance and Warranty Manual contains specific instructions for using and maintaining your product. We suggest that this manual remain with the product for ready reference whenever you are on the water.

Thank you for purchasing one of our MerCruiser products. We sincerely hope your boating will be pleasant!

CONSUMER AFFAIRS DEPARTMENT

Identification Record

Please record the following information:

1.	Engine Model and Horsepower	Engine Serial Number	
2.	Transom Assembly Serial Number (Sterndrive)	Gear Ratio	Sterndrive Unit Serial Number
3.	Transmission Model (Inboard)	Gear Ratio	Transmission Serial Number
4.	Propeller Number	Pitch	Diameter
5.	Hull Identification Number (HIN)	Purchase Date	
6.	Boat Manufacturer	Boat Model	Length
7.	Exhaust Gas Emissions Certificate Number (Europe Only)		

Serial Numbers

The serial numbers are the manufacturer's keys to numerous engineering details which apply to your MerCruiser® power package. When contacting your Authorized MerCruiser Dealer about service, **always specify model and serial numbers.**

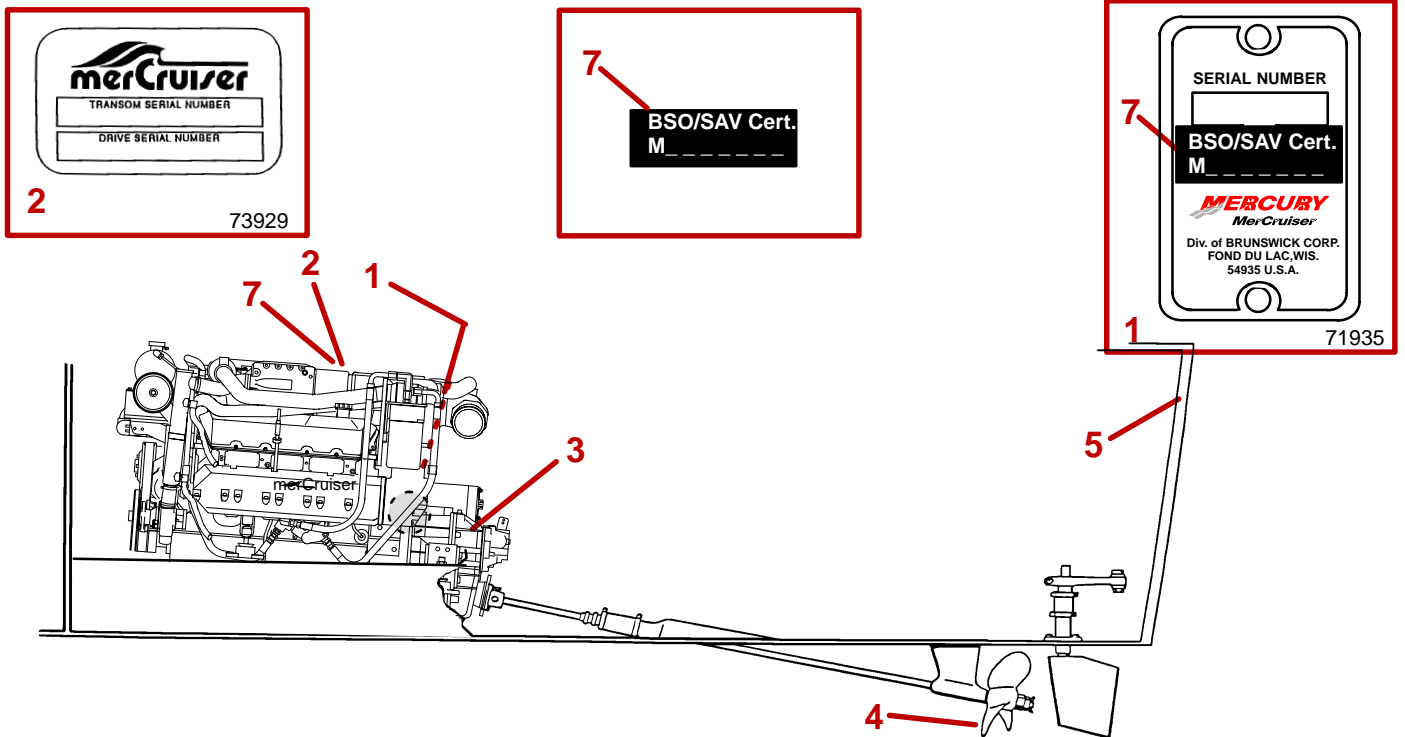


TABLE OF CONTENTS

	Page
Warranty Message	1
WELCOME!	2
Identification Record	3
Warranty Information	4
Owner Warranty Registration	6
International Owner Registration	7
Mercury MerCruiser Diesel Limited Warranty	8
Warranty Coverage and Exclusion	10
Transferable Warranty	11
Read This Manual Thoroughly	11
General Information	12
Lanyard Stop Switch	14
Exhaust Emissions	17
Wave And Wake Jumping	18
Impact With Underwater Hazards	19
Safe Boating Suggestions	20
Protecting People In The Water	21
High-Speed And High-Performance Boat Operation	21
Conditions Affecting Operation	20
Weight Distribution	22
Bottom Of Boat	22
Propeller Selection	23
How Elevation And Climate Affect Performance	24
Important Information	23
Operation and Maintenance	25
Freezing Temperature And Cold Weather Operation	27
Drain Plug and Bilge Pump	27
Attention Required After Submersion	27
Launching and Boat Operation Care	28
Stolen Power Package	28
Replacement Service Parts	28
Do-It-Yourself Maintenance Suggestions	29
Diagnosing EDI Problems	29
Multiple EDI Engine Battery Precautions	30
Engine Break-In	31
After Break-In Period	32
End of First Season Checkup	32
Operation	33
Quicksilver Instruments and Instrumentation	35
Engine System Monitor	36
Electrical System Overload Protection	37
Remote Controls (Panel Mounted)	39
Remote Controls (Console Mounted)	41
Starting, Shifting and Stopping	42
Operation Chart	44

Specifications	43
Seacock	45
Seawater Strainer	45
Anti-Freeze/Coolant	45
Fuel Requirements	46
Diesel Fuel In Cold Weather	47
Crankcase Oil	47
Oil Viscosity Recommendations	47
Engine Specifications	48
Fluid Capacities	49
Maintenance	48
General Information	52
Maintenance Aids	52
Maintenance Schedules	53
Checking Fluids Levels	57
Changing Fluids	61
Drive Belts	65
Air Filter - Cleaning and Replacement	67
Lubrication	67
Seawater Pump Impeller	67
Fuel System	69
Cleaning Quicksilver Seawater Strainer	73
Flushing Seawater Cooling System	75
Corrosion And Corrosion Protection	75
Miscellaneous Maintenance	77
Cold Weather or Extended Storage	74
Power Package Layup	79
Draining Instructions	81
Power Package Recommissioning	85
Troubleshooting	82
Owner Service Assistance	86
Starter Motor Will Not Crank Engine, Or Cranks It Very Slowly	86
Local Repair Service	90
Service Away From Home	90
Parts And Accessories Inquiries	90
Resolving A Problem	90
Mercury Marine Service Offices	91
Owner's Logbook	91

Warranty Information

Owner Warranty Registration

UNITED STATES AND CANADA ONLY

- It is important that your selling dealer fills out the Warranty Registration Card completely and mails it to the factory immediately upon sale of the new product.
- It identifies name and address of the original purchaser, product model and serial number(s), date of sale, type of use and selling dealer's code, name and address. The dealer also certifies that you are the original purchaser and user of the product.
- Upon receipt of the Warranty Registration Card at the factory, you will be issued a plastic Owner Warranty Registration Card which is your only valid registration identification. It must be presented to the servicing dealer should warranty service be required. Warranty claims will not be accepted without presentation of this card.
- A temporary Owner Warranty Registration Card will be presented to you when you purchase the product. It is valid only for 30 days from date of sale while your plastic Owner Warranty Registration Card is being processed. Should your product need service during this period, present the temporary registration card to the dealer. He will attach it to your warranty claim form.
- Because of your selling dealer's continuing personal interest in your satisfaction, the product should be returned to him for warranty service.
- If your plastic card is not received within 30 days from date of new product sale, please contact your selling dealer.
- The product warranty is not effective until the product is registered at the factory.
- NOTICE: Registration lists must be maintained by factory and dealer on marine products sold in the United States, should notification under the Federal Boat Safety Act be required.

International Owner Registration

OUTSIDE THE UNITED STATES AND CANADA

- It is important that your selling dealer fills out the Warranty Registration Card completely and mails it to the distributor or Marine Power Service Center responsible for administering the warranty registration/claim program for your area.
- The Warranty Registration Card identifies your name and address, product model and serial number(s), date of sale, type of use and the selling distributors/dealer's code number, name and address. The distributor/dealer also certifies that you are the original purchaser and user of the product.
- A copy of the Warranty Registration Card, designated as the "Purchaser's Copy", MUST be given to you immediately after the card has been completely filled out by the selling distributor/dealer. This card represents your factory registration identification, and should be retained by you for future use when required. Should you ever require warranty service on this product, your dealer may ask you for the Warranty Registration Card to verify date of purchase and to use the information on the card to prepare the warranty claim form(s).
- In some countries, the Marine Power Service Center will issue you a permanent (plastic) Warranty Registration Card within 30 days after receiving the "Factory Copy" of the Warranty Registration Card from your distributor/dealer. If you receive a plastic Warranty Registration Card, you may discard the "Purchaser's Copy" that you received from the distributor/dealer when you purchased the product. Ask your distributor/dealer if this plastic card program applies to you.
- For further information concerning the Warranty Registration Card and its relationship to Warranty Claim processing, refer to the "International Warranty." Refer to "Table of Contents."

IMPORTANT: Registration lists must be maintained by the factory and dealer in some countries by law. It is our desire to have ALL products registered at the factory should it ever be necessary to contact you. Make sure your dealer/distributor fills out the warranty registration card immediately and sends the factory copy to the Marine Power International Service Center for your area.

Mercury MerCruiser Diesel Limited Warranty

- I. We warrant each new production MerCruiser Diesel Sterndrive Power Package, Inboard Engine and Accessories attached thereto (hereafter referred to as "Product"), manufactured by MerCruiser (hereafter referred to as the "Company"), and sold to the consumer in a country to which distribution is authorized by the Company, to be free from defects in material and workmanship.
- II. This warranty shall become effective upon the date of sale to the first purchaser or user of the Product. The warranty period for D7.3L D-Tronic engines, which are engines designed exclusively for Pleasure Craft applications, is one (1) year from date of sale to the first purchaser or user of the product. The warranty period for D7.3L D-Tronic LD engines, which are engines designed for Light-Duty Craft applications, is one (1) year from date of sale to the first purchaser or user of the product, or the accumulation of 500 hours of engine operation, whichever occurs first. For purposes of this warranty Pleasure Craft is defined as a recreational planing craft used exclusively for pleasure and recreation. Light-Duty Craft is defined as a planing hull vessel used in law enforcement, commercial, or professional entertainment activity, or in an enterprise or venture in which revenue (in any amount) is generated directly or indirectly. Light-Duty Craft is further defined as having an annual operating time not to exceed 500 hours, Wide-Open-Throttle operation is limited to less than 10% of operating time, and continuous cruising rpm is limited to at or less than 90% of Wide-Open-Throttle rpm. If the applicable law prohibits limitation of warranty coverage to one (1) year, then the warranty shall be the minimum period required by law. The unused period of the applicable warranty, if any, is transferable to subsequent purchasers.
- III. To validate the warranty, the "Warranty Registration Card", included with each Product, must be properly completed by the selling dealer and forwarded immediately after the sale to Mercury Marine (U.S.A. and Canada) or to a Marine Power International Branch, or Distributor Service Office (outside the U.S.A. and Canada).
- IV. Purchaser must provide proof of purchase and substantiate the original date of sale by presenting to the dealer, authorized to service the Product, the original purchaser's copy of the "Warranty Registration Card" or the "Owner Warranty Registration Card". If either of these items is not available, purchaser must provide a copy of the original purchaser's "Bill of Sale" (Sales Contract) for the Product to be serviced. Warranty claims will not be accepted by the dealer until the original date of sale and Product serial number can be verified.
- V. Since this warranty applies to defects in material or workmanship, it does not apply to normal wear, adjustments, tune-ups or to damage caused by: 1) Neglect, lack of maintenance, accident, abnormal operation, improper installation or service; 2) Use of a propeller not properly suited to application/boat load or, failure to follow instructions in applicable service and warranty information manuals or operation and maintenance manual; 3) Use of an accessory or part not manufactured or sold by us; 4) Operation with fuels, oils, lubricants or coolants/coolant additives which are not suitable for use with the Product or recommended by us; 5) Participating in or preparing for racing or other competitive activity or operating with racing type lower unit; 6) Alteration or removal of parts; 7) Water entering engine cylinder/s through the exhaust system or air intake system; 8) Use of product in a full-displacement or semi-displacement hull vessel; or 9) Use or operation of the product in a manner inconsistent with the "Recommended Operation/Duty Cycle" section of the Operation, Maintenance and Warranty Manual.

MerCruiser Diesel Limited Warranty (continued on following page)

- VI. Reasonable access must be provided to the Product for warranty service. This warranty will not apply to: 1) Haul-out, launch, towing and storage charges, telephone or rental charges of any type, inconvenience, or loss of time or income, or other consequential damages; or 2) Removal and/or replacement of boat partitions or material because of boat design for necessary access to the Product.
- VII. Claim shall be made under this warranty by delivering the Product for inspection to a MerCruiser dealer authorized to service the Product. If purchaser cannot deliver Product to such authorized dealer, he may give notice in writing to the Company (U.S.A. and Canada) or the nearest Marine Power International Branch or Distributor Service Office (outside the U.S.A. and Canada). We shall then arrange for the inspection and repair, provided such service is covered under this warranty. Purchaser shall pay for all related transportation charges and/or travel time. If the service is not covered by this warranty, purchaser shall pay for all related labor and material, and any other expenses associated with that service. Any Product or parts shipped by purchaser for inspection or repair must be shipped with transportation charges prepaid.
- VIII. Our sole and exclusive obligation under this warranty shall be limited to repairing a defective part or, at our option, refunding the purchase price or replacing such part or parts with new or Mercury certified remanufactured parts as shall be necessary to remedy any malfunction resulting from defects in material or workmanship as covered by this warranty. The repair or replacement of parts, or the performance of service, under this warranty, does not extend the period of this warranty beyond its original expiration date. We reserve the right to improve the design of any Product without assuming any obligation to modify any Product previously manufactured.

IX. ALL INCIDENTAL AND/OR CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM THIS WARRANTY. WARRANTIES OF MERCHANTABILITY AND FITNESS ARE EXCLUDED FROM THIS WARRANTY. IMPLIED WARRANTIES ARE LIMITED TO THE LIFE OF THIS WARRANTY. SOME STATES OR COUNTRIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY TO YOU.

- X. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state and country to country.

Warranty Coverage and Exclusion

The purpose of this section is to help eliminate some of the more common misunderstandings regarding warranty coverage. The table explains some of the types of services that are not covered by warranty.

Keep in mind that warranty covers repairs that are needed within the warranty period because of defects in material and workmanship. Installation errors, accidents normal wear and a variety of other causes that affect the product are not covered.

Warranty is limited to defects in material or workmanship, but only when the consumer sale is made in the country to which distribution is authorized by us.

Should you have any questions concerning warranty coverage contact your authorized dealer. They will be pleased to answer any questions that you may have.

WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Minor adjustments or checks, including checking fuel injection pump timing, cleaning fuel injectors, filters, or adjusting belts, controls, and checking lubrication made in connection with normal services.
- Damage caused by neglect, lack of maintenance, accident, abnormal operation, improper installation or service, or freezing temperatures.
- Haul-out, launch, towing charges; removal and/or replacement of boat partitions or material because of boat design for necessary access to the product; all related transportation charges and/or travel time, etc. Reasonable access must be provided to the product for warranty service. Customer must deliver product to an Authorized Dealer.
- Additional service work requested by customer other than that necessary to satisfy the warranty obligation.
- Labor performed by other than an Authorized Dealer may be covered only under following circumstances: When performed on emergency basis (providing there are no Authorized Dealers in area who can perform the work required or have no facilities to haul out, etc., and prior factory approval has been given to have the work performed at this facility).
- All incidental and/or consequential damages (storage charges, telephone or rental charges of any type, inconvenience or loss of time or income) are the owner's responsibility.
- Use of other than Quicksilver replacement parts when making warranty repairs.
- Oils, lubricants or fluids changed as a matter of normal maintenance is customer's responsibility unless loss or contamination of same is caused by product failure that would be eligible for warranty consideration.
- Participating in or preparing for racing or other competitive activity.
- Engine noise does not necessarily indicate a serious engine problem. If diagnosis indicates a serious internal engine condition which could result in a failure, condition responsible for noise should be corrected under the warranty.
- Lower unit and/or propeller damage caused by striking a submerged object is considered a marine hazard.
- Water entering the engine via the air filter or exhaust system or submersion. Also, water in the starter motor.
- Starter motors and/or armatures or field coil assembly, which are burned, or where lead is thrown out of commutator because of excess cranking.
- Valve or valve seat grinding required because wear.
- Failure of any parts caused by lack of cooling water, which results from starting power package out of water, foreign material blocking inlets or power package being mounted too high.
- Use of fuels and lubricants which are not suitable for use with or on the product. Refer to your Operation and Maintenance Manual.
- Our limited warranty does not apply to any damage to our products caused by the installation or use of parts and accessories which are not manufactured or sold by us. Failures which are not related to the use of those parts or accessories, are covered under warranty, if they otherwise meet the terms of the limited warranty for that product.

Transferable Warranty

The product warranty is transferable to a subsequent purchaser, but only for the remainder of the unused portion of the limited warranty. This will not apply to products used for commercial applications.

DIRECT SALE BY OWNER

- The second owner can be registered as the new owner and retain the unused portion of the limited warranty by sending the former owner's plastic Owner Warranty Registration Card and a copy of the bill of sale to show proof of ownership. In the United States and Canada, mail to:

**Attn: Warranty Registration Department
Mercury Marine
W6250 West Pioneer Road
P.O. Box 1939
Fond du Lac, WI 54936-1939**

- A new Owner Warranty Registration Card will be issued with the new owner's name and address. Registration records will be changed on the factory computer registration file.
- There is no charge for this service.


Outside the United States and Canada, please contact a Mercury Marine or Marine Power service office, or distributor, for the transferable warranty procedure that would apply to you.

THIS PAGE IS INTENTIONALLY BLANK

Read This Manual Thoroughly

IF YOU DON'T UNDERSTAND ANY PORTION, CONTACT YOUR DEALER FOR A DEMONSTRATION OF ACTUAL STARTING AND OPERATING PROCEDURES.

NOTICE

Throughout this publication, and on your power package, **WARNINGS** and **CAUTIONS**, accompanied by the International Hazard Symbol , may be used to alert the installer/user to special instructions concerning a particular service or operation that may be hazardous if performed incorrectly or carelessly. **Observe them carefully.**

These "Safety Alerts" alone cannot eliminate the hazards that they signal. Strict compliance to these special instructions when performing the service, plus "common sense" operation, are major accident prevention measures.

WARNING

WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death.

CAUTION

CAUTION - Hazards or unsafe practices which could result in minor personal injury or product or property damage.

IMPORTANT: Indicates information or instructions that are necessary for proper operation and / or maintenance.

WARNING

The operator (driver) is responsible for the correct and safe operation of the boat, the equipment aboard and the safety of all occupants aboard. We strongly recommend that the operator read this Operation, Maintenance and Warranty Manual and thoroughly understand the operational instructions for the power package and all related accessories before the boat is used.


We strongly recommend that other occupants be instructed on proper starting and operation procedures so they will be prepared should they be required to operate the power package and boat in an emergency.

WARNING

The use of accessories not manufactured or sold by Mercury Marine is not recommended for use with your MerCruiser unit. If your MerCruiser unit is equipped with an accessory not manufactured by Mercury Marine, be sure to read the operation and maintenance manual for the accessory before operation. If you haven't been supplied with such a manual, contact your dealer or the manufacturer of the accessory to secure the applicable manual.

GENERAL INFORMATION

Lanyard Stop Switch

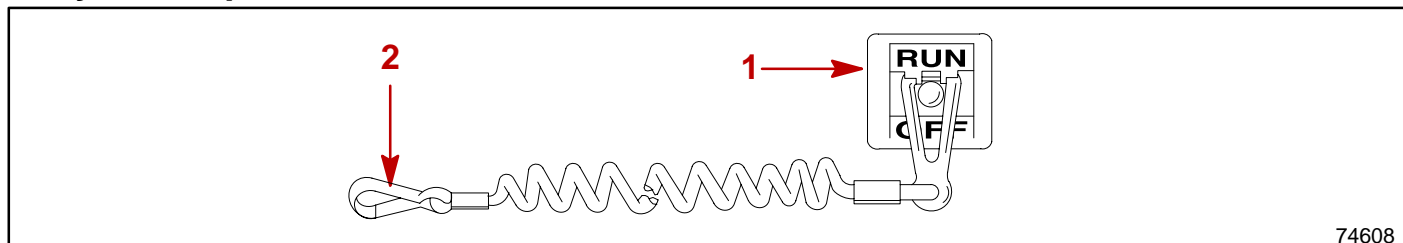

74608

The purpose of a lanyard stop switch (1) is to turn off the engine when the operator moves far enough away from the operator's position (as in accidental ejection from the operator's position) to activate the switch. Some remote control units are equipped with a lanyard stop switch. A lanyard stop switch can be installed on the dashboard or side adjacent to the operator's position.

The lanyard is a cord usually between 4 and 5 feet (1220 and 1524 mm) in length when stretched out with an element on one end made to be inserted into the switch and a snap (2) on the other end for attaching to the operator. The lanyard is coiled to make its at-rest condition as short as possible so as to minimize the likelihood of lanyard entanglement with nearby objects. It is made as long as it is in its stretched condition to minimize the likelihood of accidental activation should the operator choose to move around in an area close to the normal operator's position. If it is desired to have a shorter lanyard, wrap the lanyard around the operator's wrist or leg, or tie a knot in the lanyard.

IMPORTANT: The purpose of a lanyard stop switch is to stop the engine when the operator moves far enough away from the operator's position to activate the switch. This would occur if the operator accidentally falls overboard or moves within the boat a sufficient distance from the operator's position. Accidental ejections and falls overboard are more likely to occur in certain types of boats such as low sided sport boats or bass boats, and high-performance boats. Accidental ejections and falls overboard are also likely to occur as a result of poor operating practices such as sitting on the back of the seat or gunwale at planing speeds, standing at planing speeds, sitting on elevated fishing boat decks, operating at planing speeds in shallow or obstacle-infested waters, releasing your grip on a steering wheel that is pulling in one direction, drinking alcohol or consuming drugs, or daring, high-speed boat maneuvers.

Lanyard Stop Switch (Continued)

While activation of the lanyard stop switch will stop the engine immediately, a boat will continue to coast for some distance depending upon the velocity and degree of any turn at shut-down. However, the boat will not complete a full circle. While the boat is coasting, it can cause injury to anyone in the boat's path as seriously as the boat would when under power.

We strongly recommend that other occupants be instructed on proper starting and operating procedures should they be required to operate the engine in an emergency (e.g. if the operator is accidentally ejected).

WARNING

Should the operator fall out of the boat, the possibility of serious injury or death from being run over by the boat can be greatly reduced by stopping the engine immediately. Always properly connect both ends of the stop switch lanyard to the stop switch and the operator.


Accidental or unintended activation of the switch during normal operation is also a possibility. This could cause any, or all, of the following potentially hazardous situations:

- 1 Occupants could be thrown forward due to unexpected loss of forward motion – a particular concern for passengers in the front of the boat who could be ejected over the bow and possibly struck by the gear case or propeller.
- 2 Loss of power and directional control in heavy seas, strong current or high winds.
- 3 Loss of control when docking.

WARNING

Avoid serious injury or death from deceleration forces resulting from accidental or unintended stop switch activation. The boat operator should never leave the operator's station without first disconnecting the stop switch lanyard from the operator.


CA641

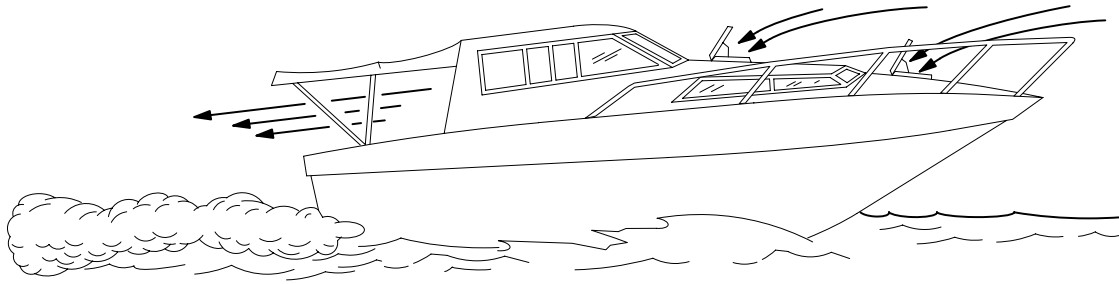


1

Courtesy of ABYC


CA642

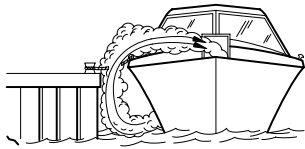

2A

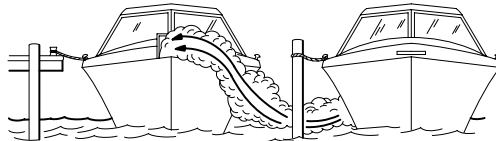

2B

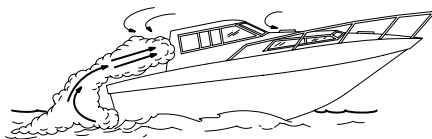

3A



3B

Courtesy of ABYC

Exhaust Emissions

BE ALERT TO CARBON MONOXIDE POISONING

Carbon monoxide is present in the exhaust fumes of all internal combustion engines including the outboards, sterndrives and inboard engines that propel boats, as well as the generators that power various boat accessories. Carbon monoxide is a deadly gas that is odorless, colorless and tasteless.

Early symptoms of carbon monoxide poisoning, which should not be confused with seasickness or intoxication, include headache, dizziness, drowsiness, and nausea.

WARNING

Avoid the combination of a running engine and poor ventilation. Prolonged exposure to carbon monoxide in sufficient concentration can lead to unconsciousness, brain damage or death.

GOOD VENTILATION

Ventilate passenger area, open side curtains, or forward hatches to remove fumes.

1 Example of desired air flow through the boat.

POOR VENTILATION

Under certain running and/or wind conditions, permanently enclosed or canvas enclosed cabins or cockpits with insufficient ventilation may draw in carbon monoxide. Install one or more carbon monoxide detectors in your boat.

Although the occurrence is rare, on a very calm day, swimmers and passengers in an unclosed area of a stationary boat that contains or is near a running engine may be exposed to a hazardous level of carbon monoxide.


2 Examples of poor ventilation while boat is stationary:

- A** Running the engine when the boat is moored in a confined space.
- B** Mooring close to another boat that has its engine running.

3 Examples of poor ventilation while boat is moving:

- A** Running the boat with the trim angle of the bow too high.
- B** Running the boat with no forward hatches open (station wagon effect).

Wave And Wake Jumping

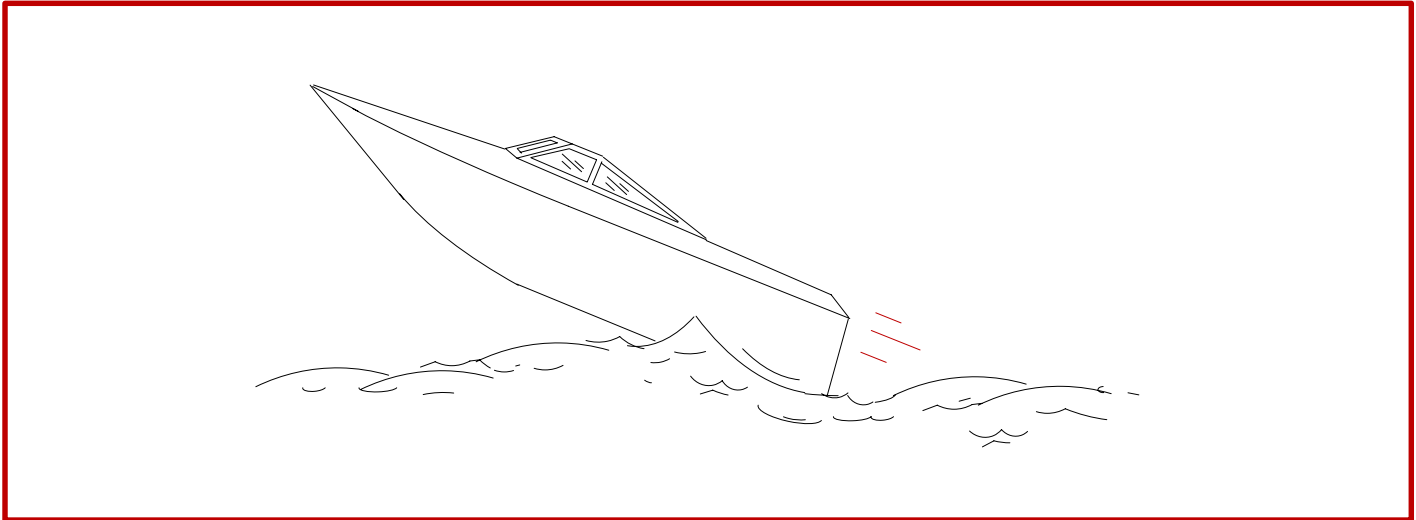

Operating recreational boats over waves and wakes is a natural part of boating. However, when this activity is done with speed to force the boat hull partially or completely out of the water, certain hazards arise, particularly when the boat re-enters the water.


The primary concern is the boat changing direction while in the midst of the jump. In such case the landing may cause the boat to violently veer in a new direction. Such a sharp change in direction or turn can cause occupants to be thrown out of their seats or out of the boat.

There is another less common hazardous result from allowing your boat to launch off a wave or wake. If the bow of your boat pitches down far enough while airborne, upon water contact it may penetrate under the water surface and “submarine” for an instant. This will bring the boat nearly to a stop in an instant and can send the occupants flying forward. The boat may also steer sharply to one side.

WARNING

Avoid serious injury or death from being thrown within or out of a boat when it lands after jumping a wave or wake. Avoid wave or wake jumping whenever possible. Instruct all occupants that if a wake or wave jump occurs, get low and hang on to any boat hand hold.

Impact With Underwater Hazards

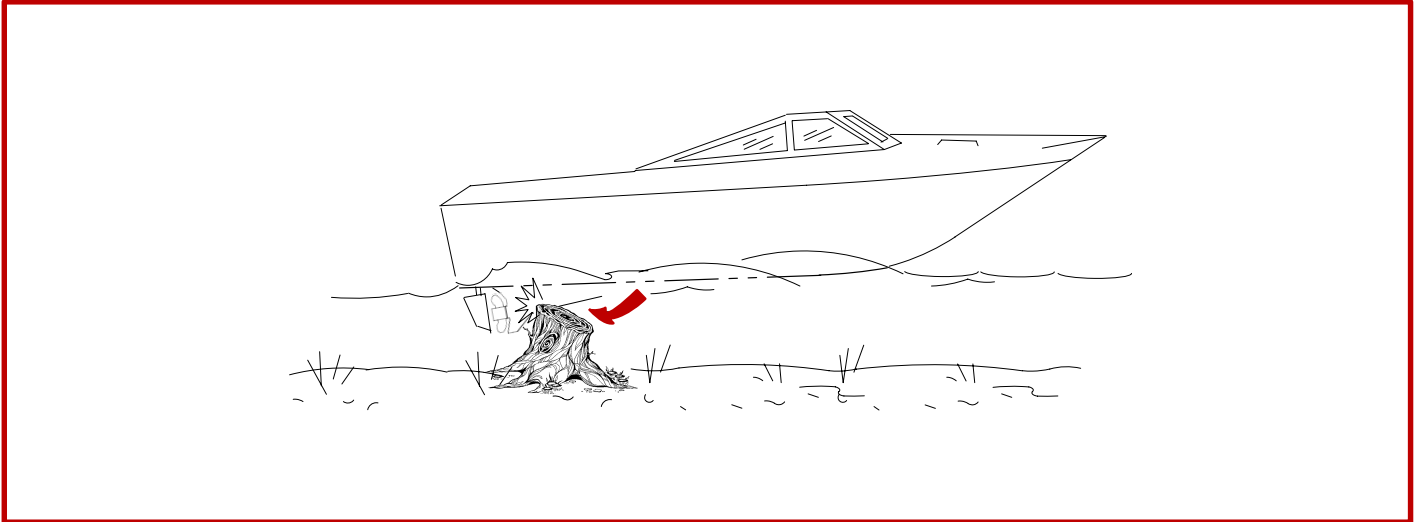

Reduce speed and proceed with caution whenever you're driving a boat in shallow water areas or in areas where the waters are suspected of having underwater obstacles that could be struck by the underwater drive components, rudder or the boat bottom. **The most important thing you can do to help reduce injury or impact damage from striking a floating or underwater object is control the boat speed. Under these conditions, boat speed should be kept to a minimum planing speed of 15 to 25 MPH (24 to 40 km/h).**

Striking a floating/underwater object may result in an infinite number of situations. Some of these situations could result in the following:

- The boat could move suddenly in a new direction. Such a sharp change in direction or turn can cause occupants to be thrown out of their seats or out of the boat.
- A rapid reduction in speed. This will cause occupants to be thrown forward, even out of the boat.
- Impact damage to the underwater drive components, rudder and/or boat.

Keep in mind, one of the most important things you can do to help reduce injury or impact damage in these situations is control the boat speed. Boat speed should be kept to a minimum planing speed when driving in waters known to have underwater obstacles.

After striking a submerged object, stop engine as soon as possible and inspect the drive system for any broken or loose parts. If damage is present or suspected, the power package should be taken to an authorized dealer for a thorough inspection and necessary repair.

The boat should also be checked for any hull fractures, transom fractures, water leaks.

Operating with damaged underwater drive components, rudder or boat bottom could cause additional damage to other parts of the power package, or could affect control of the boat. If continued running is necessary, do so at greatly reduced speeds.

⚠ WARNING

Avoid serious injury or death from loss of boat control. Continued boating with major impact damage can result in sudden component failure with or without subsequent impacts. Have the power package thoroughly inspected and any necessary repairs made.

Safe Boating Suggestions

In order to safely enjoy the waterways, familiarize yourself with local and other governmental boating regulations and restrictions, and consider the following suggestions.

- **Know and obey all nautical rules and laws of the waterways.** Boat operators should complete a boating safety course. Courses are offered in the U.S.A. by (1) The U.S. Coast Guard Auxiliary, (2) The Power Squadron, (3) The Red Cross and (4) your state or provincial boating law enforcement agency. Inquiries may be made to the Boating Hotline, 1-800-368-5647 or the Boat U.S. Foundation information number 1-800-336-BOAT.

We strongly recommend that all powerboat operators attend one of these courses.

You should also review the NMMA Sources of Waterway Information booklet. It lists regional sources of safety, cruising and local navigation and is available at no charge by writing to:

Sources of Waterway Information
National Marine Manufacturers Association
410 N. Michigan Avenue
Chicago, IL 60611 U.S.A.

- **Perform safety checks and required maintenance.** Follow a regular schedule and ensure that all repairs are properly made.
- **Check safety equipment on board.** Here are suggestions of the types of safety equipment to carry when boating:
 - (1) Approved fire extinguisher(s); paddle or oar.
 - (2) Signal devices: flashlight, rockets or flares, flag and whistle or horn.
 - (3) Spare propeller, thrust hubs and an appropriate wrench.
 - (4) Tools for necessary minor repairs; first aid kit and book.
 - (5) Anchor and extra anchor line; water-proof storage containers.
 - (6) Manual bilge pump and extra drain plugs; compass and map or chart of area.
 - (7) Spare operating equipment; batteries, bulbs, fuses, etc.
 - (8) Transistor radio
 - (9) Drinking water
- **Know signs of weather change and avoid foul weather and rough-sea boating.**
- **Tell someone where you are going and when you expect to return.**
- **Passenger boarding.** Stop the engine whenever passengers are boarding, unloading or are near the back (stern) of the boat. Just shifting the drive unit into neutral is not sufficient.
- **Use personal flotation devices.** Federal Law requires that there be a U.S. Coast Guard approved, wear-able-type life jacket (personal flotation device), correctly sized and readily accessible for every person on board, plus a throwable cushion or ring. We strongly advise that everyone wear a life jacket at all times while in the boat.
- **Prepare other boat operators.** Instruct at least one person on board in the basics of starting and operating the engine and boat handling in case the driver becomes disabled or falls overboard.
- **Do not overload your boat.** Most boats are rated and certified for maximum load (weight) capacities (refer to your boat capacity plate). When in doubt, contact your dealer or the boats manufacturer. Know your boat's operating and loading limitations.
- **Make sure everyone in the boat is properly seated.** Don't allow anyone to sit or ride on any part of the boat that was not intended for such use. This includes backs of seats, gunwales, transom, bow, decks, raised fishing seats, any rotating fishing seat; anywhere that sudden unexpected acceleration, sudden stopping, unexpected loss of boat control or sudden boat movement could cause a person to be thrown overboard or into the boat.

- **Never be under the influence of alcohol or drugs while boating (it is the law).** They impair your judgment and greatly reduce your ability to react quickly.
- **Know your boating area and avoid hazardous locations.**
- **Be alert.** The operator of the boat is responsible by law to “maintain a proper lookout by sight (and hearing).” The operator must have an unobstructed view particularly to the front. No passengers, load, or fishing seats should block the operators view when operating the boat above idle or planing transition speed. Watch “the other guy,” the water and your wake.
- **Never drive your boat directly behind a water skier in case the skier falls.** As an example, your boat traveling at 25 miles per hour (40 km/hr) in 5 seconds will overtake a fallen skier who was 200 feet in front of you.
- **Watch fallen skiers.** When using your boat for water skiing or similar activities, always keep a fallen or down skier on the operator’s side of the boat while returning to attend the skier. The operator should always have the down skier in sight and never back up to the skier or anyone in the water.
- **Report accidents.** Boat operators are required by law to file a Boating Accident Report with their state boating law enforcement agency when their boat is involved in certain boating accidents. A boating accident must be reported if (1) there is loss of life or probable loss of life, (2) there is personal injury requiring medical treatment beyond first aid, (3) there is damage to boats or other property where the damage value exceeds \$500.00 or (4) there is complete loss of the boat. Seek further assistance from local law enforcement.

CA282

Protecting People In The Water

WHILE YOU ARE CRUISING

It is very difficult for a person standing or floating in the water to take quick action to avoid a boat heading in his/her direction even at slow speed.

Always slow down and exercise extreme caution any time you are boating in an area where there might be people in the water.

Whenever a boat is moving (coasting) and the drive unit is in neutral position, there is sufficient force by the water on the propeller to cause the propeller to rotate. This neutral propeller rotation can cause serious injury.

WHILE BOAT IS STATIONARY

Shift the drive unit into neutral and shut off the engine before allowing people to swim or be in the water near your boat.

WARNING

Stop your engine immediately whenever anyone in the water is near your boat. Serious injury to the person in the water is likely if contacted by a rotating propeller, a moving boat, a moving gear case, or any solid device rigidly attached to a moving boat or gear case.

CC828

High-Speed And High-Performance Boat Operation

If your boat is considered a high-speed or high-performance boat with which you are unfamiliar, we recommend that you never operate it at its high speed capability without first requesting an initial orientation and familiarization demonstration ride with your dealer or an operator experienced with your boat. For additional information, obtain a copy of our “Hi-Performance Boat Operation” booklet (Part Number 90-849250--1) from your dealer, distributor, or Mercury Marine.

Conditions Affecting Operation

Weight Distribution

Positioning of weight (passengers and gear) inside the boat has the following effects:

A. Shifting weight to rear (stern) will:

- Generally increases speed and engine rpm.
- At extremes, can cause boat to porpoise.
- Causes bow to bounce in choppy water.
- Increases danger of following wave splashing into boat when coming off plane.

B. Shifting weight to front (bow) will:

- Improves ease of planing on some boats.
- Improves rough water ride.
- At extremes, can cause boat to veer back and forth (bow steer).

Bottom Of Boat

To maintain maximum speed, the following conditions of the boat bottom should be observed.

- A. Clean, free of barnacles and marine growth.
- B. Free of distortion; nearly flat where it contacts the water.
- C. Straight and smooth, fore and aft.

Marine vegetation may accumulate when boat is docked. This growth must be removed before operation; it may clog water inlets and cause engine to over heat.

Propeller Selection

IMPORTANT: Installed propeller must allow engine to run at its specified maximum wide-open-throttle revolutions per minute (rpm). Use an accurate service tachometer to verify engine operating rpm.

It is the responsibility of the boat manufacturer and/or the selling dealer to equip the power package with the correct propeller(s). Specified engine wide-open-throttle (WOT) and operating rpm range are listed in "Specifications."

IMPORTANT: The engines covered in this manual are equipped with a device that limits engine rpm. Be sure that propeller being used does not allow engine to run against limiter, as a significant loss in performance will result.

Engine rpm		
Inboard (MIE) Model	Engine Recommended Operating rpm Range	rpm Limiter Setting (Begins At:)
D7.3L D-Tronic	3600-3800	3850
D7.3L D-Tronic LD	3400-3600	3650

Select a propeller that will allow the engine power package to operate at or near the top of the recommended wide-open-throttle operating rpm range with a normal load. Generally, there is a 100-150 rpm difference between 1 inch changes in propeller diameter or pitch.

If full throttle operation is below the recommended range, the propeller must be changed to prevent loss of performance and possible engine damage. On the other hand, operating an engine above the recommended operating rpm range will cause higher than normal wear and/or damage.

After initial propeller selection, the following common problems may require that the propeller be changed to a lower pitch:

- Operating with a damaged propeller or dirty boat bottom causes an rpm loss.
- Operating with increased load (additional passengers, pulling skiers, etc.).

For better acceleration, such as is needed for water skiing, use the next lower pitch propeller. However, do not operate at full throttle when using the lower pitch propeller but not pulling skiers.

How Elevation And Climate Affect Performance

NOTE: *Engines equipped with EDI (D-Tronic engines) reduce the effects of changes in elevation and climate by automatically adjusting fuel flow for weather conditions and elevation. EDI engines however, do not compensate for increased loading or hull conditions.*

Generally, elevation has a very noticeable effect on the wide-open-throttle power of an engine. Since air (containing oxygen) gets thinner as elevation increases, the engine begins to starve for air. Humidity, barometric pressure and temperature do have a noticeable effect on the density of air. Heat and humidity thin the air. This condition can become particularly annoying when an engine is propped out on a cool, dry day in spring and later, on a hot, sultry day in August, doesn't have its old zip.

Although some performance can be regained by dropping to a lower-pitch propeller, the basic problem still exists. In some cases, a gear-ratio change to more reduction is possible and very beneficial.

Summer conditions of high temperature, low barometric pressure and high humidity all combine to reduce the engine power. This, in turn, is reflected in decreased boat speeds, as much as 2 or 3 miles per hour in some cases. Nothing will regain this speed for the boater, but the coming of cool, dry weather.

In pointing out the practical consequences of weather effects, an engine -- running on a hot, humid summer day -- may encounter a loss of as much as 14% of the horsepower it would produce on a dry brisk spring or fall day. With the drop in available horsepower, this propeller will, in effect, become too large. Consequently, the engine operates at less than its recommended rpm. This will result in further loss of horsepower at the propeller with another decrease in boat speed. This secondary loss, however, can be somewhat regained by switching to a lower-pitch propeller that allows the engine to again run at recommended rpm.

For boaters to realize optimum engine performance under changing weather conditions, it is essential that the engine be propped to allow it to operate at or near the top end of the recommended maximum rpm range at wide-open-throttle with a normal boat load.

Not only does this allow the engine to develop full power, but equally important is the fact that the engine also will be operating in an rpm range that discourages damaging detonation. This, of course, enhances overall reliability and durability of the engine.

Important Information

CD546

Operation and Maintenance

OPERATION / DUTY CYCLE RATING NOTICE

It is the operator's responsibility to operate within the following recommended operational capability, or duty cycle, as applicable to engine and installation:

D7.3L D-Tronic Models - PLEASURE DUTY RATING

- Engine Recommended Operating rpm Range is 3600-3800 rpm.
- Wide-Open-Throttle operation is limited to short periods of time.

D7.3L D-Tronic LD Models - LIGHT DUTY RATING

- Engine Recommended Operating rpm Range is 3400-3600 rpm.
- Wide-Open-Throttle operation is limited to less than 10% of operating time.
- Continuous cruising rpm is limited to at or less than 90% of Wide-Open-Throttle rpm.
- Annual operating time is not to exceed 500 hours.

NOTE:

Pleasure duty rating applies to recreational planing craft used exclusively for pleasure and recreation.

Light duty rating applies to planing boats where the use of full rated power at maximum rated rpm is limited (as stated above). Examples of Light Duty applications include, but are not limited to: search and rescue craft, fast patrol boats, fire boats, dive boats, and limited season fishing boats such as sport-fish charter boats. Application to common commercial crafts having full-displacement or semi-displacement hulls exceeds the recommended operational capability, or duty cycle.

IMPORTANT: Damage caused by improper application or failure to operate within the operational capability, or duty cycle, will not be covered by the Mercury MerCruiser Diesel Limited Warranty.

CE7

OWNER/OPERATOR RESPONSIBILITIES

It is the operator's responsibility to perform all safety checks, ensure that all lubrication and maintenance instructions are complied with for safe operation, and return the unit to an Authorized MerCruiser Dealer for a periodic checkup.

Normal maintenance service and replacement parts are the responsibility of the owner/operator and as such, are not considered defects in workmanship or material within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of your power package will assure optimum performance and dependability, and will keep your overall operating expenses at a minimum. See your Authorized MerCruiser Dealer for service aids.

CA14

DEALER RESPONSIBILITIES

In general, a dealer's responsibilities to the customer include predelivery inspection and preparation such as:

- Make sure that the boat is properly equipped.
- Prior to delivery, make certain that the MerCruiser power package and other equipment are in proper operating condition.
- Make all necessary adjustments for maximum efficiency.
- Familiarize the customer with the on-board equipment.
- Explain and demonstrate the operation of the power package and boat.
- At the time of delivery, the dealer should provide you with a copy of a Predelivery Inspection Checklist.
- Your selling dealer should fill out the Warranty Registration Card completely and mail it to the factory (branch or distributor) immediately upon sale of the new product.

Freezing Temperature And Cold Weather Operation

IMPORTANT: If boat is operated during periods of freezing temperature, precautions must be taken to prevent freezing damage to power package. Refer to the following and to “Cold Weather or Extended Storage” for related information and draining instructions.

⚠ CAUTION

Seawater (raw water) section of cooling system MUST BE COMPLETELY drained for winter storage or immediately after cold weather use, if the possibility of freezing temperatures exist. Failure to comply may result in trapped water causing freeze and/or corrosion damage to engine.

In order to operate the engine in temperatures of 32° F (0° C) or lower, observe the following instructions:

- At the end of each daily operation, COMPLETELY drain seawater section of cooling system to protect against damage by freezing.
- At the end of each daily operation, drain water from water separator, if equipped. Fill fuel tank at end of daily operation to prevent condensation.
- Use required permanent-type antifreeze solution to protect components against damage by freezing.
- Be sure to use proper cold weather lubrication oil, and be sure the crankcase contains a sufficient amount.
- Make certain that the battery is of sufficient size and is fully charged. Check that all other electrical equipment is in optimum condition.
- At temperatures of -4° F (-20° C) and below, it is recommended that you use a coolant heater to improve cold starting.
- If operating in arctic temperatures of -20° F (-29° C) or lower, consult your dealer for information about special cold weather equipment and precautions.

CA408

Drain Plug and Bilge Pump

The engine compartment in your boat is a natural place for water to collect. For this reason, boats are normally equipped with a drain plug and/or a bilge pump. It is very important to check these items on a regular basis to ensure that the water level does not rise to come in contact with your power package. Components on your engine will be damaged if submerged. Damage caused by submersion is not covered by the MerCruiser Limited Warranty.

CA18

Attention Required After Submersion

- Before recovery, contact an Authorized MerCruiser Dealer.
- After recovery, immediate service by an Authorized MerCruiser Dealer is required to prevent serious damage to power package.

Launching and Boat Operation Care

CAUTION

During launching from a trailer, if the unloading ramp is steep or the trailer bed must be tilted, the boat may enter the water rapidly and at a steep angle. This may force water through the exhaust system into the cylinders. The more weight on the transom, the more likely this is to occur.

Slowing down rapidly, stopping suddenly or backing up rapidly may cause a following wave to “swamp” the transom causing water to enter the cylinders through the exhaust system causing severe engine damage.

When backing up rapidly, the same situation may occur as stated in the preceding paragraph.

In any of these situations, water entering the engine could cause severe damage to internal parts. Refer to “Attention Required After Submersion,” in this “Operation and Maintenance Manual.”

Stolen Power Package

If your power package is stolen, immediately advise the local authorities and Mercury Marine of the model and serial number(s) and to whom the recovery is to be reported. This “Stolen Motor” information is placed into a file at Mercury Marine to aid authorities and dealers in recovery of stolen motors.

Replacement Service Parts

Marine engines are expected to operate at or near full throttle for most of their life. They are also expected to operate in both fresh and saltwater environments. These conditions require numerous special parts. Care should be exercised when replacing marine engine parts, as specifications are quite different from those of the standard automotive engine.

Since marine engines must be capable of running at or near maximum rpm much of the time, special pistons, camshafts and other heavy-duty moving parts are required for long life and peak performance.

These are but a few of the many special modifications that are required in MerCruiser marine engines to provide long life and dependable performance.

Do-It-Yourself Maintenance Suggestions

If you are one of those persons who likes to do-it-yourself, here are some suggestions for you.

- Present-day marine equipment, such as your MerCruiser power package, are highly technical pieces of machinery. Electronic ignition and special fuel delivery systems provide greater fuel economies, but also are more complex for the untrained mechanic.
- Do not attempt any repairs which are not covered in this manual unless you are aware of the precautions (“Cautions” and “Warnings”) and procedures required. Your safety is of our concern.
- If you attempt to service the product yourself, we suggest you order the maintenance procedures manual for that model. This manual outlines the correct procedures to follow. Do not attempt repairs if you do not understand the procedures.
- There are special tools and equipment that are required to perform some repairs. Do not attempt these repairs unless you have these special tools and/or equipment. You can cause damage to the product in excess of the cost a dealer would charge you.
- Also, if you partially disassemble an engine or drive assembly and are unable to repair it, the dealer's mechanic must reassemble the components and test to determine the problem. This will cost you more than taking it to the dealer immediately upon having a problem. It may be a very simple adjustment to correct the problem.
- Do not telephone the dealer, service office or the factory to attempt for them to diagnose a problem or request the repair procedure. It is difficult for them to diagnose a problem over the telephone.
- Your Authorized Dealer is there to service your power package. They have qualified factory-trained mechanics.

It is recommended you have the dealer do periodic maintenance checks on your power package. Have them winterize it in the fall and service it before the boating season. This will reduce the possibility of any problems occurring during your boating season when you want trouble-free boating pleasure.

Diagnosing EDI Problems

Your Authorized MerCruiser Dealer has the proper service tools for diagnosing problems on Electronic Diesel Injection (EDI) Systems. The Electronic Control Module (ECM) on these engines have the ability to detect some problems with the system when they occur, and store a “Trouble Code” in the ECM's memory. This code can then be read later by a service technician using a special diagnostic tool.

Multiple EDI Engine Battery Precautions

Situation

Alternators: Alternators are designed to charge the battery that supplies electrical power to the engine that the alternator is mounted on. When batteries for two different engines are connected, one alternator will supply all of the charging current for both batteries. Normally, the other engine's alternator will not be required to supply any charging current.

EDI Electronic Control Module (ECM): The ECM requires a stable voltage source. During multiple engine operation, an onboard electrical device may cause a sudden drain of voltage at the engine's battery. The voltage may go below the ECM's minimum required voltage. Also, the alternator on the other engine may now start charging. This could cause a voltage spike in the engine's electrical system.

In either case, the ECM could shut off. When the voltage returns to the range that the ECM requires, the ECM will reset itself. The engine will now run normally. This ECM shut down usually happens so fast that the engine just appears to have an ignition miss.

Recommendations

Batteries: Boats with multi-engine EDI power packages require each engine be connected to its own battery. This ensures that the engine's Electronic Control Module (ECM) has a stable voltage source.

Battery Switches: Battery switches should always be positioned so each engine is running off its own battery. DO NOT operate engines with switches in BOTH or ALL position. In an emergency, another engine's battery can be used to start an engine with a dead battery.

Battery Isolators: Isolators can be used to charge an auxiliary battery used for powering accessories in the boat. Isolators should not be used to charge the battery of another engine in the boat unless the type of isolator is specifically designed for this purpose.

Generators: The generator's battery should be considered in the same manner as another engine's battery.

Engine Break-In

INITIAL BREAK-IN PROCEDURE

It is especially important that the following procedure be used on new diesel engines. This break-in procedure allows the proper seating of the pistons and rings, which greatly reduces the likelihood of problems.

IMPORTANT: It is recommended that the boat not be accelerated hard until this procedure has been completed.

IMPORTANT: Never operate the starter motor longer than 15 seconds at a time, to avoid overheating the starter motor. If engine does not start, wait 1 minute to allow the starter motor to cool; then, repeat starting procedure.

INITIAL BREAK-IN PROCEDURE IS AS FOLLOWS:

1. Refer to "Starting, Shifting and Stopping" and start engine. Allow engine to idle until it has reached normal operating temperature.
2. Run engine in gear for 3 minutes at each of the following rpms: 1200 rpm, 2400 rpm and 3000 rpm.
3. Run engine in gear for 3 minutes at each of the following rpms: 1500 rpm, 2800 rpm and 3200 rpm.
4. Run engine in gear for 3 minutes at each of the following rpms: 1800 rpm, 3000 rpm and Maximum Rated Full-Throttle rpm.

20-HOUR BREAK-IN PERIOD

IMPORTANT: The first 20 hours of operation is the engine break-in period. Correct break-in is essential to obtain minimum oil consumption and maximum engine performance. During this break-in period, the following rules must be observed:

- DO NOT operate engine below 1500 rpm for extended periods during the first 10 hours. During this period, shift into gear as soon as possible after starting engine and advance throttle so that rpm is above 1500 (provided that conditions permit safe operation at this speed).
- DO NOT operate at any one constant speed for extended periods.
- DO NOT exceed 75% of full throttle during the first 10 hours except during engine Initial Break-In Procedure. During the next 10 hours, occasional operation at full throttle (5 minutes at a time maximum) is permissible.
- AVOID full throttle acceleration from stopped position.
- DO NOT operate at full throttle until engine reaches normal operating temperature.
- OBSERVE INSTRUMENTS, if an abnormal reading occurs, stop engine immediately and determine cause.
- FREQUENTLY CHECK crankcase oil and sterndrive unit fluid levels. Add if necessary. It is normal for oil consumption to be somewhat high during the break-in period.
- AT END OF 20-HOUR break-in period, remove break-in oil and replace oil filter. Fill crankcase with correct grade and viscosity oil.

After Break-In Period

To help extend the life of your MerCruiser power package, the following recommendations should be considered;









- Use a propeller that allows the engine to operate at or near the top of the maximum rpm range (See “Specifications” section) when at full throttle with a normal boat load.
- Operation at 3/4 throttle setting or lower is recommended. Refrain from prolonged operation at maximum (full throttle) rpm.

End of First Season Checkup

At the end of the first season of operation, an Authorized MerCruiser Dealer should be contacted to discuss and/or perform various scheduled maintenance items. If you are in an area where the product is operated continuously (year-round operation), you should contact your dealer at the end of the first 100 hours of operation, or once yearly, whichever occurs first.

THIS PAGE IS INTENTIONALLY BLANK

Operation

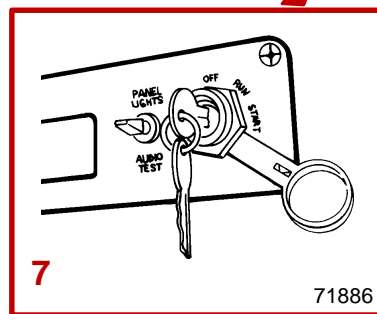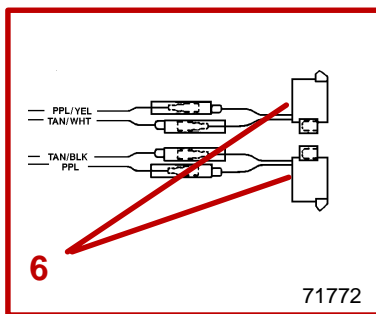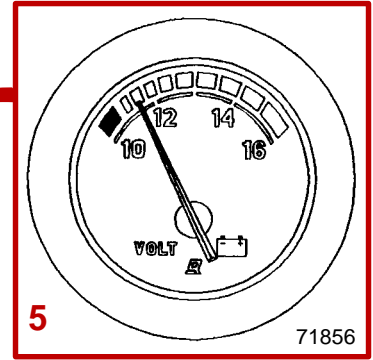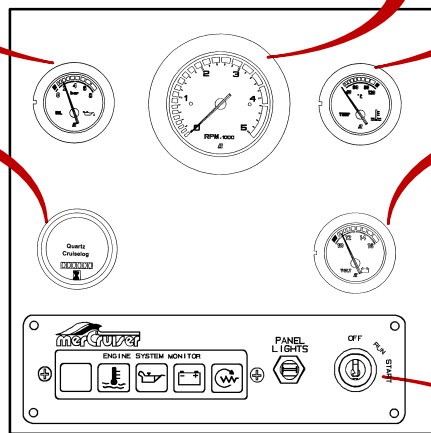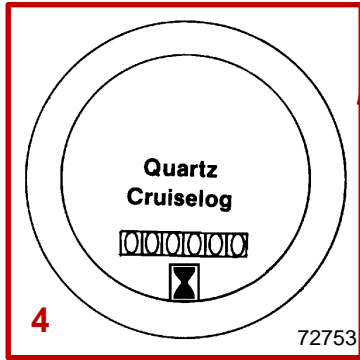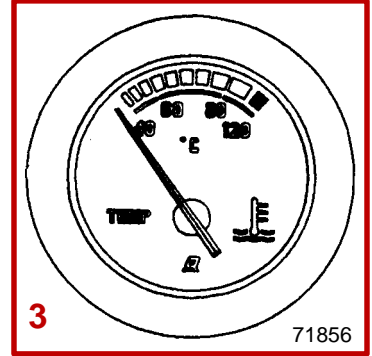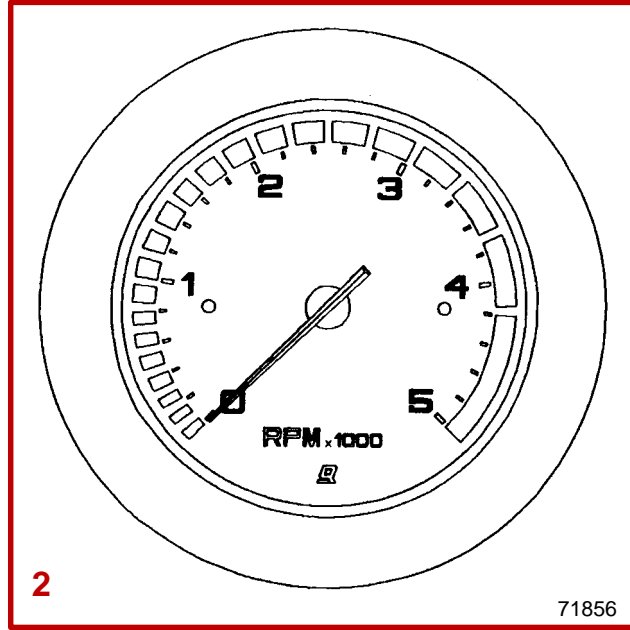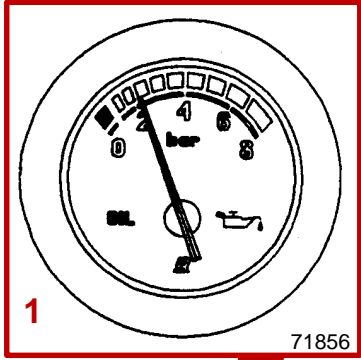

Quicksilver Instruments and Instrumentation


Shown is the basic Quicksilver instrumentation and engine system monitor display for the Diesel Power Package. The instrumentation shown is required for safe operation of boat and engine. Operator should become familiar with all instrumentation before operating the engines.

Gauges and engine system monitor panel may be individually mounted, or collectively mounted in the optional single panel available from Quicksilver.

NOTE: Refer to manufacturer's instructions and explanations about instrumentation, if equipped with other than Quicksilver instrumentation.

- 1 Oil Pressure Gauge** - indicates engine oil pressure. Refer to "Specifications" for normal operating readings.
- 2 Tachometer** - indicates engine speed (rpm).
- 3 Coolant Temperature Gauge** - indicates engine coolant temperature. Refer to "Specifications" for normal operating readings.
- 4 Cruise Log (Engine Hour Meter)** - records engine running time.
- 5 Voltmeter**- indicates battery voltage, and if alternator and charging circuit are functioning properly. The green area on the gauge is the normal operating range.
- 6 Audio Warning Horn Standard Features** - Horn sounds if:
 - (1) Cooling system temperature too high
 - (2) Oil pressure is too low
 - (3) Transmission fluid temperature is excessive
- 7 Key Switch** - has three positions; in the "OFF" position, all electrical circuits are off and engine cannot be started. In the "RUN" position, all electrical circuits, indicator lamps, automatic preheating and all instrumentation is operational. In the "START" position the engine can be started. The engine is stopped when the key switch is turned to the "OFF" position.

NOTE: Key can only be removed in the "OFF" position.

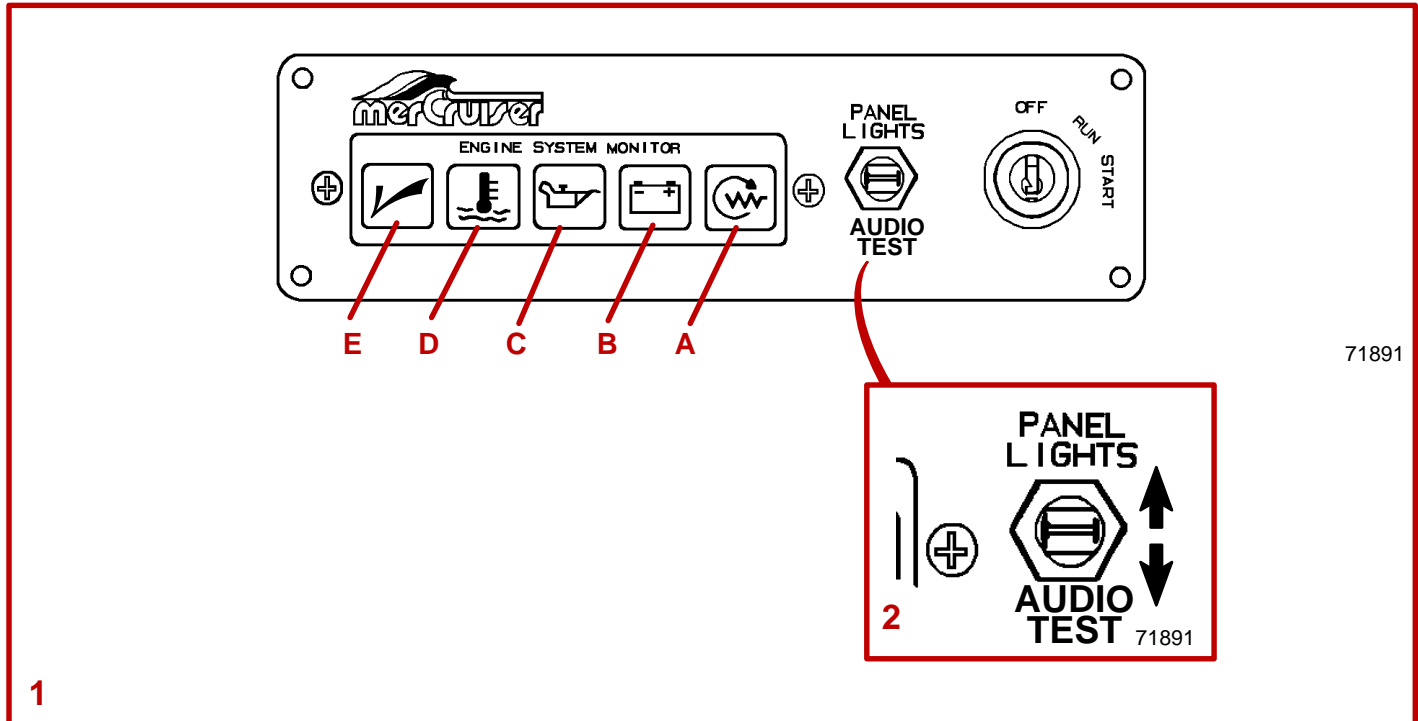

CE337

Engine System Monitor



1 The appropriate light functions as follows:

- A** Preheat Indicator Lamp - lights up when the glow plugs are preheating the combustion chambers. The timed preheat period begins when the key switch is turned on. **THE ENGINE SHOULD BE STARTED ONLY AFTER THE LAMP GOES OFF.**
- B** Charge Indicator Lamp - indicates a problem with charging system if lamp illuminates while engine is running. Lamp will light when key switch is "ON" and engine is not running. When engine starts, light should go off.
- C** Oil Pressure Warning Lamp - indicates low engine oil pressure, if lamp illuminates while engine is running, or sterndrive gear lube oil level low.

NOTE: The oil pressure warning lamp is wired in a parallel circuit with the transmission temperature switch. If lamp illuminates while engine is running, and oil temperature and oil level are normal, this may be an indication of excessive transmission temperature. The cause should be determined and corrected.

- D** Coolant Temperature Warning Lamp - indicates excessive engine coolant temperature if lamp illuminates while engine is running.
- E** Check Engine Lamp - if Check Engine light illuminates during operation it may indicate an abnormal condition has been detected by engine sensors, the system can be reset by turning off and re-starting the engine. If the lamp illuminates again shortly after re-starting the engine contact the nearest MerCruiser Service Center for diagnosing the problem.

2 Panel Lights/Audio Test Switch - has three positions; in the normal position all electrical circuits operate in a standard fashion (as described above). With switch toggled UP the instrumentation lights are all illuminated. When the engine is running and the switch is toggled DOWN the audio warning buzzer will sound allowing the operator to perform a test of the audio warning buzzer.

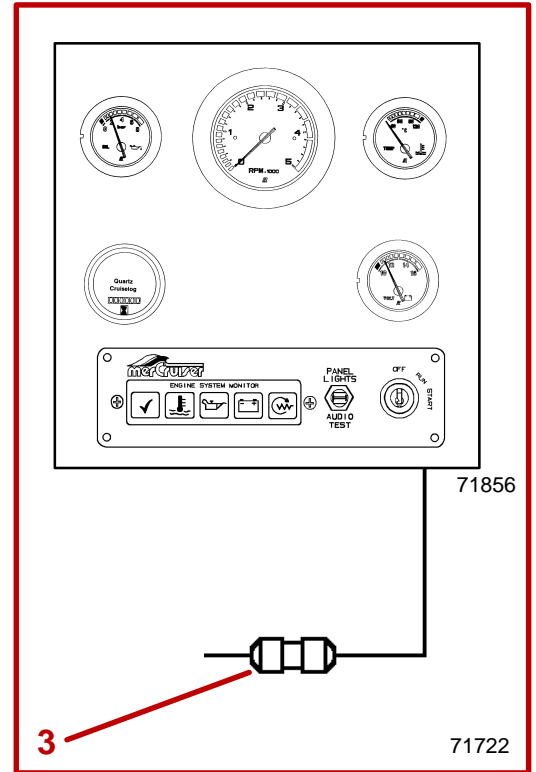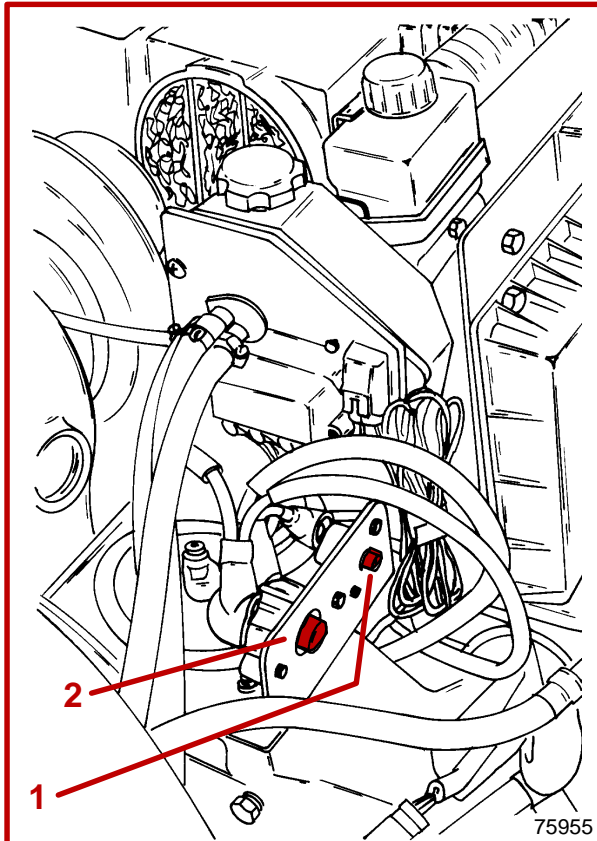

CE339

Electrical System Overload Protection

If an electrical overload occurs the circuit breaker will trip open.




IMPORTANT: The cause must be found and corrected before replacing fuse or resetting circuit breaker.

1 One 30 amp circuit breaker provides protection for engine wiring harness and instrumentation power lead. Reset by pushing RESET button IN (from outside).

In an emergency, when engine must be operated and cause for high current draw cannot be located and corrected, turn OFF or disconnect all accessories connected to engine and instrumentation wiring. Reset circuit breaker. If breaker remains open, electrical overload has not been eliminated. Further checks must be made on electrical system.

2 One 150 amp circuit breaker provides protection for glow plug system and related engine wiring harness connections. Reset by pushing RESET button IN (from outside). If breaker remains open, electrical overload has not been eliminated. Further checks must be made on glow plug system and/or electrical system.

3 When equipped with Quicksilver instrumentation and wiring a 20 amp fuse and holder is located in-line on key switch wire and protects the Instrumentation and wiring should an electrical overload occur. If an overload occurs, the fuse will burn out. Check "blown" (burned) fuse if key is turned to RUN or START and instruments do not work and/or if switches do not function.

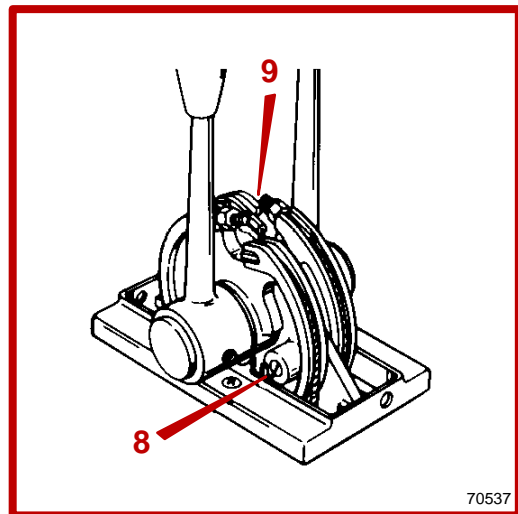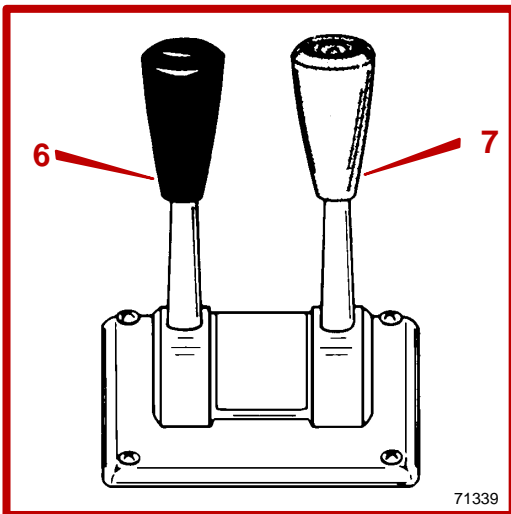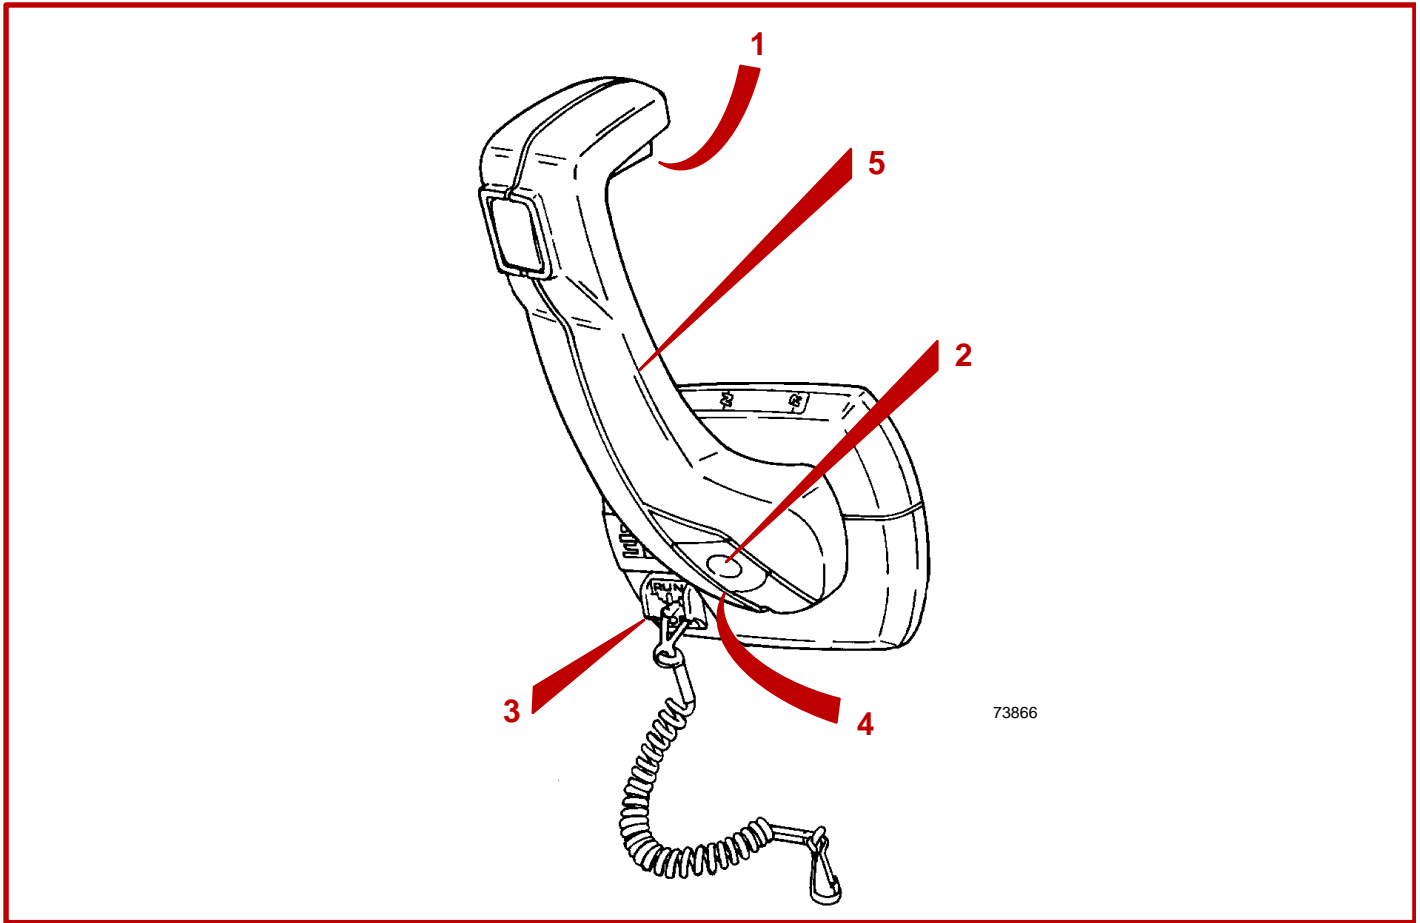

Remote Controls (Panel Mounted)

- 1 Neutral Lock Bar** - Prevents accidental shift and throttle engagement. Neutral lock bar must be pulled “Up” to move the control handle out of neutral.
- 2 Throttle Only Button** - Allows engine throttle advancement without shifting the engine. This is done by disengaging the shift mechanism from the control handle. The throttle only button can be depressed only when the remote control handle is in the “Neutral” position, and should only be used to assist in starting the engine.
- 3 Lanyard Stop Switch** - Turns ignition “Off” whenever the operator (when attached to the lanyard) moves far enough away from the operator’s position to activate the switch. See “Lanyard Stop Switch” at the front of this manual for safety warning on the use of this switch.
- 4 Control Handle Tension Adjustment Screw** - This screw can be adjusted to “Increase” or “Decrease” the tension on the control handle. This will help prevent “Creep” of the remote control handle. Turn screw “Clockwise” to increase tension and “Counterclockwise” to decrease tension. Adjust to tension desired.
- 5 Control Handle** - Operation of the shift and throttle are controlled by the movement of the control handle. “Push” the control handle forward from “Neutral” with a quick firm motion to the first detent for “Forward” gear. Continue pushing forward to increase speed. Pull the control handle back from “Neutral” with a quick firm motion to the first detent for “Reverse” gear. Continue pushing back to increase speed.

⚠ CAUTION

DO NOT shift the control handle into “Reverse” when the engine is not running. Forcing the shift mechanism into “Reverse” when the engine is not running could damage the remote control mechanism.

Remote Controls (Two Lever)

Your boat may be equipped with one of many Quicksilver® remote controls available. All controls feature an integral safety switch that allows starting engine in NEUTRAL only. Also, all controls may not have all features shown.



NOTE: If boat is equipped with a remote control other than shown, consult your dealer for a description and/or demonstration of the control.

- 6 Shift Lever** - shifts unit into gear with full lever movement. Move lever forward to shift to FORWARD gear. Move lever backward to shift to REVERSE gear. Lever in full vertical position shifts to NEUTRAL.

⚠ CAUTION

Never shift unit into or out of gear unless throttle lever is at idle rpm.

- 7 Throttle Lever** - allows engine rpm to be increased or decreased.
 - 8 FRICTION Screw** - adjusts control handle friction so motor speed can be set and driver does not have to hold handle.
Turn screw clockwise to increase friction. Do not thread screw all the way out.
 - 9 DETENT Screw** - controls the effort needed to move control handle out of NEUTRAL. To increase tension, turn screw clockwise; to decrease, turn screw counterclockwise. Do not thread screw all the way out.
- IMPORTANT:** Boats equipped with dual power packages may have both shift levers on one control and both throttle levers on the other control.

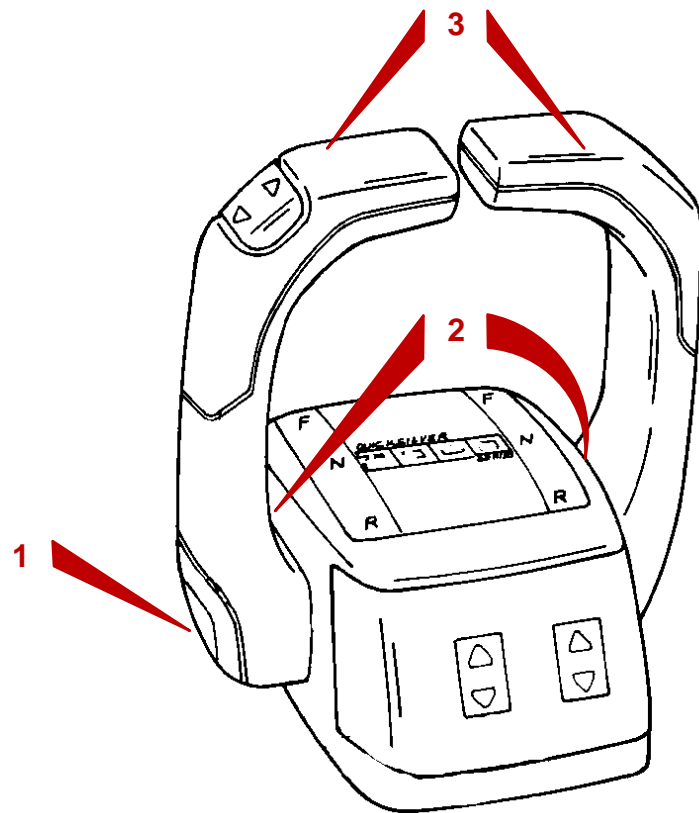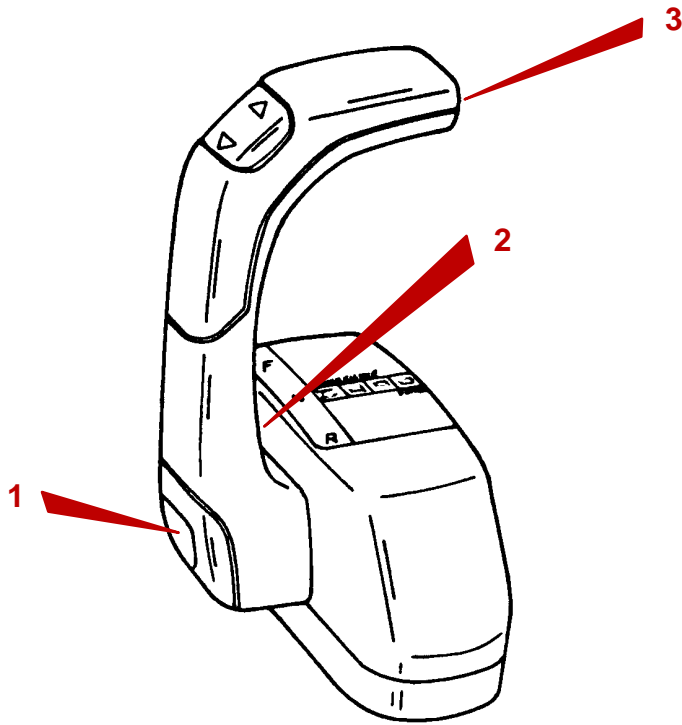

Remote Controls (Console Mounted)

Your boat may be equipped with one of many Quicksilver® remote controls available. All controls feature an integral safety switch that allows starting engine in NEUTRAL only. Also, all controls may not have all features shown.

NOTE: *If boat is equipped with a remote control other than shown, consult your dealer for a description and/or demonstration of the control.*

1 Throttle Only Button - Allows engine throttle advancement without shifting the engine. This is done by disengaging the shift mechanism from the control handle. The throttle only button can be depressed only when the remote control handle is in the "Neutral" position, and should only be used to assist in starting the engine.

2 Control Handle Tension Adjustment Screw - This screw can be adjusted to "Increase" or "Decrease" the tension on the control handle (cover must be removed to adjust). This will help prevent "Creep" of the remote control handle. Turn screw "Clockwise" to increase tension and "Counterclockwise" to decrease tension. Adjust to tension desired.

3 Control Handle(s) - Operation of the the shift and throttle are controlled by the movement of the control handle. "Push" the control handle forward from "Neutral" with a quick firm motion to the first detent for "Forward" gear. Continue pushing forward to increase speed. Pull the control handle back from "Neutral" with a quick firm motion to the first detent for "Reverse" gear. Continue pushing back to increase speed.

Starting, Shifting and Stopping

BEFORE STARTING THE ENGINE

WARNING

Do not use volatile starting aids, such as Ether, Propane, or Gasoline in the engine air intake system. Explosion hazard resulting from ignition of vapors by glow plugs could cause severe personal injury and engine damage.

CAUTION

It is good practice to ventilate the engine compartment prior to servicing any engine components to remove any fuel vapors which may cause difficulty breathing or be an irritant.

IMPORTANT: As an added precaution, the following steps must be observed before starting:

- Do not start engine without water being supplied to seawater pickup pump (to prevent pump or engine damage).
- Never operate the starter motor longer than 15 seconds at a time, to avoid overheating the starter motor. If engine does not start, wait 1 minute to allow the starter motor to cool; then, repeat starting procedure.
- Be sure engine crankcase is filled to correct level with the proper grade of oil for the prevailing temperature. Refer to “Specifications - Crankcase Oil”.
- Be sure that all electrical connections are secure.
- Check the air cleaner for proper installation of filter element.

1 Check all items listed in the MAINTENANCE CHART AND OPERATION CHART (Refer to “Table Of Contents”).

2 Perform any other necessary checks, as indicated by your dealer, or specified in your boat owner’s manual.

3 If engine has not been run for a period of time and will not readily start with the standard starting procedure, there is a hand pump/primer located on the engine to improve initial fuel supply. Refer to “Maintenance - Fuel System, Priming Fuel System” and follow instructions given.

STARTING COLD ENGINE

IMPORTANT: Check fluid levels before starting engine. Refer to Maintenance Schedule.

1 Turn on and run engine compartment bilge blower (if so equipped) for five minutes. Or, open engine hatch to air out bilge before attempting to start engine(s).

2 Turn key switch to RUN position. Observe preheat indicator (glow plug) lamp. Lamp should be illuminated when engine is cold. The engine should be started only after the lamp goes off.

NOTE: Engine can be started once preheat indicator lamp goes out.

3 Turn key switch to START position. Release key when engine starts and allow switch to return to RUN position.

4 Check to ensure all instrumentation is functioning properly and indicating normal readings. Check to ensure charge indicator and oil pressure warning lamps go out. Within seconds after starting the engine, oil pressure should exceed 10 psi (69 kPa) minimum. If the oil pressure does not meet these minimum limits, stop the engine, locate and correct the problem, or see your Authorized MerCruiser Dealer if you are unable to determine the problem.

CAUTION

Do not increase the engine speed until the oil pressure gauge indicates normal. Shut the engine down if oil pressure does not register on the gauge within 20 to 30 seconds after start.

CE31
ENGINE WARM UP

⚠ CAUTION

Improper or no warm-up of engine can seriously impair the life of your diesel engine.

1 After starting, check to ensure all instrumentation is functioning properly. Run engine at idle rpm until engine temperature is within normal operating range. It is very important that any engine be warmed up before applying full load. The warm-up period provides time for the lubricating oil to establish a film between moving parts.

***NOTE:** Engine warm-up time during cold weather can be reduced by operating vessel at reduced engine speed. Commence normal vessel operation when systems reach operating temperatures.*

2 After the engine has reached operating temperature, oil pressure should be within range listed in the engine specifications chart. Stop the engine if oil pressure is not within this range. Locate and correct the problem, or see your Authorized MerCruiser Dealer if you are unable to determine the problem.

CE32
STARTING WARM ENGINE

1 Turn on and run engine compartment bilge blower for five minutes (if so equipped). Or, open engine hatch to air out bilge before attempting to start engine(s).

2 Turn key switch to the “RUN” position. Check to ensure glow plug preheat lamp is not illuminated.

3 Turn key switch to the “START” position and release when engine fires. Check to ensure charge indicator and oil pressure warning lamps go out.

4 Check to ensure all instrumentation is functioning properly and indicating normal readings. Oil pressure should be within the range listed in the engine specifications chart. Stop the engine if oil pressure is not within this range. Locate and correct the problem, or see your Authorized MerCruiser Dealer if you are unable to determine the problem.

CE33
SHIFTING

⚠ CAUTION

Never attempt to shift unit unless engine is at idle rpm. Damage to drive unit could occur.

1 To shift unit, be sure remote control/throttle lever is in NEUTRAL. Move control/shift lever with a firm, quick motion forward to shift to FORWARD gear, or backward to shift to REVERSE. After shifting drive unit, advance throttle to desired setting.

2 Once underway, engine oil pressure should be within the range listed in the engine specifications chart at maximum rpm, or Wide-Open-Throttle. Stop the engine if oil pressure is not within this range. Locate and correct the problem, or see your Authorized MerCruiser Dealer if you are unable to determine the problem.

CE34
ENGINE SHUT-DOWN (STOPPING)

1 Place remote control lever in “Neutral.”

2 Run engine at idle speed for several minutes to allow engine to cool down.

3 Turn key switch to the “OFF” position.

OPERATION CHART

STARTING PROCEDURE	AFTER STARTING	WHILE UNDERWAY	STOPPING & SHUT DOWN
Open engine hatch. Air out bilge completely.	Observe all gauges and warning lights to check condition of engine. If not normal, stop engine.	Frequently observe all gauges and indicator lights to monitor engine condition.	Shift remote control lever to neutral position.
Turn battery switch ON, if so equipped.	Check for fuel, oil, water, fluid, and exhaust leaks, etc.		Run engine at idle speed several minutes to allow it to cool down.
Turn on and run engine compartment bilge blower, if so equipped, for five minutes.	Check shift and throttle control operation.		Turn key switch to OFF position.
Check for leaks - fuel, oil, water, fluid, etc.	Check steering operation.		Turn battery switch OFF, if so equipped.
Open fuel shutoff valve, if so equipped.			Close fuel shutoff valve, if so equipped.
Open seacock, if so equipped.			Close seacock, if so equipped.
Prime fuel injection system, if necessary.			Flush seawater cooling circuit, if operating in saltwater area.
Turn key switch to RUN and check that lights and indicator lamps come on.			
Turn key switch to START, AFTER pre-heater indicator lamp has gone out. Release key when engine starts.			
Check that charge indicator and oil pressure indicator lamps go out AFTER engine starts.			
Warm-up engine at idle rpm for several minutes.			

Specifications

CD11

Seacock

Seacock (water inlet valve) used, must have an internal cross-sectional area equal to or greater than hose to prevent restricting water flow. A 1-1/2 in. (38mm) brass ball or gate valve is minimum required.

Seacock should be installed in an area where it is easily accessible and supported adequately to prevent hose fatigue.

CE14

Seawater Strainer

Seawater Strainer should be provided, and be of sufficient size to ensure that an adequate supply of water will be maintained for cooling engine. A minimum flow rate of 40 gallons (150 litres) per minute is required.

Strainer should be installed in an area where it will be easily accessible for inspection and cleaning. Strainer should be installed in water inlet hose after seacock to allow operator to shut off water inlet when cleaning strainer.

CD535

Anti-Freeze/Coolant

CAUTION

Alcohol or Methanol base antifreeze or plain water are not recommended for use in closed cooling section of cooling system at any time.

Because diesel engines are high compression engines and related higher engine operating temperatures are created, the closed cooling system and engine, including related cooling passages must remain as clean as possible to provide adequate engine cooling. This can only be assured by using the proper anti-freeze, water, additives and inhibitors. It is recommended that the closed cooled section of the cooling system be filled with a low, or no, silicate formula of ethylene glycol antifreeze in solution with deionized water. A low silicate formula prevents anti-freeze separation which causes a silicate gelatin to form. This gelatin will block engine and heat exchanger passages causing engine overheating.

The coolant, if not premixed, should be mixed before being added to the closed cooling system using a proper anti-freeze together with deionized water. Common tap water or softened water contains unwanted minerals which can leave large deposits in the system that restrict the cooling system efficiency. In addition, additives and inhibitors introduced into acceptable coolant solutions will form a protective film on internal passages and provide protection against internal cooling system erosion.

The closed cooling section should be kept filled year-round with an acceptable anti-freeze/coolant solution. Do not drain closed cooled section for storage, as this will promote rusting of internal surfaces. If engine will be exposed to freezing temperatures, make sure that closed cooled section is filled with a properly mixed anti-freeze/coolant solution, to protect engine and closed cooling system to lowest temperature to which they will be exposed.

IMPORTANT: The anti-freeze/coolant used in these marine engines must be a low (or no) silicate ethylene glycol, containing special additives, and deionized, purified water. Using other types of engine coolant may cause fouling of the heat exchangers, and overheating of the engine. Do not combine different types of coolants without knowing that they are compatible. Refer to the coolant manufacturer's instructions.

Some acceptable types of anti-freeze/coolants are listed in the following table. Refer to "Maintenance Schedules" for respective change intervals.

Quicksilver Premixed Marine Engine Coolant	92-813054A2
Fleetguard Complete (with DCA4 Additive)	Obtain Locally

Fuel Requirements

WARNING

Electrical system components on this engine are not external ignition protected. **DO NOT STORE OR UTILIZE GASOLINE ON BOATS EQUIPPED WITH THESE ENGINES, UNLESS PROVISIONS HAVE BEEN MADE TO EXCLUDE GASOLINE VAPORS FROM ENGINE COMPARTMENT (REF: 33 CFR).** Failure to comply could result in fire, explosion and/or severe personal injury.

WARNING

FIRE HAZARD: Fuel leakage from any part of the fuel system can be a fire hazard which can cause serious bodily injury or death. Careful periodic inspection of entire fuel system is mandatory, particularly after storage. All fuel components including fuel tanks, whether plastic, metal or fiberglass, fuel lines, primers, fittings, and fuel filters should be inspected for leakage, soften, hardening, swelling or corrosion. Any sign of leakage or deterioration requires replacement before further engine operation.

IMPORTANT: Use of improper or water contaminated diesel fuel can damage your engine seriously. Use of improper fuel is considered misuse of engine, and damage caused thereby will not be covered by warranty.

WARNING

Under *no circumstances* should gasoline, gasohol and/or alcohol be mixed with diesel fuel for any reason. This mixture of gasoline, gasohol and/or alcohol with diesel fuel is highly flammable and produces a significant risk to the user.

Grade 2-D diesel fuel is required, meeting ASTM Standards D975 (or fuel rated Diesel DIN 51601), and having a minimum cetane rating of 45.

The Cetane number is a measure of the ignition quality of diesel fuel. Increasing the cetane number will not improve overall engine performance, but it may be necessary to raise the cetane rating for low temperature, or high altitude use. A lower cetane number could cause hard starting and slower warm-up, and could increase engine noise and exhaust emissions.

NOTE: *If your engine suddenly becomes noisy after a fuel fill, you possibly received substandard fuel with a low cetane rating.*

Sulphur content of the above fuel is rated at 0.50% by weight, maximum (ASTM). Limits may vary in countries outside of the United States.

On intermittent use engines, high sulphur content diesel fuel will greatly increase:

- Corrosion on metal parts.
- Deterioration of elastomer and plastic parts.
- Corrosion and extensive damage, and excessive wear of internal engine parts, particularly bearings.
- Starting and operating difficulties.

CE16

Diesel Fuel In Cold Weather

Unaltered diesel fuels thicken and “gel” in cold temperatures, unless treated. Virtually all diesel fuels are “climatized” to allow their use in the particular region for that time of the year. If it becomes necessary to further treat diesel fuel, it is the owner/operator’s responsibility to add a commercial “standard brand” “anti-gel” diesel fuel additive, following that product’s directions.


CD556

Crankcase Oil

To help obtain optimum engine performance and to provide maximum protection, the engine requires engine oil with a rating of HD-SAE-API, CG-4.

For all temperature operation use 15W-40 oil.

OIL VISCOSITY RECOMMENDATIONS

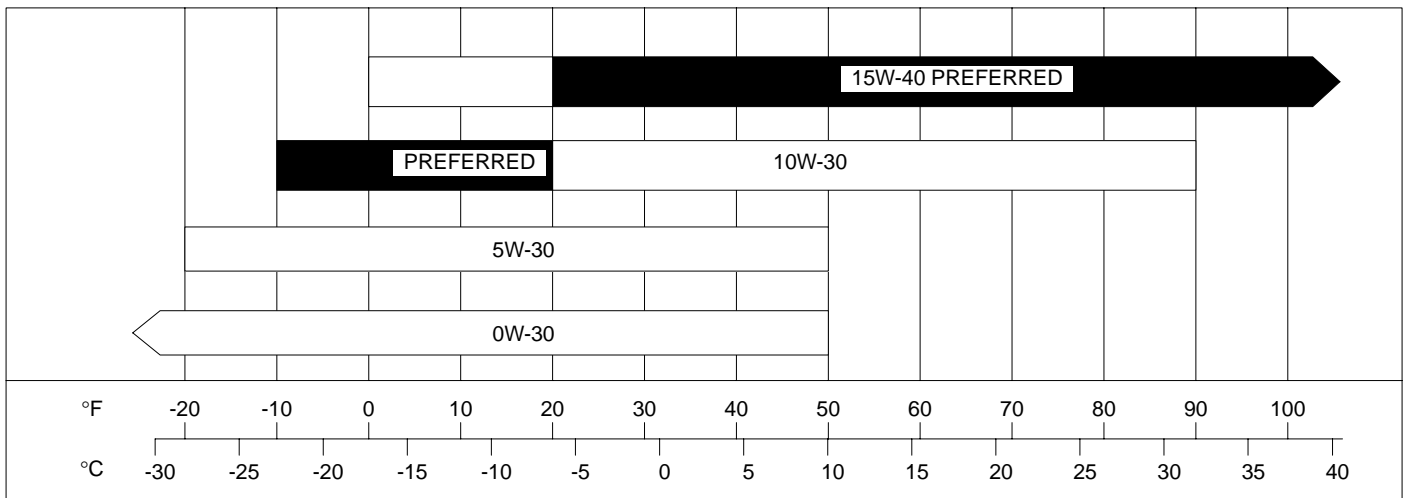

SAE Viscosity Grades / Expected Temperature Range

Engine Specifications

Description		Specification - Inboard (MIE)	
		D7.3L D-Tronic	D7.3L D-Tronic LD
Crankshaft Horsepower (Kilowatts) ¹		300 (223)	260 (195)
Propeller Shaft Horsepower (Kilowatts) ¹		290 (216)	250 (186)
Engine Type		V-8 Cylinder Diesel	
Displacement		444 cu. in. (7.3L)	
Firing Order		1-2-7-3-4-5-6-8	
Bore		4.11 in. (104.39 mm)	
Stroke		4.18 in. (106.20 mm)	
Compression Ratio		15:1	
Valve Clearance - Intake / Exhaust		Non-Adjustable (Hydraulic)	
Maximum Pressure Difference Between Cyl.		75 psi (517 kPa)	
Maximum High Idle No Load rpm		3950	3750
Governed rpm Setting (Begins At:)		3850	3650
Rated rpm at Wide-Open-Throttle ²		3600-3800	3400-3600
Low Idle rpm		625 ± 25	
Oil Pressure:	750 rpm	10 psi [0.7 bar (69 kPa)] Minimum	
	3600 rpm	40-70 psi [2.8 - 4.8 bar (276-482 kPa)]	
Oil Temperature		190° - 250° F (88° - 121° C)	
Thermostat:	Water:	170° F (77° C)	
Coolant Temperature		170° - 210° F (77° - 99° C)	
Electrical System		12-volt Negative (-) Ground	
Alternator Rating		949W, 14.6v, 65A	
Recommended Battery Rating		1500 cca or 300 Ah	
Starter		12v, 2.7 kW	

¹ Power rated in accordance with NMMA Procedure - ISO 3046 (Technically Identical to ICOMIA 28-83).

² Refer to "Conditions Affecting Operation - Propeller Selection" for additional information.

Fluid Capacities

NOTICE
All capacities are approximate fluid measures.

ENGINES

NOTICE
Unit Of Measurement: U.S. Quarts (Liters).

Item	Specification - Inboard (MIE) D7.3L D-Tronic and D7.3L D-Tronic LD	
Total Oil-Filling Capacity ¹	16.5 (15.6)	
Oil Drainage:	from oil pan	13.5 (12.8)
	from oil filter	1 (1)
	from oil cooler	1 (1)
Closed Cooling System	26 (24-1/2)	

¹ Always use dipstick to determine exact quantity of oil required.

TRANSMISSIONS

NOTICE
UNIT OF MEASUREMENT: U.S. Quarts (Liters).

Model	Specification
Transmission - Hurth 630A - 8° Down Angle ¹	3-1/4 (3)
Transmission - Hurth 630V - V-Drive ¹	4-1/4 (4)


¹ Always use dipstick to determine exact quantity of oil required.

Maintenance

CE392


Power Package Views

FRONT

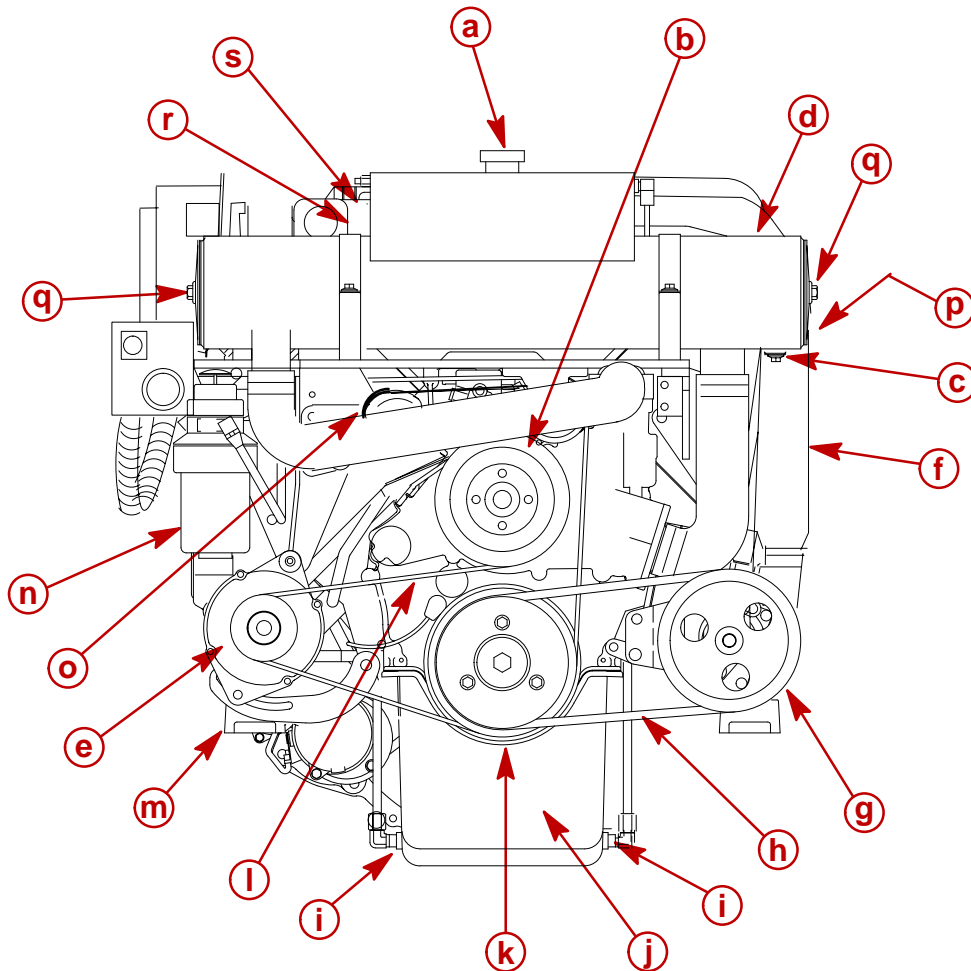


- a - Heat Exchanger/Coolant Tank Cap
- b - Engine Water Circulating Pump and Pulley
- c - Sacrificial Anode (On Heat Exchanger)
- d - Heat Exchanger/Coolant Tank
- e - Alternator
- f - Transmission Fluid Cooler
- g - Seawater Pump and Pulley
- h - Seawater Pump V-Belt
- i - Oil Pan Drain Plug
- j - Oil Pan
- k - Crankshaft Pulley
- l - Serpentine Belt
- m - Starboard Front Engine Mount
- n - Water Separating Fuel Filter
- o - Idler Pulley
- p - Engine Oil Dipstick
- q - Heat Exchanger End Cap (For Draining Seawater Cooling Water)
- r - Engine Oil Cooler
- s - Sacrificial Anode (On Engine Oil Cooler)

PORT (LEFT) SIDE

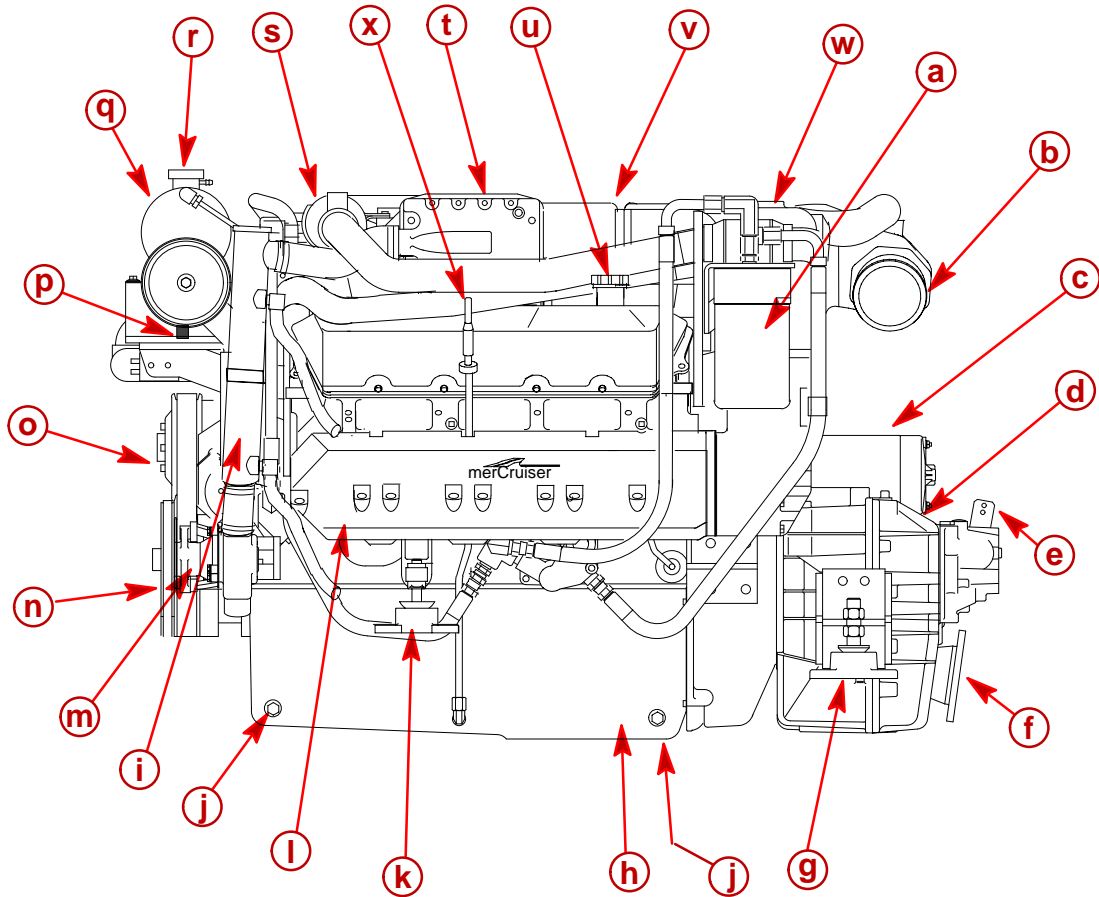

- a - Engine Oil Filter
- b - Exhaust Elbow
- c - Starter
- d - Transmission
- e - Shift Lever
- f - Coupler Flange
- g - Rear Engine Mount
- h - Oil Pan
- i - Transmission Fluid Cooler
- j - Oil Pan Drain Plug
- k - Front Engine Mount
- l - Exhaust Manifold
- m - Seawater Pump and Pulley
- n - Crankshaft Pulley
- o - Alternator
- p - Sacrificial Anode (On Heat Exchanger)
- q - Heat Exchanger/Coolant Tank
- r - Heat Exchanger/Coolant Tank Cap
- s - Engine Oil Cooler
- t - Aftercooler
- u - Engine Oil Fill Cap (Port)
- v - Air Filter
- w - Turbocharger
- x - Engine Oil Dipstick

76406

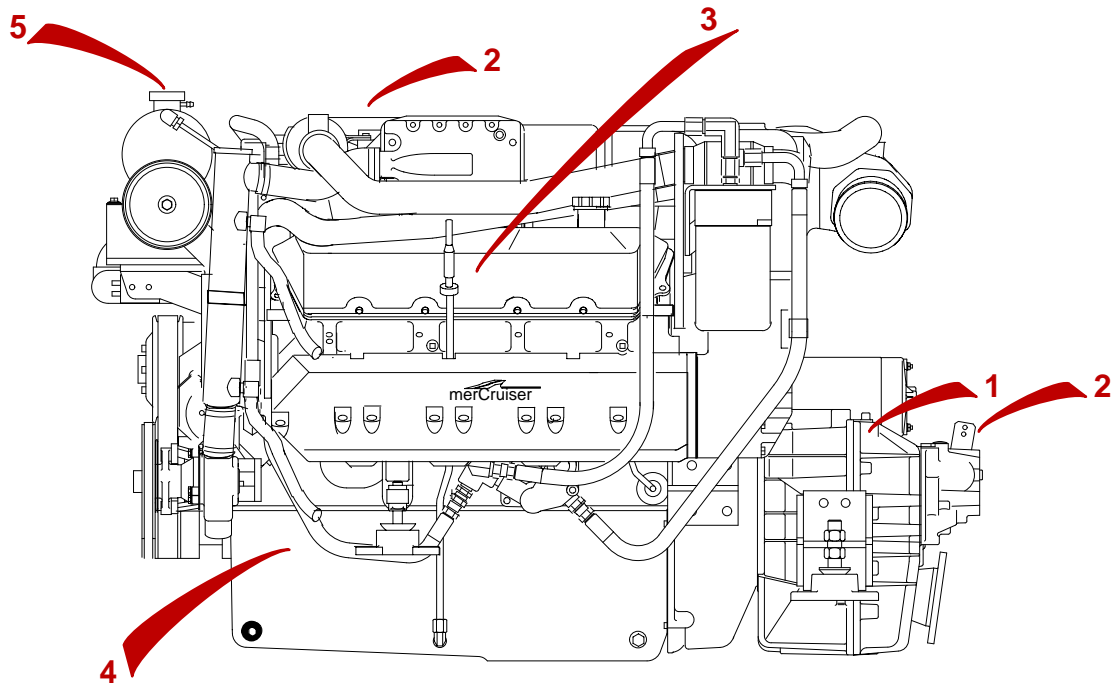

76406

CE348

General Information

⚠ WARNING

Always disconnect battery cables from battery before working around electrical system components to prevent injury to yourself or damage to electrical system.

⚠ WARNING

Always disconnect battery cables from battery BEFORE working on fuel system to prevent fire. This eliminates the engine wiring as a potential source of ignition.

IMPORTANT: Refer to Maintenance Schedules for complete listing of all routine and scheduled maintenance to be performed. Some listings can be done by owner/operator, while others should be performed by an Authorized Mercury MerCruiser Dealer. Before attempting maintenance or repair procedures not covered in this manual, it is recommended that a Mercury MerCruiser Service Manual(s) be purchased and read thoroughly.

NOTE: Maintenance points are color coded for ease of identification. See the decal on engine for identification.

CE

Maintenance Aids

- 1 Transmission Fluid - Dexron III automatic transmission fluid (ATF). Add fluid at dipstick hole.
- 2 All pivot points - SAE 30W motor oil.
- 3 All Exterior Surfaces - Quicksilver Primer and Spray Paint, as needed, and Quicksilver Corrosion Guard.
- 4 Crankcase Oil - use ONLY specified engine oil. Refer to "Specifications."
- 5 Closed Cooling System Coolant - use ONLY specified engine coolant. Refer to "Specifications."

Maintenance Schedules

Routine Maintenance *	Each Day Start	Each Day End	Weekly	Every Two Months
Check crankcase oil (interval can be extended based on experience).	•			
If operating in salt, brackish or polluted waters, flush cooling system after each use.		•		
Drain any water from fuel filter after each use (if operating in freezing temperatures).			•	
Check transmission fluid.			•	
Check water pickups for debris or marine growth. Check water strainer and clean. Check coolant level.			•	
Check battery connections and fluid level.				•
Clean air filter every 50 hours of operation.				•
Operating in Saltwater Only: treat engine surface with corrosion guard.				•

* Only perform maintenance which applies to your particular power package

Maintenance Schedules

Scheduled Maintenance *										
	After First 20 hours	After First 100 hours	Annually	Every 100 hours or Annually ◆	Every 200 hours or 3 years ◆	Every 2 years	Every 5 years	Every 500 hours or 5 years ◆	Every 1000 hours or 5 years ◆	Per OEM
Change crankcase oil and filter.	•									
Touch-up paint power package and spray with corrosion guard.			•							
Change crankcase oil and filter.				•						
Change transmission fluid.				•						
Replace fuel filter(s).				•						
Check steering system and remote control for loose, missing or damaged parts. Lubricate cables and linkages.				•						
Retorque engine mounts.				•						
Check electrical system for loose, damaged or corroded fasteners.				•						
Inspect condition and tension of belts.				•						

* Only perform maintenance which applies to your particular power package


◆ Whichever Occurs First

Maintenance Schedules

Scheduled Maintenance(Continued) *	After First 20 hours	After First 100 hours	Annually	Every 100 hours or Annually ◆	Every 200 hours or 3 years ◆	Every 2 years	Every 500 hours or 5 years ◆	Every 1000 hours or 5 years ◆	Per OEM
Check cooling system and exhaust system hose clamps for tightness. Inspect both systems for damage or leaks.				•					
Disassemble and inspect seawater pump and replace worn components.				•					
Clean seawater section of closed cooling system. Clean, inspect and test pressure cap. Check anodes on diesel models.				•					
Replace coolant.						•			
Replace air filter.					•				
Clean aftercooler core.							•		
Clean fuel tank.								•	
Check engine-to-propeller shaft alignment.									•

* Only perform maintenance which applies to your particular power package

◆ Whichever Occurs First

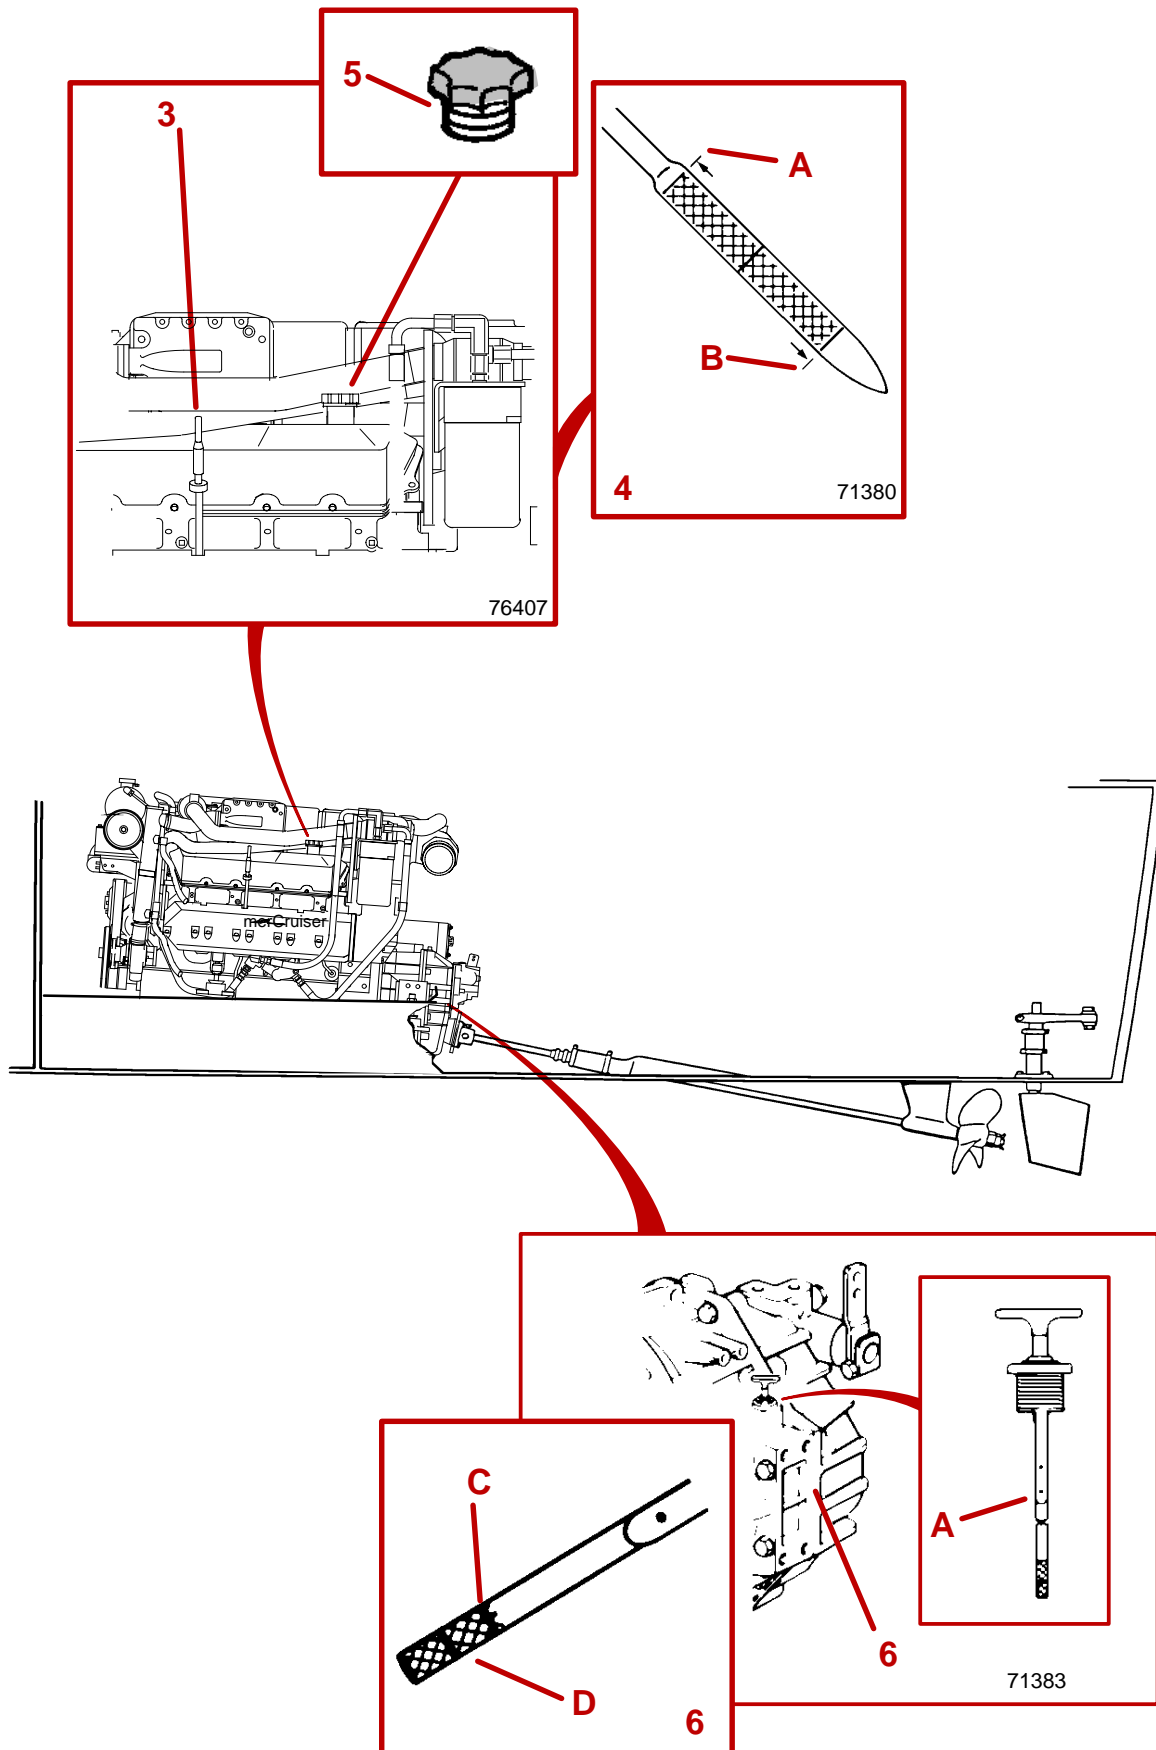

76407

Checking Fluids Levels

CRANKCASE OIL

1 It is a good practice to check engine oil daily before first start-up.

NOTE: *If it becomes necessary to check oil level during operation, stop engine and allow 5 minutes for oil to drain into pan.*

2 Remove dipstick. Wipe clean and reinstall into dipstick tube.

NOTE: *Oil dipstick may be located on either port or starboard side of engine depending on type of installation. Location is similar in any case.*

3 Remove dipstick and observe oil level. Oil must be between marks and on dipstick.

A MAXIMUM Oil Level - top line. Fill to this level; do not overfill.

B MINIMUM Oil Level - Do not allow oil level to drop below this line.

4 If necessary, add oil as follows: Remove oil filler cap (port oil filler cap is shown on opposite page - starboard similar). Add specified oil to bring level up to, but not over, "MAXIMUM" mark on dipstick. Reinstall oil filler cap.

TRANSMISSION FLUID

Hurth Hydraulic Transmission

5 Push handle down and seat fully to check fluid level.

A Remove dipstick. Dipstick has neoprene seal - twist and pull to remove. Check fluid level as indicated on dipstick. Fluid level may be somewhat over maximum mark, as some of the fluid from transmission fluid cooler and hoses may have drained back into transmission.

B If low, add transmission fluid to bring level up to maximum mark on dipstick.

C MAXIMUM Fluid Level - top line. Fill to this level; do not overfill.

D MINIMUM Fluid Level - do not allow fluid level to drop below this line.

IMPORTANT: **To accurately check fluid level, engine must be run at 1500 RPM for two minutes immediately prior to checking level.**



E Start engine and run at 1500 RPM for two minutes to fill all hydraulic circuits.

IMPORTANT: **Be sure to push dipstick all the way down into dipstick tube when checking fluid level.**



F Stop engine and quickly check fluid level. Add automatic transmission fluid, if necessary, to bring level up to maximum mark on dipstick.

G Reinstall dipstick.

H If transmission fluid level was extremely low, contact your Authorized Mercury MerCruiser Dealer.

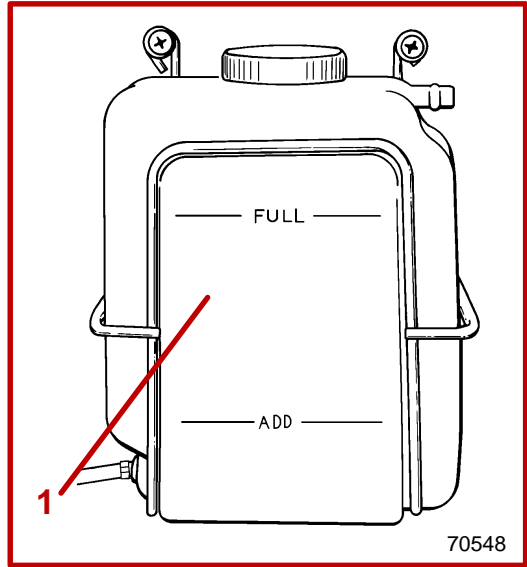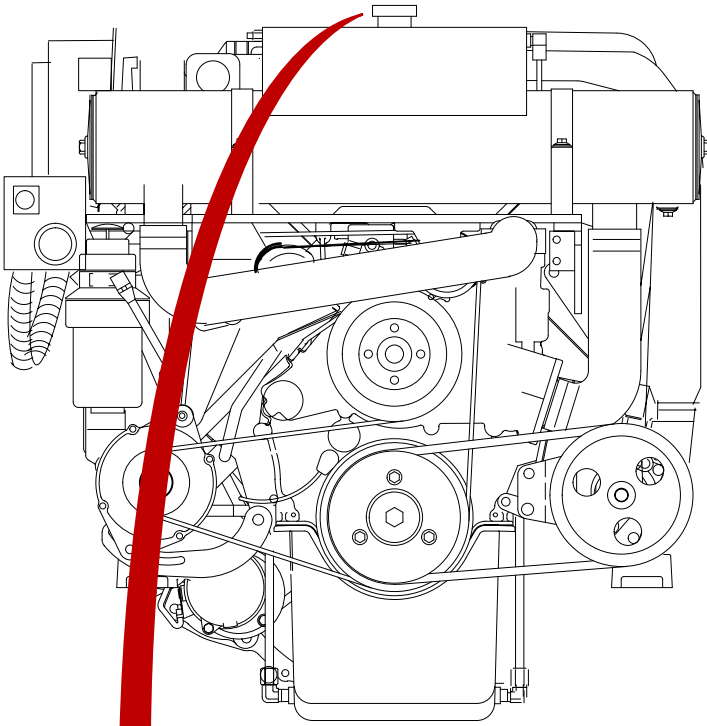

76408

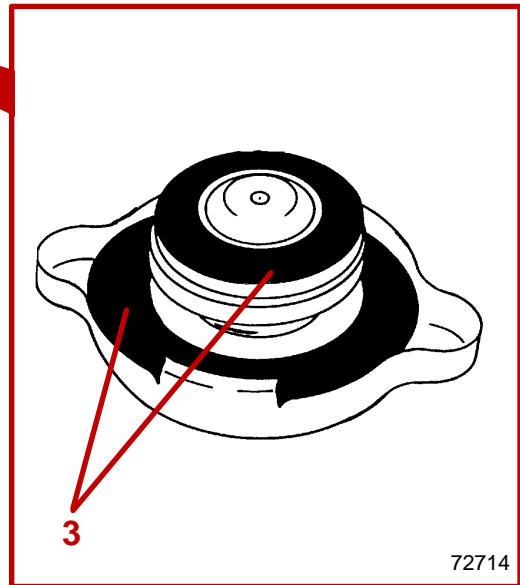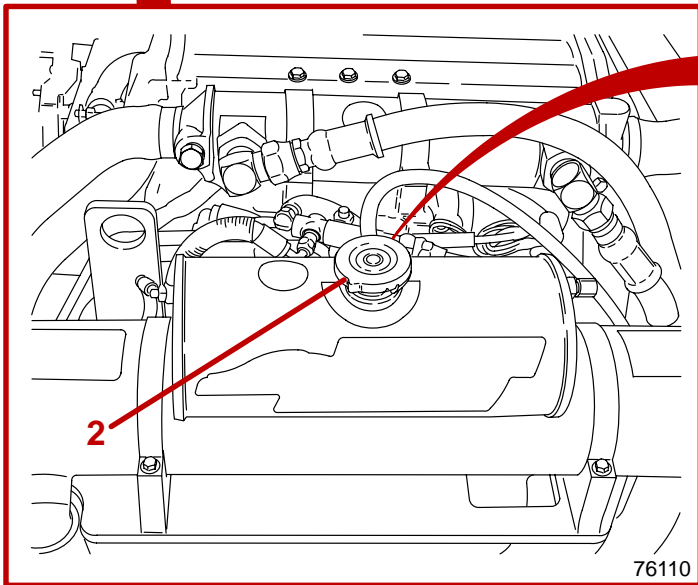

ENGINE COOLANT

1 Check coolant level in coolant recovery bottle. Add specified coolant as required.

NOTE: Coolant recovery system is considered to be functioning properly when coolant level in heat exchanger/coolant tank remains at bottom edge of filler neck.

⚠ WARNING

Do not remove coolant tank cap when engine is hot. Coolant may discharge violently, causing severe burns.




2 Periodically, to ensure that coolant recovery system is functioning properly, you should allow engine to cool and then *slowly and carefully* remove coolant tank cap. Coolant level must be to the bottom edge of the tank filler neck. If coolant is low, add coolant as necessary to bring up to proper level. Refer to “Specifications” for proper coolant.

3 If coolant level was low:

- Inspect coolant recovery system for leaks.
- Inspect coolant tank cap gaskets for damage and replace if necessary.
- Also, the tank cap maintains pressure on the coolant tank. It may not be holding pressure properly. To have cap tested, contact your Authorized MerCruiser Dealer.

⚠ CAUTION

If the coolant should get extremely low and the engine very hot, let the engine cool for approximately 15 minutes before adding coolant; then, with the engine running, add coolant slowly. Adding cold coolant to a hot engine may crack the cylinder head or crankcase. Never use water alone.

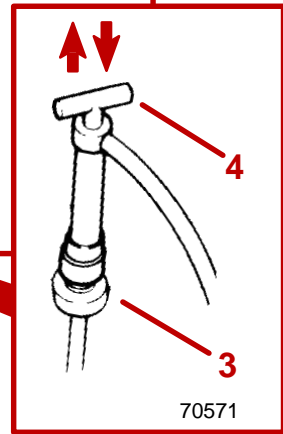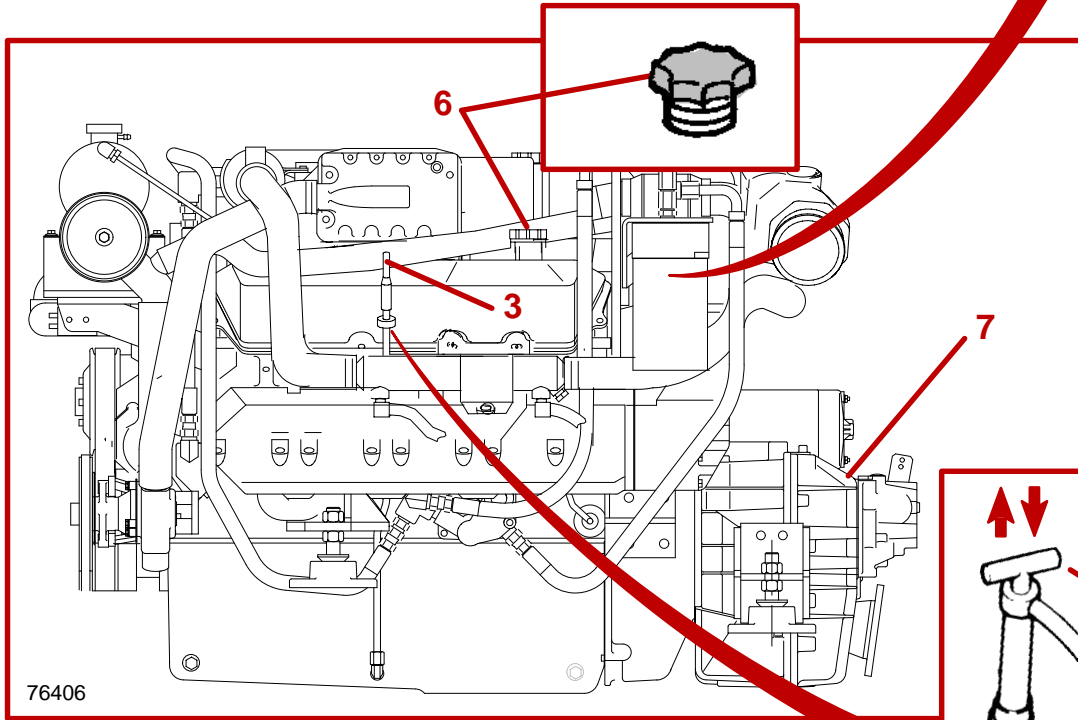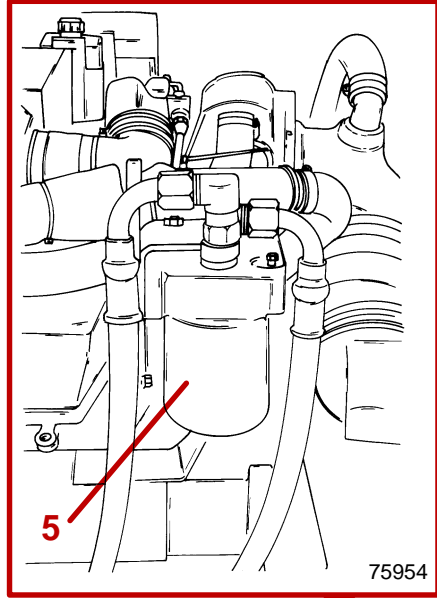

Changing Fluids

See Maintenance Schedules for lubricant change interval. Lubricant should be changed before placing boat in storage.

Coolant in closed cooling system should be changed at specified intervals by your Authorized Mercury MerCruiser Dealer.

CRANKCASE OIL AND FILTER

IMPORTANT: Change oil when engine is warm from operation. Warm oil flows more freely, carrying away more impurities. Use only recommended motor oil (refer to “Specifications”).

- 1 Start engine and allow it to warm up to normal operating temperature.
- 2 Stop engine and allow some time for oil to drain into oil pan (approximately 5 minutes).
- 3 Remove oil dipstick and install crankcase oil pump.







NOTE: *Oil dipstick may be located on either port or starboard side of engine depending on type of installation. Location is similar in any case.*

- 4 Pump oil out of crankcase into drain pan. When crankcase is empty, remove pump. Install oil dipstick.
- 5 Remove and discard oil filter and sealing ring (not visible in picture). Coat sealing ring on new filter with oil and install filter. Hand tighten only, do not use a filter wrench.

IMPORTANT: When refilling engine with oil always use dipstick to determine how much oil is required.

- 6 Remove oil fill cap (port oil filler cap is shown on opposite page - starboard similar) and refill engine to proper level with new oil (refer to “Specifications” for quantity and grade of oil). Use dipstick to determine exactly how much oil is required.

IMPORTANT: Keep oil level as near the high level mark as possible. Never operate an engine with oil level below low level mark. DO NOT OVERFILL!

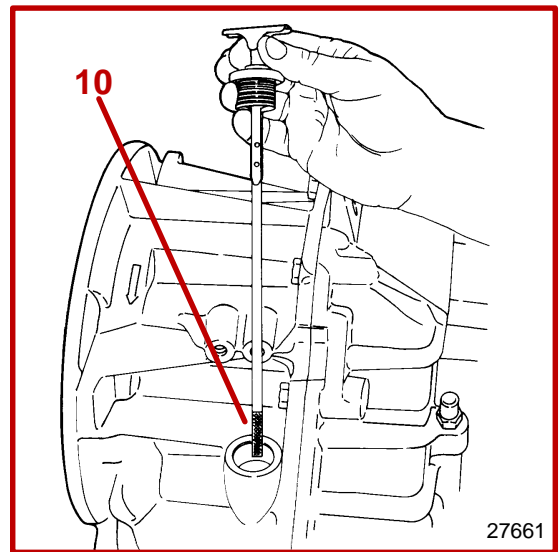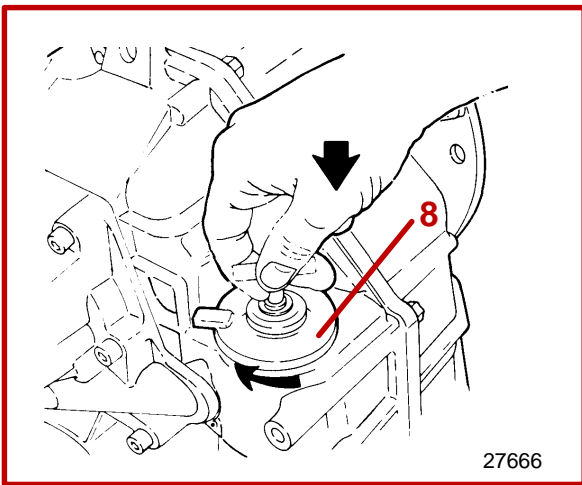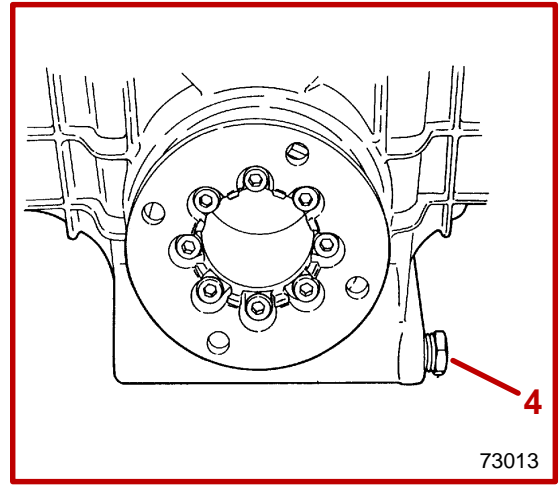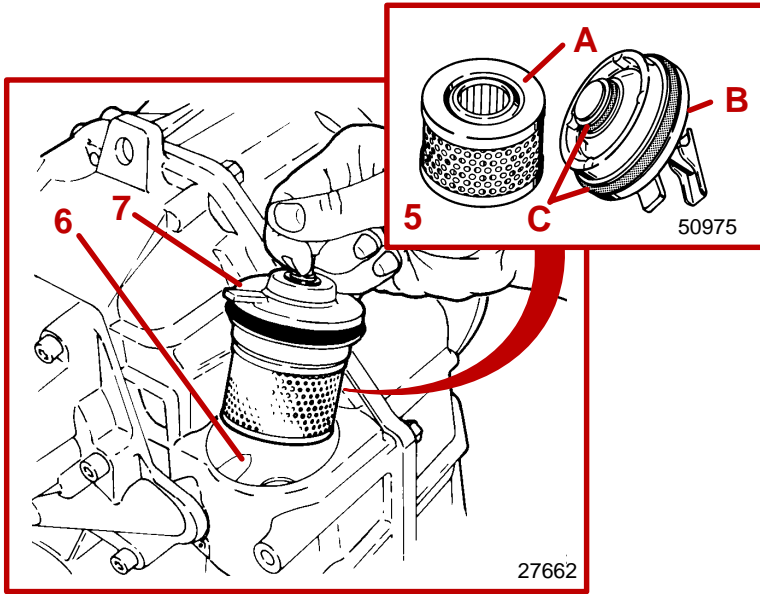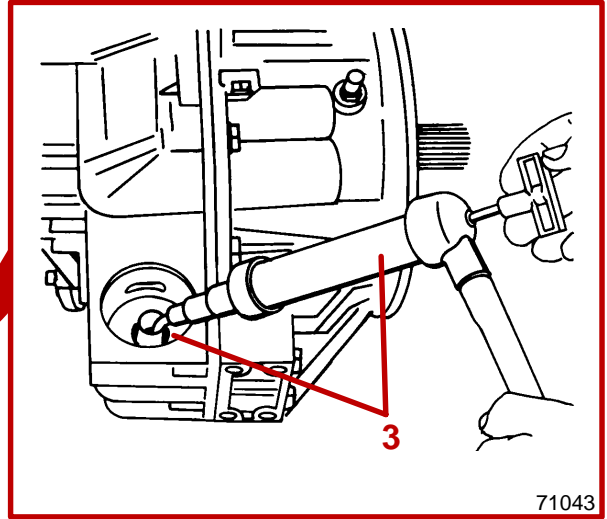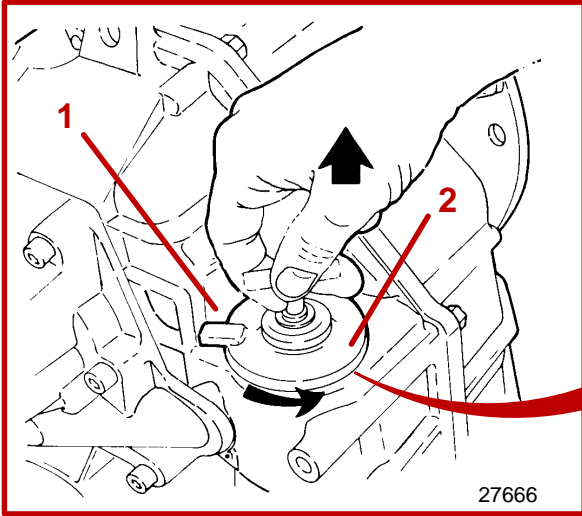

Transmission Fluid

DRAINING

- 1 Clean the exterior of transmission near fluid filter.
- 2 Remove fluid filter from housing by turning (counterclockwise) and pulling at the same time.
- 3 **Hurth Down-Angle Models:** Push hose of suction pump through suction pipe and down to the bottom of the housing. Pump fluid from housing.
- 4 **Hurth V-Drive Models:** Remove drain plug from transmission and allow fluid to drain. Reinstall drain plug and tighten securely

FILLING







IMPORTANT: Use only recommended Automatic Transmission Fluid (ATF).

- 5 Remove filter element from cover and inspect O-rings for wear. Replace if necessary
 - A Filter Element
 - B Cover
 - C O-rings
- 6 Fill transmission to proper level, through fluid filter cavity. Refer to "Specifications - Fluid Capacities".
- 7 Coat O-rings on filter cover with transmission fluid.

CAUTION

Transmission fluid filter and cover must be properly seated to avoid fluid foaming and/or loss of fluid resulting in decreased efficiency and/or damage to transmission.

- 8 Push down until cover is fully seated (top of cover flush with housing), then turn T-handle clockwise until tight.
- 9 Start engine and run for two minutes to fill system with fluid.
- 10 Stop engine and quickly check fluid level. Fluid should be between min. and max. lines on dipstick.

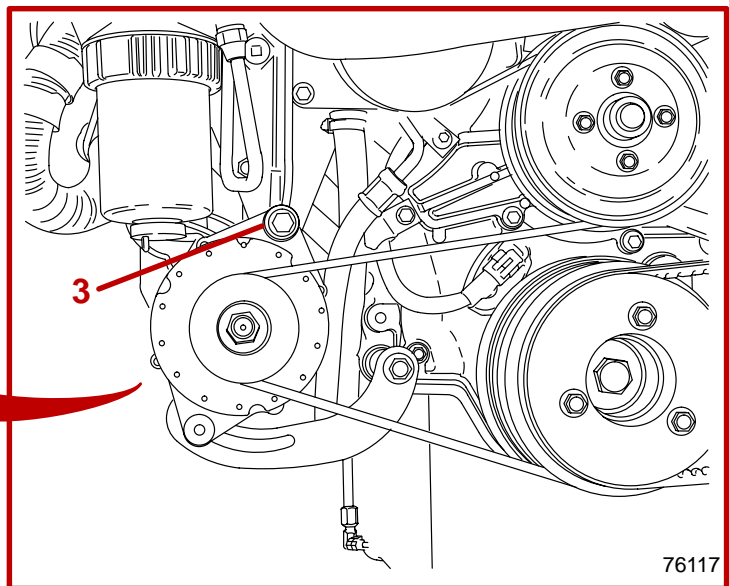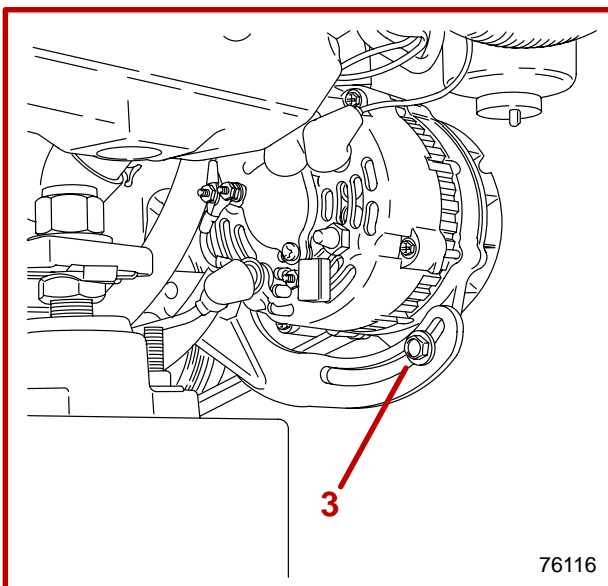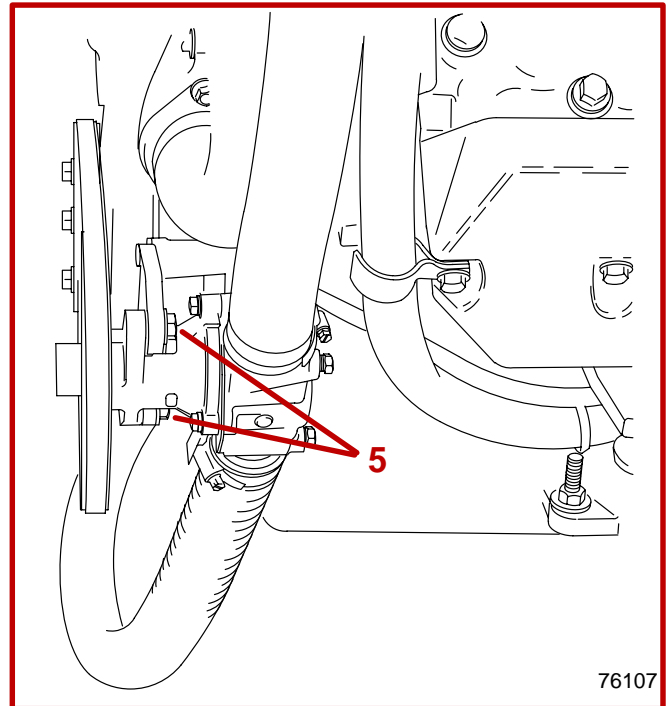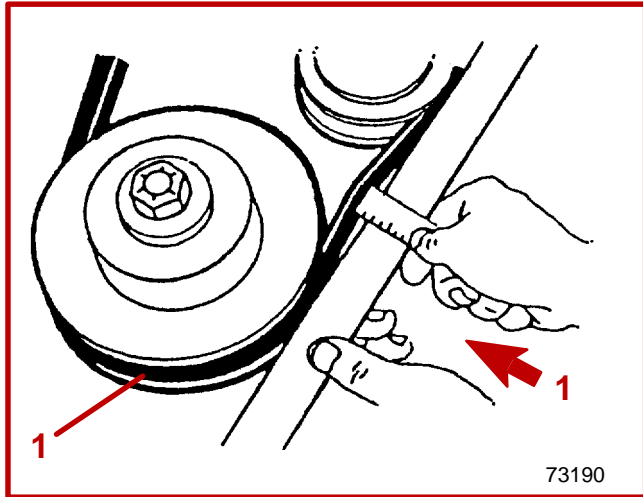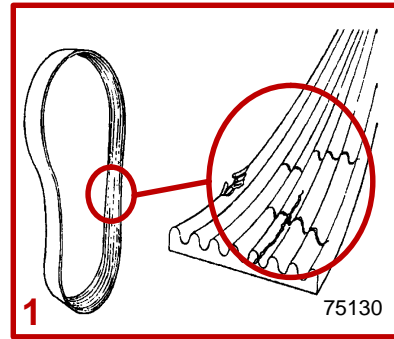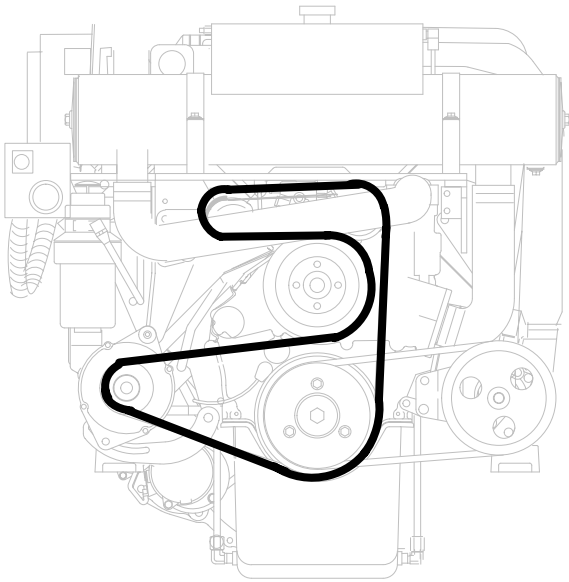

Drive Belts

CHECKING

WARNING

Avoid possible serious injury. Make sure engine is shut off and ignition key is removed before inspecting belts or pulleys.

IMPORTANT: Observe the following drive belt and pulley guidelines:

- Do not use belt dressing.
- When replacing a belt, the pulley alignment must be checked under tensioned condition (brackets securely clamped). A misalignment that can be detected by visual inspection is detrimental to the belt performance.
- If a belt is disturbed for any reason, it must be correctly tensioned prior to operation.
- Replace pulleys if worn, or clean if still suitable for service.

1 Inspect drive belt for proper tension and for the following:

- Excessive wear.
- Cracks.

NOTE: *On serpentine belts minor, transverse cracks (across the belt width) may be acceptable. Longitudinal cracks (in direction of belt length) that join transverse cracks are NOT acceptable.*

- Fraying.
- Grease, fuel or oil soaked.
- Glazed surfaces.
- Proper tension - 1/2 inch (13 mm) deflection for the V-belt, or 3/16 inch (5 mm) deflection for the serpentine belt. Check belt tension by depressing upper strand of belt with moderate thumb pressure at midpoint between the pulleys on the longest span.

REPLACING AND / OR ADJUSTING TENSION

IMPORTANT: If a belt is to be reused, it should be installed in the same direction of rotation as before.





NOTE: *During belt replacement, do not force belt(s) into pulley grooves by prying with a screwdriver, pry bar, etc. This will damage belt side cords which will cause belt(s) to turn over in pulley grooves and result in complete destruction of belt(s).*

Alternator / Circulating Pump Belt

- 2** Remove seawater pump belt.
- 3** Loosen mounting bolt and tensioning bolt. Move alternator. Remove old belt and install new belt. Adjust belt tension. When tension is correct, retighten all fasteners securely.
- 4** Operate the engine for a short period of time. Recheck belt adjustment.

Seawater Pump Belt

- 5** Loosen mounting bolt and tensioning bolt. Move seawater pump. Remove old belt and install new belt. Adjust belt tension. When tension is correct, retighten all fasteners securely.
- 6** Operate the engine for a short period of time. Recheck belt adjustment.

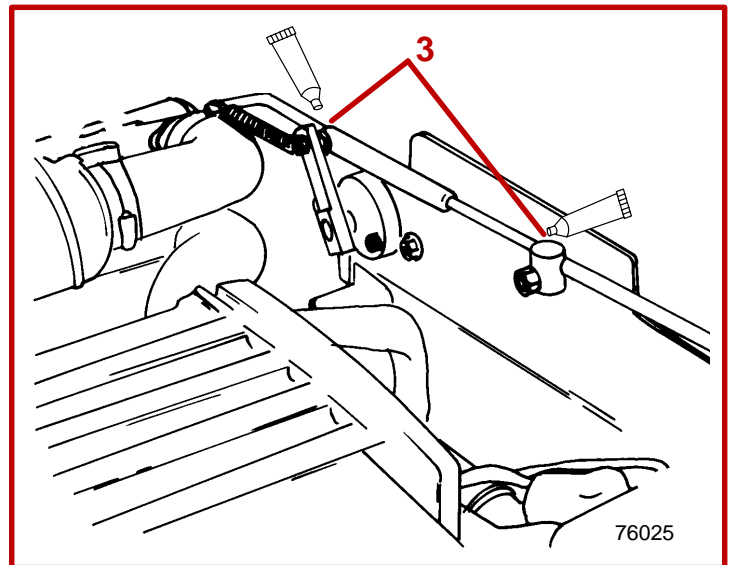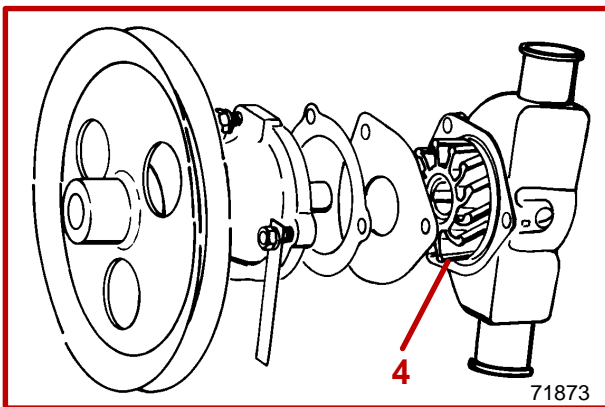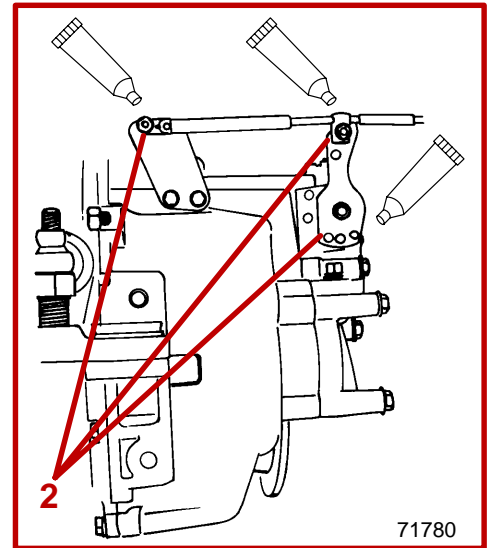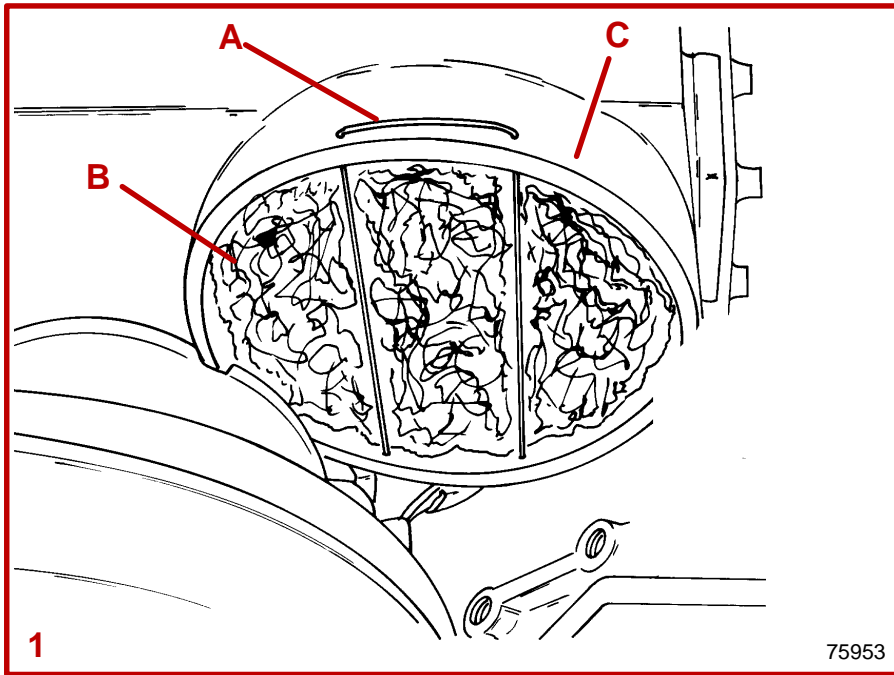

CD572

Air Filter - Cleaning and Replacement

1 Disconnect and remove wire retainer. Carefully remove air cleaner element from air intake housing. Wash element in warm water and detergent until clean.

CAUTION

Avoid potential fire hazards and personal injury, do not clean elements in petroleum based solvents or cleaners.

IMPORTANT: No treatment (such as partial oil saturation) is required or recommended on air cleaner element prior to use. Use element clean and dry for proper filtration.

Allow element to completely dry before use. Replace the element if it is deteriorated or torn.

IMPORTANT: To prevent unfiltered air from entering the engine be certain that all of the air intake screen is covered by the element when installed.

- A Wire Retainer
- B Air Cleaner Element
- C Air Intake Housing

CE55

Lubrication

SHIFT CABLE

2 Lubricate pivot points with SAE 30W motor oil.

CA73

THROTTLE CABLE




3 Lubricate pivot points with SAE 30W motor oil.

CB66

Seawater Pump Impeller

This maintenance should be performed by an Authorized MerCruiser Dealer.

4 Seawater pump impeller should be inspected whenever insufficient seawater flow is suspected (if operating temperature exceeds normal range).

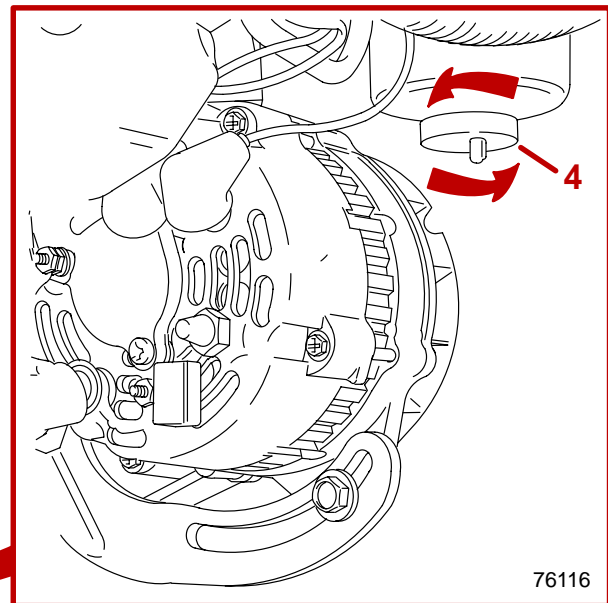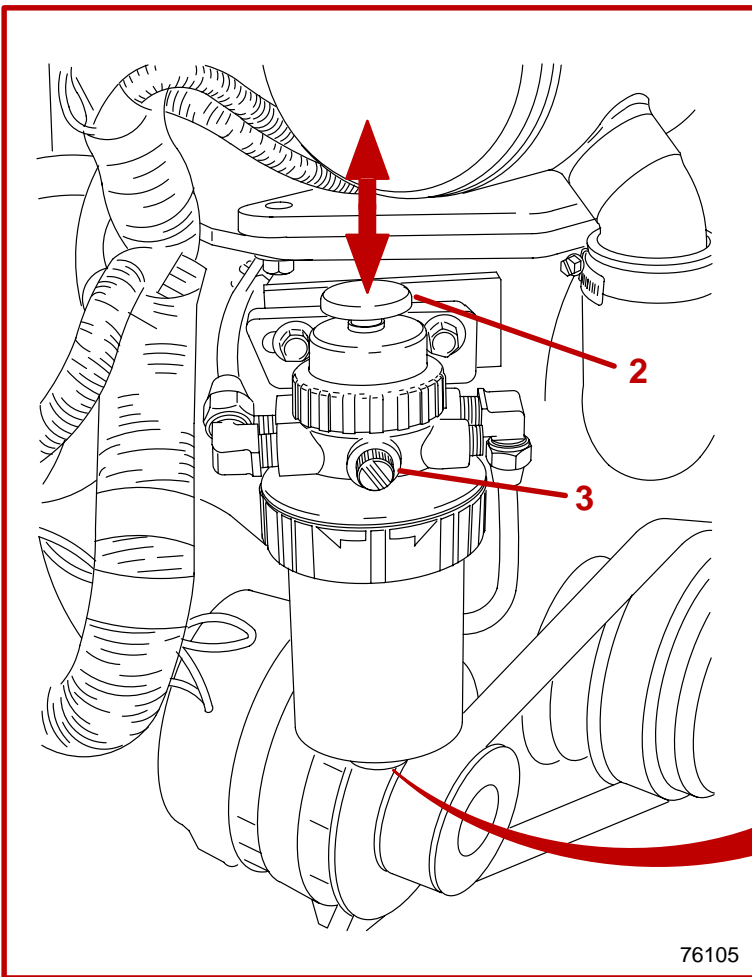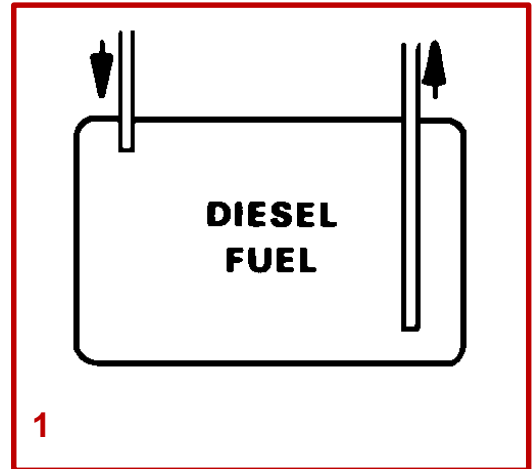

Fuel System

⚠ CAUTION

Absolute cleanliness is required for work on the fuel system, fuel injection components have very close tolerances. Even minute particles of dirt or small amounts of water can impair the function of the fuel injection system.

FUEL TANK CLEANING AND FLUSHING

IMPORTANT: Diesel fuel should not be left in tank during winter storage, as an accumulation of rust, sludge and wax residue will form.

1 Refer to boat manufacturer's instructions and clean fuel tank at specified intervals. Unless specified otherwise, flush and clean diesel fuel tank every 1000 hours or 5 years, whichever occurs first.

CD283

HAND PUMP/PRIMER

2 A plunger-type of hand pump/primer is located on the fuel filter bracket and is used to: (1) refill fuel system if system was run dry; (2) refill fuel filter when changing filter; or (3) to prime the fuel system if engine has not been run for a while.

To operate the hand pump/primer, move the plunger (upper portion) up and down as needed.

CE63

PRIMING FUEL SYSTEM

Prime engine if it has not been run for a while or if engine will not start. Move the hand pump/primer plunger up and down several times as previously outlined. Attempt to start engine.

CD284

FILLING FUEL FILTER

NOTE: Follow this procedure after installing new filter or if fuel has been drained from filter checking for water.

3 Loosen bleed screw on fuel filter bracket. As previously outlined, move plunger on hand pump/primer up and down repeatedly, until an air free stream of fuel flows from bleed screw. Filter is full when this occurs. Tighten bleed screw.

CD578

DRAINING WATER SEPARATING FUEL FILTER


⚠ WARNING

Be careful when draining water separating fuel filter. Diesel fuel is flammable. Be sure ignition key is OFF. Do not allow fuel to contact any hot surfaces which may cause it to ignite. Do not allow sources of open flame in the area. Wipe up any spilled fuel immediately. Dispose of fuel soaked rags, paper, etc. in an appropriate air tight, fire retardant container. Fuel soaked items may spontaneously ignite and result in a fire hazard which could cause serious bodily injury or death.

IMPORTANT: Keep diesel fuel away from drive belts and other engine components that could be harmed from being exposed to, or saturated with, diesel fuel.

4 The filter can be drained of water and small dirt particles by opening drain cock at bottom of filter. Open by turning the drain counterclockwise (as viewed from the bottom of the filter). Drain until fuel is clear in appearance. Close drain by turning clockwise. Tighten securely. Fill fuel filter as previously outlined.

NOTE: To ensure complete draining, in warm weather open the water bleed valve before starting daily operations. In cold weather, where there is a possibility that the condensed water will freeze, drain the filter shortly after the end of daily operations.

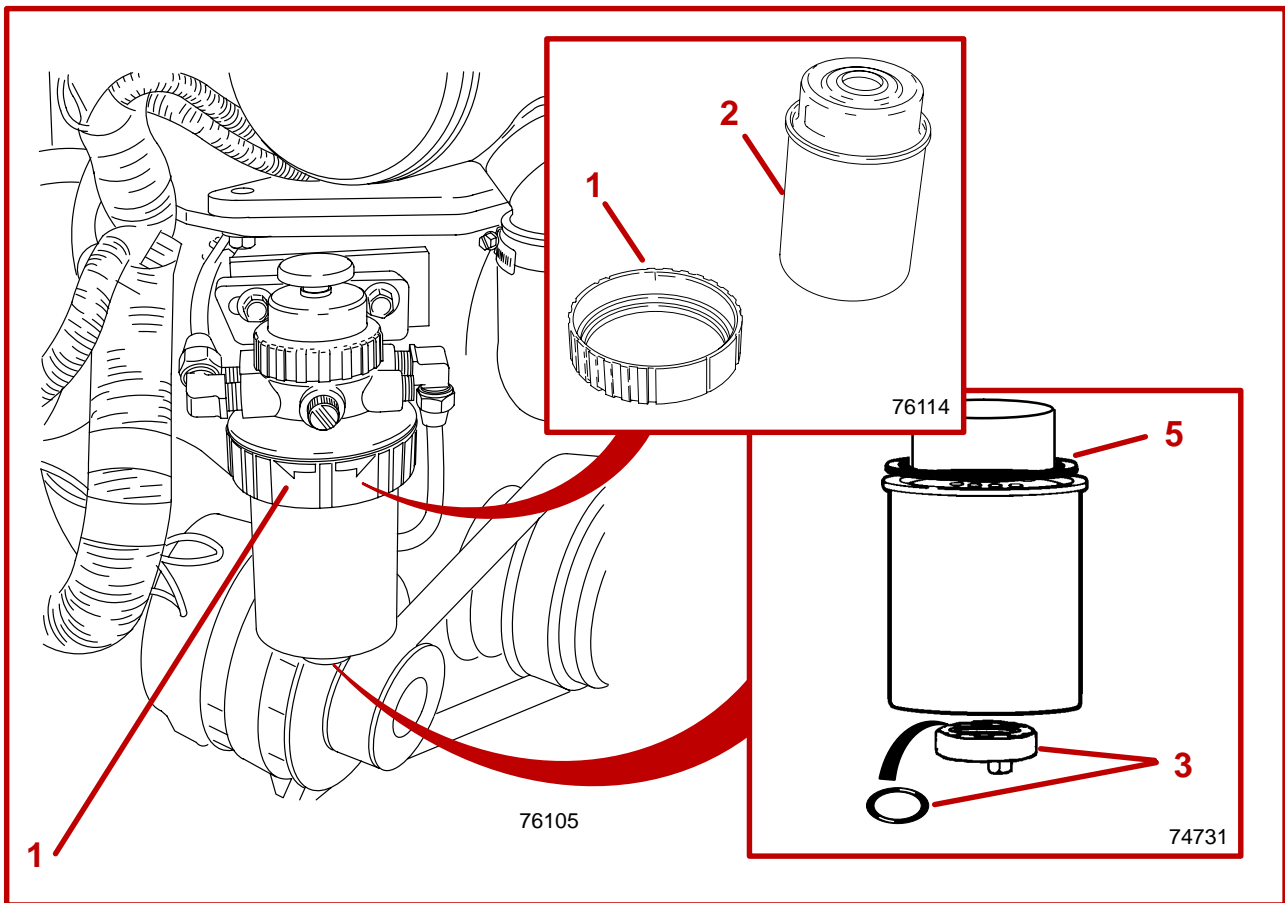

REPLACING WATER SEPARATING FUEL FILTER**⚠ CAUTION**

Any water entering the fuel injection system will disable the system. Check for water in water separating fuel filter before startup, daily.

⚠ CAUTION

If water should enter the fuel injection system, take unit to an Authorized MerCruiser Dealer IMMEDIATELY, so that corrosion and rusting of the injectors and other components can be avoided.

⚠ WARNING




Be careful when changing water separating fuel filter. Diesel fuel is flammable. Be sure ignition key is OFF. Do not allow fuel to contact any hot surfaces which may cause it to ignite. Do not allow sources of open flame in the area. Wipe up any spilled fuel immediately. Dispose of fuel soaked rags, paper, etc. in an appropriate air tight, fire retardant container. Fuel soaked items may spontaneously ignite and result in a fire hazard which could cause serious bodily injury or death.

- 1 Remove filter retaining ring.
- 2 Pull down on filter to remove it.
- 3 Remove the drain cap and O-ring from bottom of the filter. Install on new filter. Check that bottom drain cap is securely tightened.
- 4 Clean filter sealing surface on fuel filter adaptor.
- 5 Install new gasket.
- 6 Install new filter and secure with retaining ring.
- 7 Fill fuel filter as explained previously. Check drain cap for fuel leaks.

⚠ WARNING

Make sure no leaks exist before closing engine hatch.

- 8 Start and run engine. Check filter connection for fuel leaks. If leaks exist, recheck filter installation. If leaks continue, stop engine immediately and contact your Authorized Mercury MerCruiser Dealer.

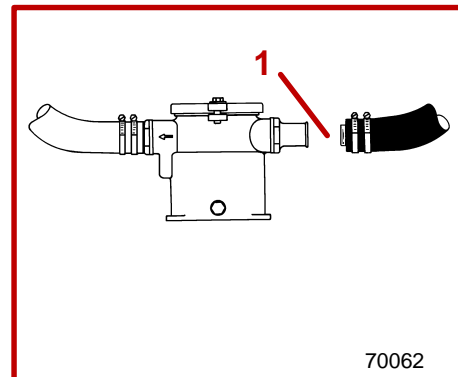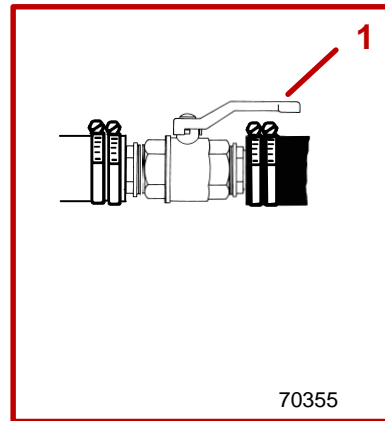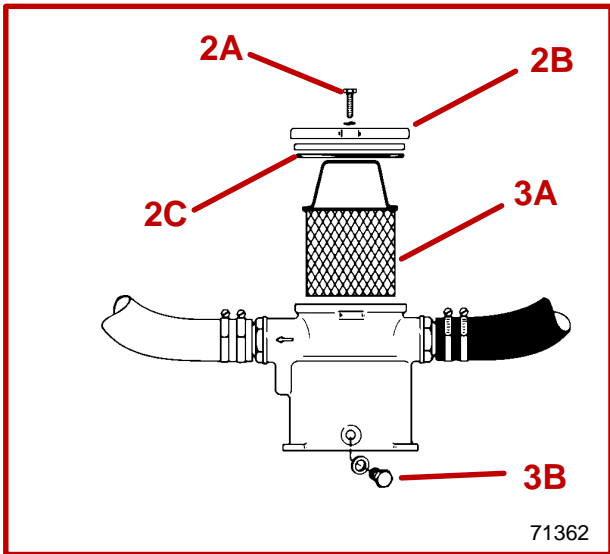






Cleaning Quicksilver Seawater Strainer

NOTE: Refer to manufacturers instructions if equipped with other than a Quicksilver seawater strainer.

CAUTION

When cleaning seawater strainer, close seacock, if so equipped. If boat is not equipped with a seacock, remove and plug seawater inlet hose to prevent a siphoning action that may occur, allowing seawater to flow from the drain holes or removed hoses.

- 1 With engine off, close seacock if equipped, or remove and plug seawater inlet hose.
- 2 Remove screws, washers, cover and gasket.
 - A Screws and Washers
 - B Cover
 - C Gasket
- 3 Remove strainer, drain plug and washer, and clean any debris from strainer housing; flush both strainer and housing with clean water.
 - A Strainer
 - B Drain Plug and Washer
- 4 Check gasket - replace when necessary (if it leaks).
- 5 Reinstall drain plug and washer. Reattach cover with screws and washers.
- 6 Prior to starting engine, open seacock if so equipped, or remove plug from seawater inlet hose and reconnect. Tighten hose clamps securely.
- 7 After starting engine, check for leaks, and/or air in system (which would indicate an external leak).

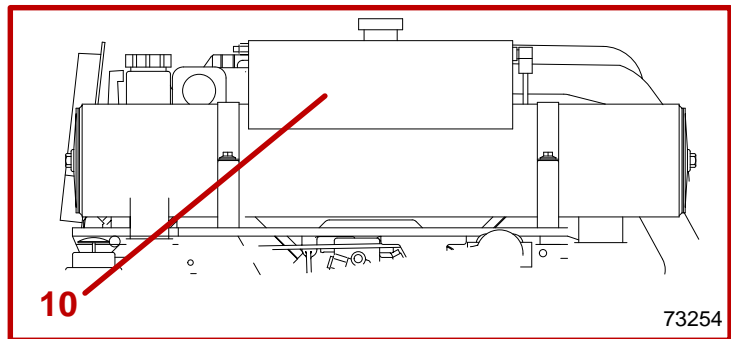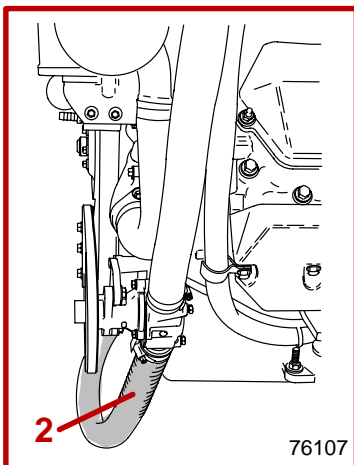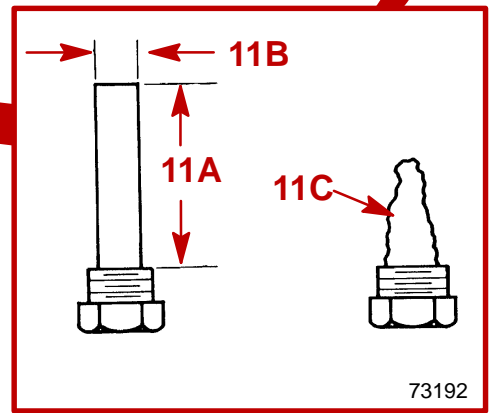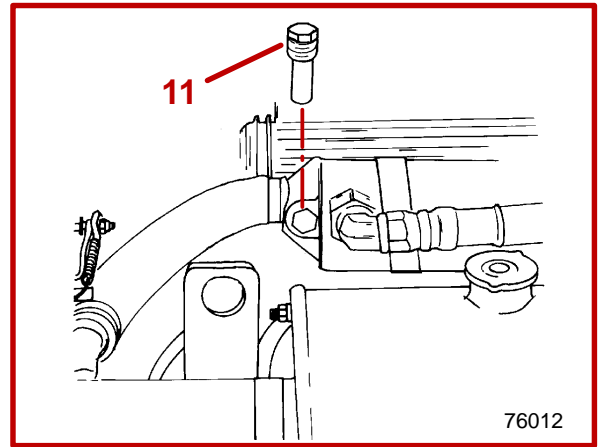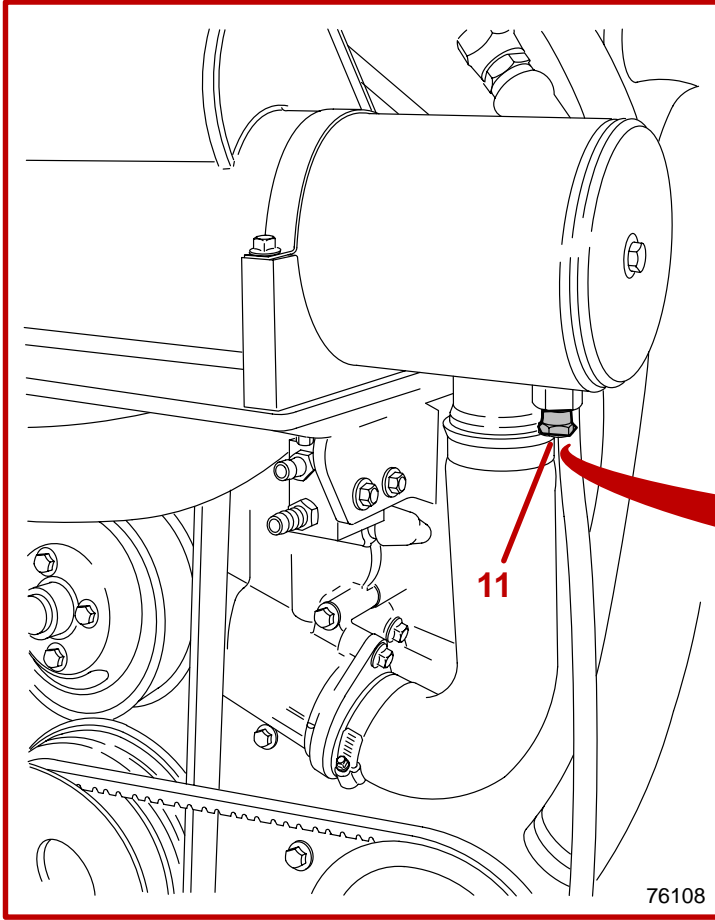

Flushing Seawater Cooling System

⚠ WARNING

When flushing, be certain the area around propeller is clear, and no one is standing nearby. To avoid possible injury, remove propeller.

⚠ CAUTION

Do not run engine above 1500 rpm when flushing. Suction created by seawater pickup pump may collapse flushing hose, causing engine to overheat.

⚠ CAUTION

Watch temperature gauge on dash to ensure that engine does not overheat.

⚠ CAUTION

If cooling system is to be flushed with boat in the water, water inlet valve (if so equipped) must be closed, or water inlet hose must be disconnected and plugged to prevent water from flowing into boat.

⚠ CAUTION

If boat is in the water, do not open water inlet valve until engine is to be restarted, to prevent contaminated water from flowing back into engine.

NOTE: To prevent silt and/or salt buildup in cooling system, flush with freshwater at specified intervals.

- 1 If boat is in the water, close water inlet valve (if equipped) or disconnect and plug seawater inlet hose.
- 2 Disconnect water inlet hose (lower hose) from seawater pickup pump.
- 3 Using appropriate connector, connect hose between connector and water tap.
- 4 Partially open water tap (about 1/2 maximum).
- 5 Place remote control in NEUTRAL, idle speed position, and start engine.
- 6 Operate engine at idle speed, in NEUTRAL, for about 10 minutes or until discharge water is clear.
- 7 Stop engine.
- 8 Shut off water, remove flushing connector from pump inlet and reconnect water inlet hose.
- 9 Tighten hose clamp securely.
- 10 The closed section of cooling system that contains coolant does not need to be flushed. Coolant is changed at specified intervals. Refer to "Maintenance Schedules."

Corrosion And Corrosion Protection

INTERNAL COMPONENTS



11 Sacrificial anodes are installed in the cooling system. They are mounted in the oil cooler and heat exchanger.

Check at least once yearly. Replace when eroded more than 50%.

A Length When New - 1-1/2 in. (38 mm)

B Diameter When New - 1/2 in. (13 mm)

C Example of a deteriorated anode.

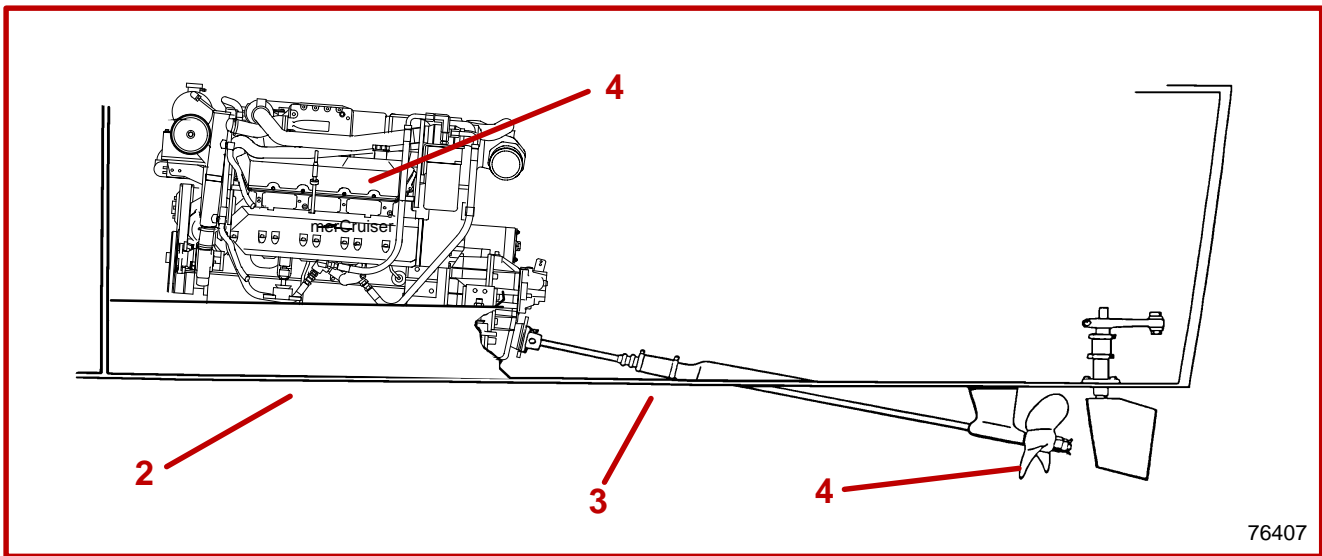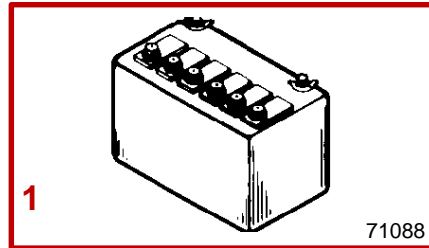

Miscellaneous Maintenance

BATTERY

1 All lead acid batteries discharge when not in use. Recharge every 30 to 45 days, or when specific gravity drops below battery manufacturer's specifications.

Refer to specific instructions and warnings accompanying your battery. If this information is not available, observe the following precautions when handling a battery.

⚠ WARNING

Do not use jumper cables and a booster battery to start engine. Do not recharge a weak battery in the boat. Remove battery and recharge in a ventilated area away from fuel vapors, sparks or flames.

⚠ WARNING

Batteries contain acid which can cause severe burns - Avoid contact with skin, eyes and clothing. Batteries also produce hydrogen and oxygen gasses when being charged. This explosive gas escapes fill/vent cell caps, and may form an explosive atmosphere around the battery for several hours after it has been charged; sparks or flames can ignite the gas and cause an explosion which may shatter the battery and could cause blindness or other serious injury.

Safety glasses and rubber gloves are recommended when handling batteries or filling with electrolyte. Hydrogen gases that escape from the battery during charging are explosive. When charging batteries, be sure area where batteries are located, is well-vented. Battery electrolyte is a corrosive acid and should be handled with care. If electrolyte is spilled or splashed on any part of the body, immediately flush the exposed area with liberal amounts of water and obtain medical aid as soon as possible.

BOTTOM OF BOAT

2 To maintain maximum speed, the following conditions regarding the boat bottom should be observed:

- Clean, free of barnacles and marine growth.
- Free of distortion, nearly flat where it contacts water.
- Straight and smooth fore and aft.

ANTIFOULING PAINTS


3 Antifouling Paint - In some areas it may be advisable to paint bottom of boat to help prevent marine growth. See your dealer for recommendations for your boat.

INSPECTION AND MAINTENANCE

4 Inspect and/or maintain the following:

- Inspect power package often, and at regular intervals, to help maintain its top operating performance, and correct potential problems before they occur. The entire power package should be checked carefully including all accessible engine parts.
- Check for loose, damaged or missing parts, hoses and clamps; tighten or replace as required.
- Remove and inspect propeller. If badly nicked, bent or cracked, see your dealer.
- Repair nicks and corrosion damage on power package exterior finish. Use Quicksilver spray paints - see your Authorized MerCruiser Dealer.
- Spray power package components on inside of boat every 2-3 weeks with Quicksilver Corrosion Guard to protect finish from dulling and corrosion. External power package components may also be sprayed.
- All lubrication points (especially steering system, shift and throttle linkages) should be kept well lubricated.
- Flush seawater cooling circuit periodically (preferably after each use).

Cold Weather Or Extended Storage

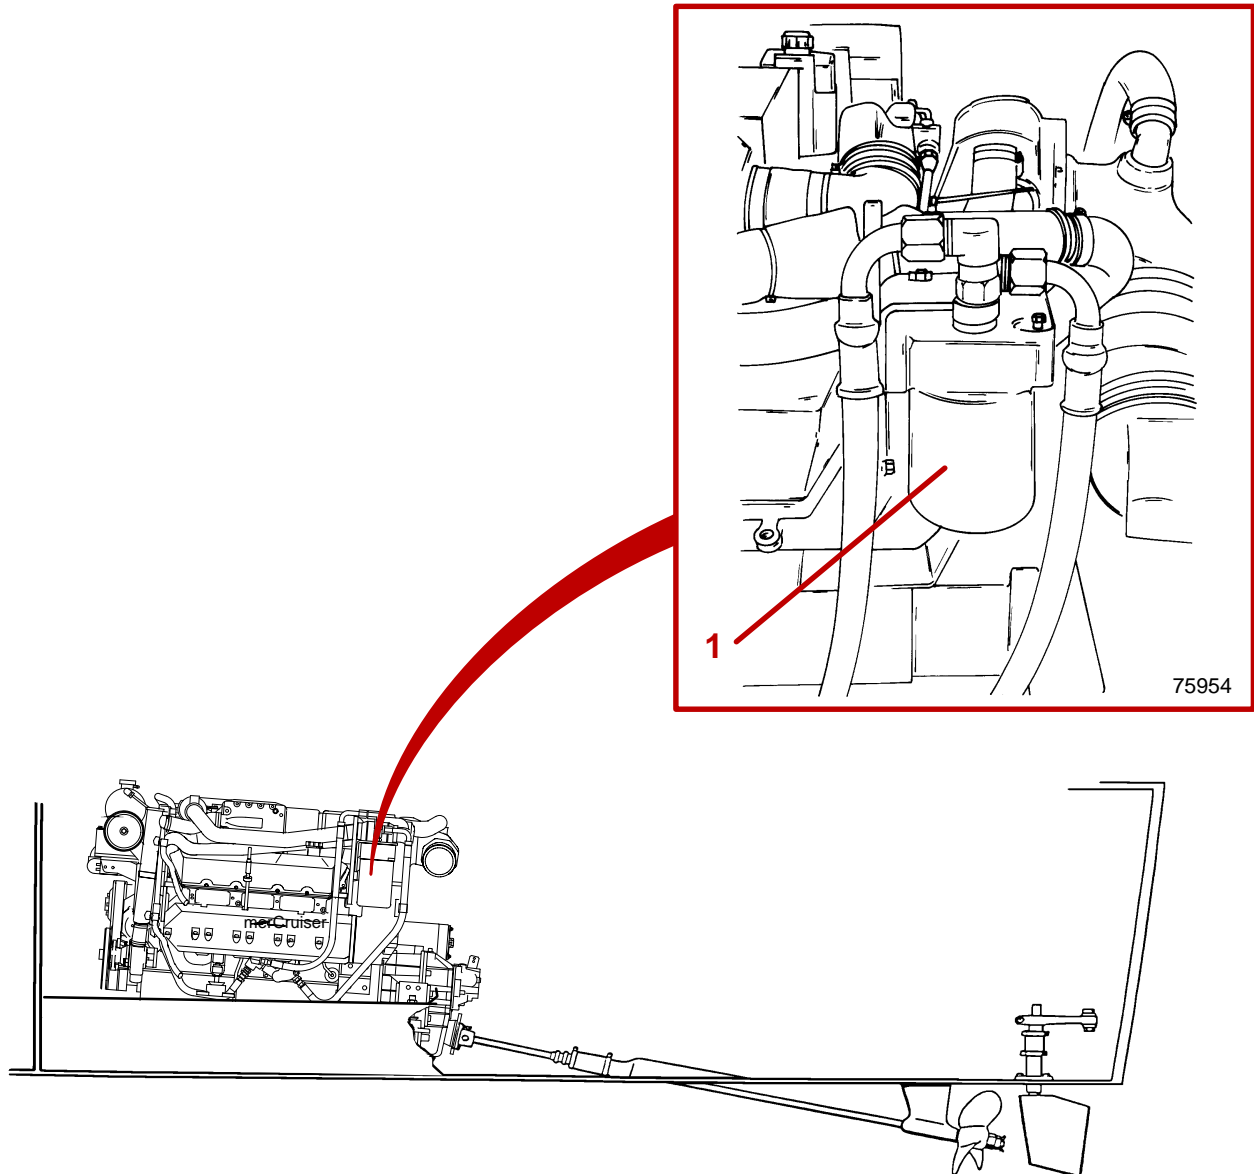

Power Package Layup

IMPORTANT: This service should be performed by an Authorized Mercury MerCruiser Dealer.

CAUTION

The engine must be prepared for long storage periods to prevent internal corrosion and severe damage.

IMPORTANT: If boat has already been removed from water, before starting engine a source of water must be supplied to water intake (inlet) openings. Follow all warnings and flushing attachment procedures stated in “Flushing Cooling System”.

CAUTION

DO NOT operate engine without water flowing thru seawater pickup pump, as pump impeller may be damaged and subsequent overheating damage to engine or transmission may result.

1 Start engine and run until it reaches normal operating temperature. Stop engine. Change oil and filter. Start engine and run for about 15 minutes. Check for oil leaks.

WARNING







Do not remove coolant cap when engine is hot - coolant may discharge violently.

IMPORTANT: Closed cooling section must be kept filled year-round with the specified coolant.

IMPORTANT: Do not use Propylene Glycol Antifreeze in the closed cooling section of the engine.

IMPORTANT: Drain seawater section of closed cooling system only.

NOTE: Refer to the following pages for continuation of specific draining instructions.

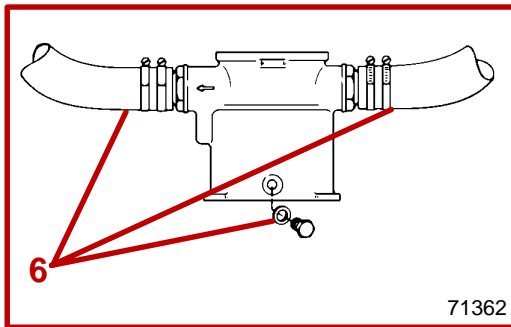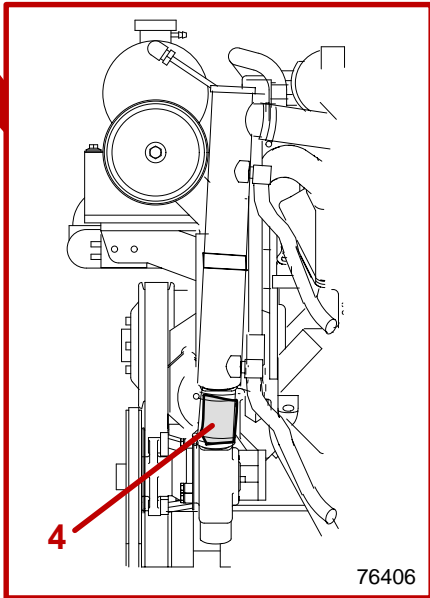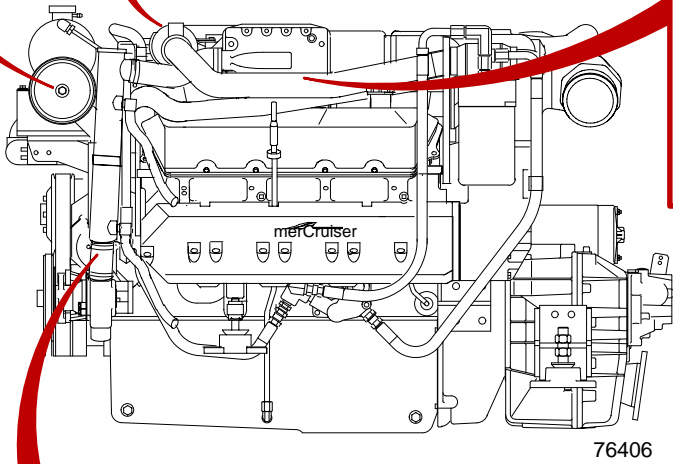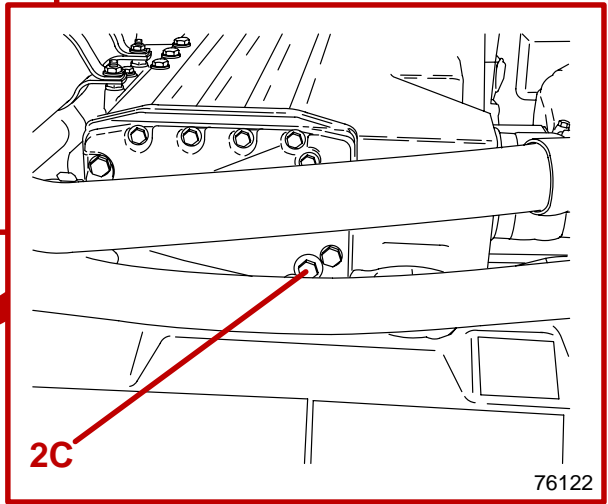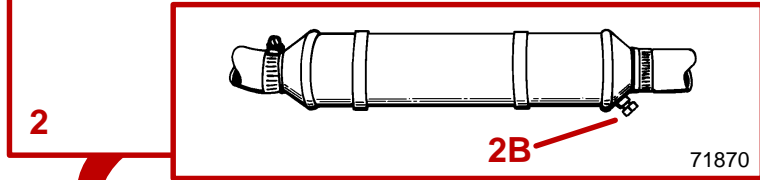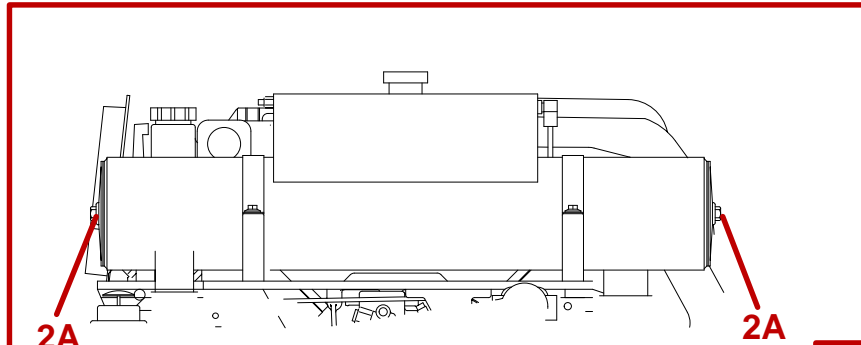

Power Package Layup (Continued)

Drain seawater section of cooling system and prepare for cold weather or extended storage following these procedures:

DRAINING INSTRUCTIONS

⚠ CAUTION

If boat is to remain in the water, seacock, if so equipped, must remain closed until engine is to be restarted to prevent water from flowing back into seawater cooling system. If boat is not fitted with a seacock, water inlet hose must be disconnected and plugged to prevent water from flowing into cooling system and/or boat. As a precautionary measure, attach a tag to the ignition switch or steering wheel with the warning that the seacock must be opened or the water inlet hose reconnected prior to starting the engine.

IMPORTANT: Observe the following information to ensure complete draining of cooling system:

- Engine must be as level as possible.
 - A wire should be repeatedly inserted into all drain holes to ensure there are no obstructions in passages.
- 1 Close seacock, if equipped, or disconnect and plug seawater inlet hose, if boat is to remain in the water.
 - 2 Remove and drain the following:
 - A The end covers from both the port and starboard sides of heat exchanger. Drain tank completely.

IMPORTANT: Use compressed air to blow any remaining water from the tubes in the heat exchanger.

- B The drain plug on the lower side of the engine oil cooler.
- C The aftercooler drain plugs located on the starboard and port aftercooler side covers.


NOTE: Only the port aftercooler side cover is shown. Starboard is similar.

- 3 Repeatedly clean out drain holes using a stiff piece of wire. Do this until entire system is drained.
- 4 Remove seawater pump outlet hose from top of seawater pump and drain.


⚠ CAUTION

Avoid water entering boat. Do not unplug seawater inlet hose unless a seacock is present and it is closed.


- 5 Remove hose(s) at seawater strainer and drain hose(s) completely. Remove drain plug and empty seawater strainer. Reconnect hoses - tighten hose clamps securely. Install drain plug and tighten securely.
- 6 After seawater section of cooling system has been drained completely, coat threads of drain plugs with Perfect Seal and reinstall. Tighten securely. Reconnect hoses. Connect hose to seawater pump outlet (top). Tighten hose clamps securely. Replace end cover gaskets and seals, if worn or deteriorated. Install end cover assemblies on the heat exchanger. Torque the end covers to 120-132 lb-in. (14-15 Nm).

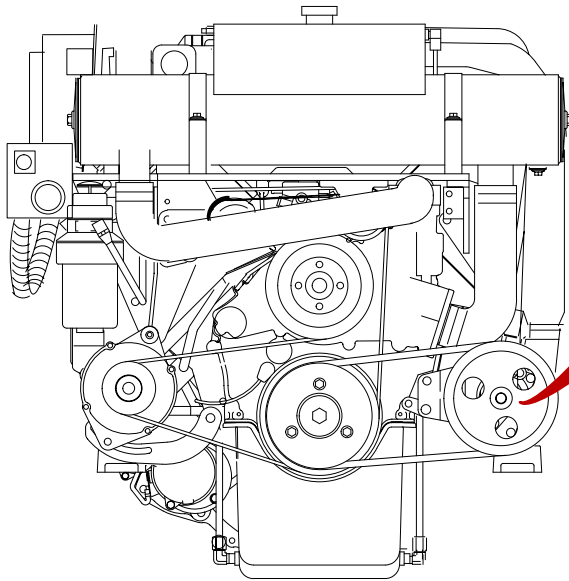

76408

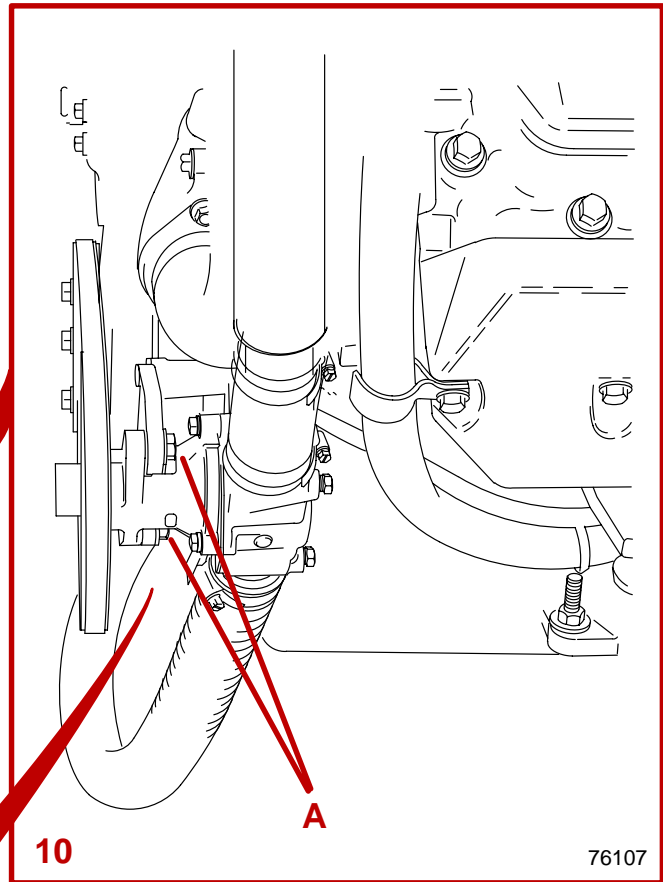

76107

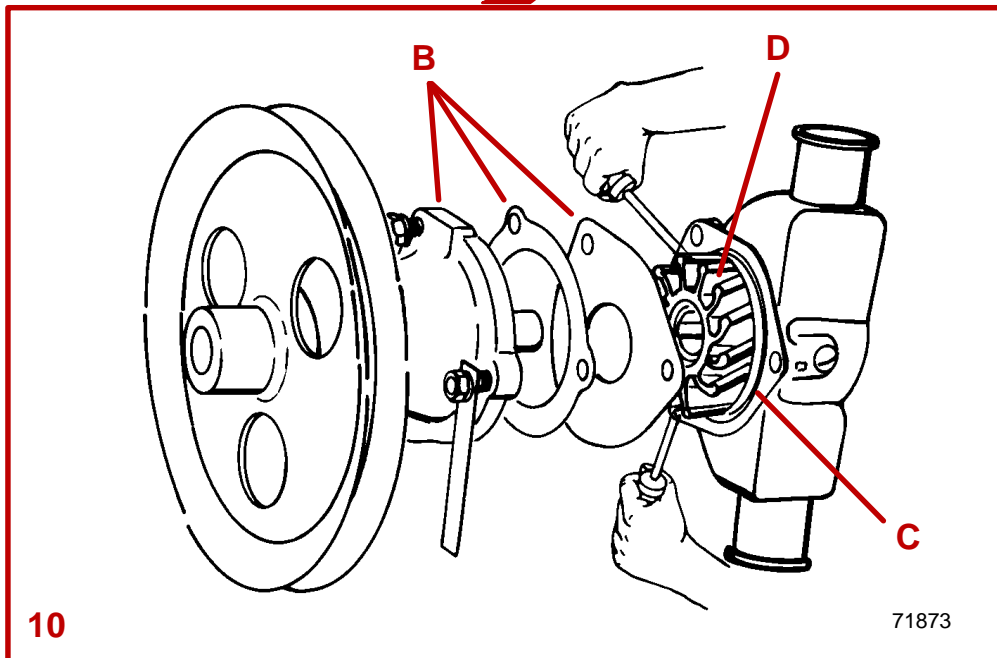

71873

Power Package Layup (Continued)



Dealer should perform these remaining tasks prior to layup:

- 1 After draining, perform all checks, inspections, lubrication and fluid changes outlined in Maintenance Schedules.
- 2 Clean seawater strainer (refer to Maintenance Section).


IMPORTANT: MerCruiser recommends that propylene glycol antifreeze (nontoxic and biodegradable, which makes it friendly to lakes and rivers) be used in seawater section of the cooling system for cold weather or extended storage. Make sure that the propylene glycol antifreeze contains a rust inhibitor and is recommended for use in marine engines. Be certain to follow the propylene glycol manufacturer's recommendations. Also, check local laws about disposal of the antifreeze solution after use.

- 3 Fill a container with approximately 6 U.S. quarts (5-1/2L) of antifreeze and tap water mixed to manufacturer's recommendation to protect engine to the lowest temperature to which it will be exposed during cold weather or extended storage.
- 4 Disconnect hose from seawater inlet side of seawater pump. Connect an appropriate length piece of hose to seawater pump and place the other end of the hose into container of coolant.
- 5 Start engine and run at idle speed until coolant mixture has been pumped into engine seawater system, then stop engine.
- 6 Clean engine and coat with Quicksilver Corrosion Guard.
- 7 Lubricate all cables and linkages.
- 8 Remove and store battery in a cool, dry place. Do not store on a concrete surface, or on the ground. Place on a dry, wood board or a thick plastic base. (Refer to battery manufacturer's instructions.)
- 9 Disconnect seawater inlet hose from seawater pump.
- 10 Remove seawater pump and components as follows:
 - A Remove seawater pump mounting bolt and tensioning bolt. Remove seawater pump.
 - B Make matching marks on pump cover and pump housing prior to disassembly (to aid in reassembly later). Remove the three seawater pump cover mounting screws. Remove cover (with pulley and shaft), gasket, and plate.
 - C Take notice of O-ring, and location of O-ring in groove on housing.
 - D Ease impeller out of pump body with two screwdrivers. Be careful not to damage pump impeller.
- 11 Reassemble seawater pump components, except for the impeller, for storage.

IMPORTANT: Place a CAUTION TAG at instrument panel and in engine compartment stating that "Seawater Pump is Out - DO NOT Operate Engine."

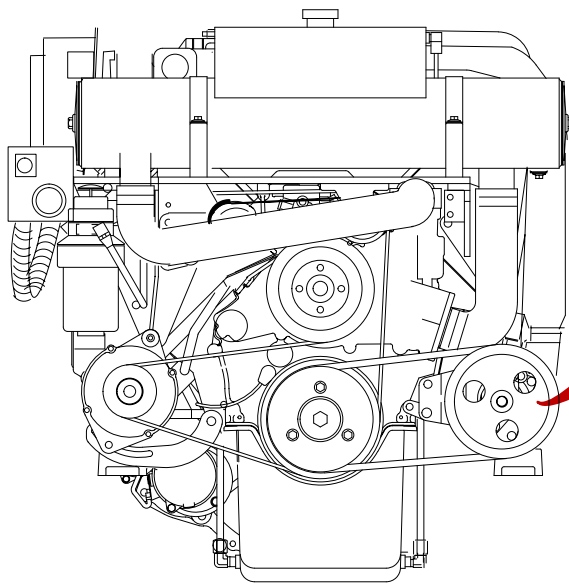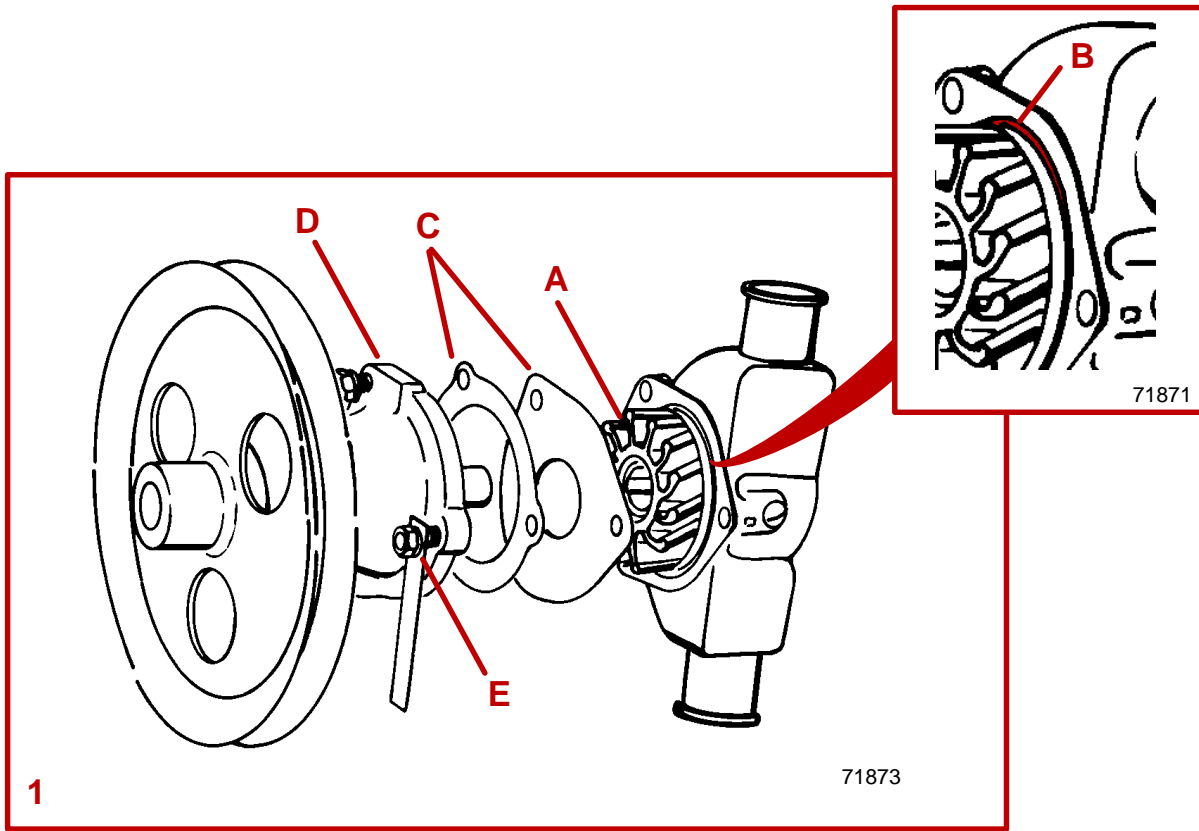

76408

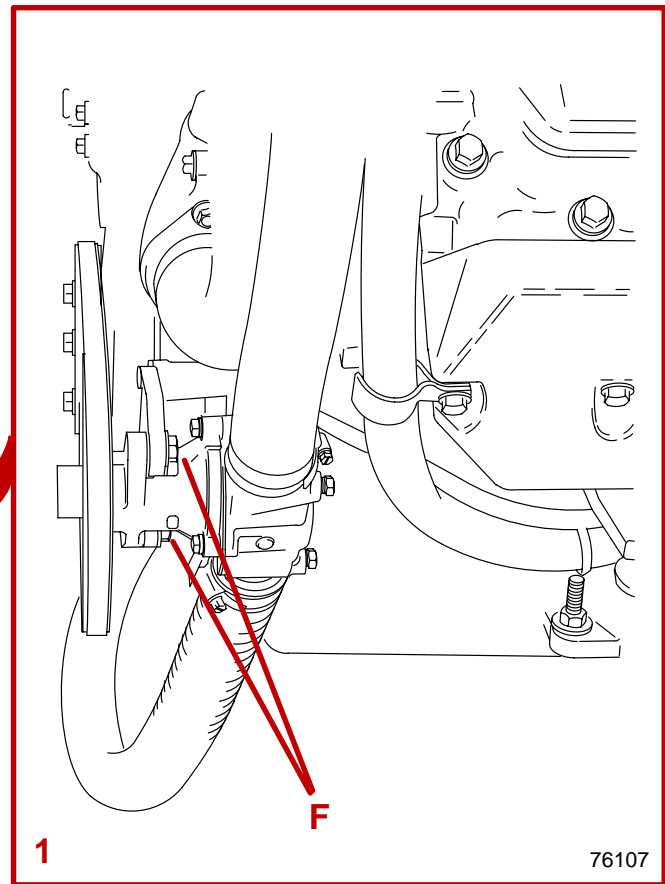

Power Package Recommissioning

IMPORTANT: This service should be performed by an Authorized MerCruiser Dealer.

WARNING

To prevent possible injury or damage to equipment, do not install battery until all maintenance has been performed on engine.

1 Reinstall seawater pump components and pump as follows:

NOTE: Use new gasket and O-ring. Install in correct position.

A Place impeller in pump housing.

B Install new O-ring in groove on housing.

C Install pump plate, with new gasket in position as shown.

D Engage pump shaft key in impeller keyway and install seawater pump cover. Align matching marks made prior to disassembly.

E Install the three seawater pump cover mounting screws. Tighten securely.

F Install pump on engine using mounting bolt and tensioning bolt with hardware. Tension drive belt. Tighten fasteners securely.

2 Check that all cooling system hoses are in good condition, connected properly, and hose clamps are tight.

3 Replace fuel filter.

4 Bleed fuel system (see "Maintenance - Fuel System").

5 Fill up with fresh diesel fuel. Old fuel should not be used. Check fuel lines and connections for leaks and general condition.

CAUTION

When installing battery, be sure to connect **POSITIVE (+) battery cable to POSITIVE (+) battery terminal FIRST**, and **NEGATIVE (-) battery cable to NEGATIVE (-) battery terminal LAST**. If battery cables are reversed, or connection order is reversed, electrical system damage will result.

6 Install fully-charged battery. Clean battery cable clamps and terminals and reconnect cables (see **CAUTION** listed above). Secure each cable clamp when connecting. Coat terminals with a battery terminal anti-corrosion spray to help retard corrosion.

7 Perform all checks on Operation Chart in the Starting Procedure column.

IMPORTANT: Avoid starter motor overheating. **DO NOT engage starter for more than 15 seconds; allow at least one minute cool-down time before re-engaging starter for another 15 seconds.**

8 Start engine and closely observe instrumentation to make sure that all systems are functioning correctly.

9 Carefully inspect engine for fuel, oil, fluid, water and exhaust leaks.

10 Check steering system, shift and throttle control for proper operation.

Troubleshooting

CE417

Starter Motor Will Not Crank Engine, Or Cranks It Very Slowly

Possible Cause	Remedy
<ul style="list-style-type: none"> • Battery switch turned off • Remote control not in neutral position • Open circuit breaker or blown fuse • Loose or dirty electrical connections or damaged wiring • Bad battery • Battery size - incorrect rating 	<ul style="list-style-type: none"> • Turn switch on. • Position control lever in neutral. • Check and reset circuit breaker or replace fuse. • Check all electrical connections and wires (especially battery cables). Clean and tighten faulty connection. • Test and replace if bad. • Replace with properly rated battery.

Engine Will Not Start, Or Is Hard To Start

Possible Cause	Remedy
<ul style="list-style-type: none"> • Battery size - incorrect rating • Improper starting procedure • Empty fuel tank or fuel shutoff valve closed • Faulty fuel pump • Low oil level • Throttle not operating properly • Faulty electrical circuit (Example: Start relay dropping out.) • Clogged fuel filters • Stale or contaminated fuel • Fuel line or tank vent line kinked or clogged • Air in fuel injection system • Glow-plug system inoperative • EDI System Fault 	<ul style="list-style-type: none"> • Replace with properly rated battery. • Read starting procedure. • Fill tank or open valve. • Have pump replaced by an Authorized Mercury Dealer, if fuel is present. • Add oil. • Check throttle for freedom of movement. • Have Authorized Mercury Dealer service electric circuits. (Example: Check start relay ground circuit.) • Replace filters. • If contaminated, drain tank. Fill with fresh fuel. • Replace kinked lines or blow out lines with compressed air to remove obstruction. • Purge fuel injection system. • Test, and repair or replace components. • Have EDI System checked by an Authorized Mercury Dealer.

Engine Runs Rough, Misses And/Or Backfires

Possible Cause	Remedy
<ul style="list-style-type: none">• Throttle not operating properly• Clogged fuel or air filters• Stale or contaminated fuel• Kinked or clogged fuel line or fuel tank vent line• Air in fuel injection system• Engine Oil - Level overfull or wrong viscosity• EDI System Fault	<ul style="list-style-type: none">• Check throttle linkages for binding or an obstruction.• Replace filters.• If contaminated, drain tank. Fill with fresh fuel.• Replace kinked line or blow out line with compressed air to remove obstruction.• Purge fuel injection system.• Correct engine oil level or viscosity problem.• Have EDI System checked by an Authorized Mercury MerCruiser Dealer.

Poor Performance

Possible Cause	Remedy
<ul style="list-style-type: none">• Throttle not fully open• Damaged or improper propeller• Excessive bilge water• Boat overloaded or load improperly distributed• Boat bottom fouled or damaged• EDI System Fault	<ul style="list-style-type: none">• Inspect throttle cable and linkages for operation.• Replace.• Drain and check for cause of entry.• Reduce load or redistribute load more evenly.• Clean or repair as necessary.• Have EDI System checked by an Authorized Mercury MerCruiser Dealer.

Excessive Engine Temperature

Possible Cause	Remedy
<ul style="list-style-type: none">• Seacock closed, if so equipped• Drive belt loose or in poor condition• Seawater pickups obstructed• Faulty thermostat• Coolant level low in closed cooling section• Heat exchanger cores plugged with foreign material• Loss of pressure in closed cooling section• Closed cooling section dirty• Faulty seawater pickup pump• Seawater discharge restricted or plugged• Seawater inlet hose kinked (restricted)• Use of improperly designed hose on inlet side of seawater pump allowing it to collapse• Excessive exhaust back pressure	<ul style="list-style-type: none">• Open.• Replace and/or adjust belt.• Remove obstruction.• Replace.• Check for cause of low coolant level and repair. Fill system with proper coolant solution.• Clean seawater side of water/water heat exchanger, and seawater strainer.• Check for leaks. Clean, inspect and test pressure cap.• Clean and flush.• Repair.• Clean exhaust elbow.• Position hose to prevent kinking (restriction).• Replace hose with wire reinforced design.• Check exhaust system for obstruction or damage

Insufficient Engine Temperature

Possible Cause	Remedy
<ul style="list-style-type: none">• Faulty thermostat	<ul style="list-style-type: none">• Replace.

Low Engine Oil Pressure

Possible Cause	Remedy
<ul style="list-style-type: none">• Insufficient oil in crankcase• Excessive oil in crankcase (causing it to become aerated)• Diluted or improper viscosity oil	<ul style="list-style-type: none">• Check and add oil.• Check and remove required amount of oil. Check for cause of excessive oil (improper filling, bad fuel pump, etc.).• Change oil and oil filter, using correct grade and viscosity oil. Determine cause for dilution (excessive idling, faulty fuel pump, etc.).

Battery Will Not Come Up On Charge

Possible Cause	Remedy
<ul style="list-style-type: none">• Excessive current draw from battery• Loose or dirty electrical connections or damaged wiring• Alternator drive belt loose or in poor condition• Unacceptable battery condition	<ul style="list-style-type: none">• Turn off non-essential accessories.• Check all associated electrical connections and wires (especially battery cables). Clean and tighten faulty connections. Repair or replace damaged wiring.• Replace and/or adjust.• Test battery.

Remote Control Operates Hard, Binds, Has Excessive Free-play Or Makes Unusual Sounds

Possible Cause	Remedy
<ul style="list-style-type: none">• Insufficient lubrication on shift and throttle linkage fasteners• Loose or missing shift and throttle linkage fasteners• Obstruction in shift or throttle linkages• Shift or throttle cable kinked• Improper shift cable adjustment.	<ul style="list-style-type: none">• Lubricate.• Check all linkages. If any are loose or missing, see Authorized MerCruiser Dealer immediately.• Remove obstruction.• Straighten cable, or have dealer replace cable if damaged beyond repair.• See Authorized MerCruiser Dealer immediately for shift cable adjustment.

Owner Service Assistance

Local Repair Service

Always return your MerCruiser powered boat to your local Authorized Dealer, should the need for service arise. Only he has the factory trained mechanics, knowledge, special tools and equipment and the genuine Quicksilver parts and accessories* to properly service your engine should the need occur. He knows your engine best.

* Quicksilver parts and accessories are engineered and built by Mercury Marine, specifically for MerCruiser® sterndrives and inboards.

Service Away From Home

If you are away from your local dealer and the need arises for service, contact the nearest Authorized Dealer. Refer to the Yellow Pages of the telephone directory. If, for any reason, you cannot obtain service, contact the nearest Regional Service Center. Outside the United States and Canada, contact the nearest Marine Power International Service Center.

Parts And Accessories Inquiries

All inquiries concerning Quicksilver replacement parts and accessories should be directed to your local Authorized Dealer. The dealer has the necessary information to order parts and accessories for you should he not have them in stock. Only Authorized Dealers can purchase genuine Quicksilver parts and accessories from the factory. Mercury Marine does not sell to unauthorized dealers or retail customers. When inquiring on parts and accessories, the dealer requires the **motor model** and **serial number(s)** to order the correct parts.

CB577

Resolving A Problem



Satisfaction with your MerCruiser product is very important to your dealer and to us. If you ever have a problem, question or concern about your power package, contact your dealer or any Authorized MerCruiser Dealership. If additional assistance is required, take these steps.

1 *Talk with the dealership's sales manager or service manager. If this has already been done, then contact the owner of the dealership.*

2 *Should you have a question, concern or problem that cannot be resolved by your dealership, please contact Mercury Marine Service Office for assistance. Mercury Marine will work with you and your dealership to resolve all problems.*

The following information will be needed by the service office:

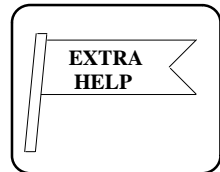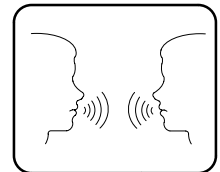


- Your name and address
- Daytime telephone number
- Model and serial number for your power package
- The name and address of your dealership
- Nature of problem



Mercury Marine Service Offices are listed on the next page.

Mercury Marine Service Offices

 For assistance, call, fax, or write. Please include your daytime telephone number with mail and fax correspondence.

Telephone 	Fax 	Mail 
United States		
(405) 743-6566	(405) 743-6570	MerCruiser 3003 N. Perkins Rd. Stillwater, OK 74075
Canada		
(905) 567-MERC (6372)	(905) 567-8515	Mercury Marine Ltd. 2395 Meadowpine Blvd. Mississauga, Ontario Canada L5N 7W6
Australia, Pacific		
(61) (3) 791-5822	(61) (3) 793-5880	Mercury Marine Australia 132-140 Frankston Road Dandenong, Victoria 3164 Australia
Europe, Middle East, Africa		
(32) (87) 32 • 32 • 11	(32) (87) 31 • 19 • 65	Marine Power - Europe, Inc. Parc Industriel de Petit-Rechain B-4800 Verviers Belgium
Mexico, Central America, South America, Caribbean		
(305) 385-9585	(305) 385-5507	Mercury Marine - Latin America & Caribbean 9010 S.W. 137th Ave. Suite 226 Miami, FL 33186 U.S.A.
Japan		
(81) 543/34-2500	(81) 543/34-2022	Mercury Marine - Japan No. 27-2 Muramatsu Chisaki-Shinden Shimizu City Shizuoka Prefecture Japan 424
Asia, Singapore		
5466160	5467789	Mercury Marine Singapore 72 Loyang Way Singapore 508762

Customer Service Literature

English Language

English language publications are available from:

Mercury Marine
Attn: Publications Department
W6250 West Pioneer Road
P.O. Box 1939
Fond du Lac, WI 54936-1939

Outside the United States and Canada, contact the nearest Mercury Marine or Marine Power International Service Center for further information.

When ordering be sure to:

1. List your product, model, year and serial number(s).
2. Check the literature and quantities you want.
3. Enclose full remittance in check or money order (NO C.O.D.'s).

CA781

Other Languages

To obtain an Operation, Maintenance and Warranty Manual in another language, contact the nearest Mercury Marine or Marine Power International Service Center for information. A list of part numbers for other languages is provided with your power package.

caa781

Andre sprog

Kontakt det nærmeste Mercury Marine eller Marine Power International servicecenter for oplysninger om hvordan du kan anskaffe en Betjenings- og vedligeholdelsesmanual på et andet sprog. En liste med reservedelsnumre for andre sprog leveres sammen med din power-pakke.

cab781

Andere talen

Voor het verkrijgen van een Handleiding voor gebruik en onderhoud in andere talen dient u contact op te nemen met het dichtstbijzijnde internationale servicecentrum van Mercury Marine of Marine Power voor informatie hierover. Een lijst met onderdeelnummers voor andere talen wordt bij uw motorinstallatie geleverd.

cac781

Muut kielet

Saadaksesi Käyttö- ja huolto-ohjekirjoja muilla kielillä, ota yhteys lähimpään Mercury Marine tai Marine Power International huoltokeskukseen, josta saat lähempiä tietoja. Moottorisi mukana seuraa monikielinen varaosanumeroluettelo.

cad781

Autres langues

Pour obtenir un Manuel d'utilisation et d'entretien dans une autre langue, contactez le centre de service après-vente international Mercury Marine ou Marine Power le plus proche pour toute information. Une liste des numéros de pièces en d'autres langues accompagne votre bloc-moteur.

Andere Sprachen

Um eine Betriebs- und Wartungsanleitung in einer anderen Sprache zu erhalten, wenden Sie sich an das nächste Mercury Marine oder Marine Power International Service Center. Eine Liste mit Teilenummern für Fremdsprachen ist im Lieferumfang Ihres Motors enthalten.

caf781

Altre lingue

Per ottenere il manuale di funzionamento e manutenzione in altra lingua, contattate il centro assistenza internazionale Mercury Marine o Marine Power più vicino. In dotazione con il gruppo motore, viene fornito l'elenco dei codici prodotto dei componenti venduti all'estero.

cag781

Andre språk

Ytterligere informasjon om bruks- og vedlikeholdshåndbok på andre språk kan fås ved henvendelse til nærmeste internasjonale servicecenter for Mercury Marine eller Marine Power. En liste over delenumre for andre språk følger med aggregatet.

cah781

Outros Idiomas

Para obter um Manual de Operação e Manutenção em outro idioma, contate o Centro de Serviço Internacional de "Marine Power" (Potência Marinha) ou a Mercury Marine mais próxima para obter informações. Uma lista de números de referência para outros idiomas é fornecida com o seu pacote de propulsão.

caj781

Otros idiomas

Para obtener un Manual de operación y mantenimiento en otro idioma, póngase en contacto con el centro de servicio más cercano de Mercury Marine o Marine Power International para recibir información. Con su conjunto motriz se entrega una lista de los números de pieza para los otros idiomas.

cak781

Andra språk

För att få Instruktions- och underhållsböcker på andra språk, kontakta närmaste Mercury Marine eller Marine Power International servicecenter, som kan ge ytterligare information. En förteckning över artikelnummer på andra språk medföljer ditt kraftpaket.

CAm781

Άλλες γλώσσες

Για να αποκτήσετε ένα Εγχειρίδιο Λειτουργίας και Συντήρησης σε άλλη γλώσσα, επικοινωνήστε με το πλησιέστερο Διεθνές Κέντρο Σέρβις της Mercury Marine ή της Marine Power για πληροφορίες. Το πακέτο ισχύος σας συνοδεύεται από έναν κατάλογο αριθμών παραγγελίας για άλλες γλώσσες.

Ordering Literature


 

Before ordering literature, please have the following information about your power package available:

Model _____ Horsepower _____
 Serial Number _____ Year _____

United States and Canada

For information on additional literature that is available for your particular MerCruiser power package and how to order that literature contact your nearest dealer or contact:

Mercury Marine

Telephone 	Fax 	Mail 
(920) 929-5110	(920) 929-4894	Mercury Marine Attn: Publications Department P.O. Box 1939 Fond du Lac, WI 54936-1939

Outside The United States and Canada

Contact your nearest dealer or Marine Power Service Center for information on additional literature that is available for your particular MerCruiser power package and how to order that literature.

Owner's Logbook

Date	Maintenance and Repair	Operating Hours